 
 
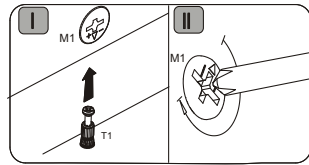 
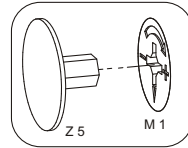 
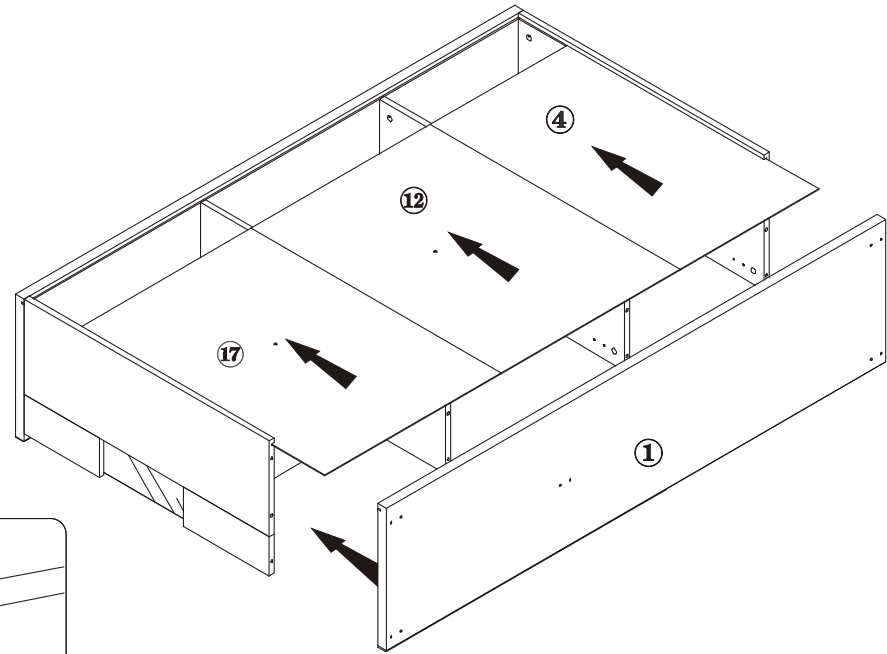 
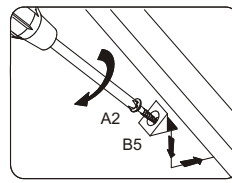 
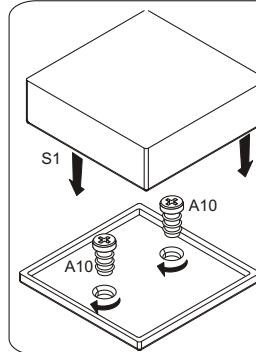 
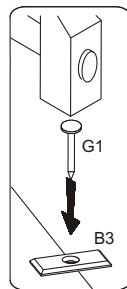 










# 4

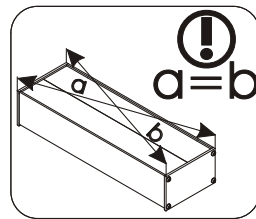

# 5

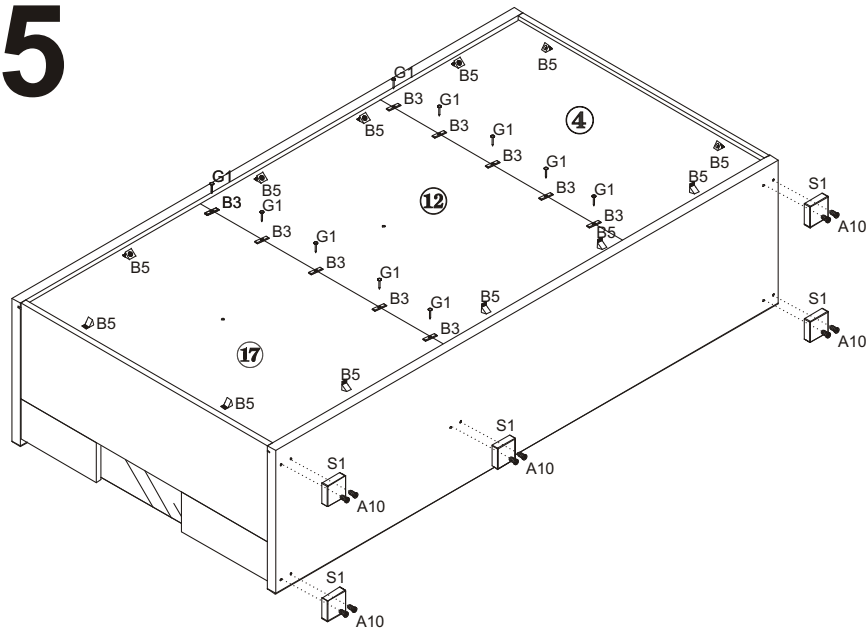

        
# 6

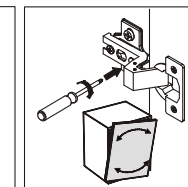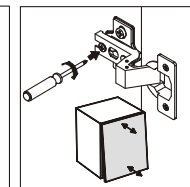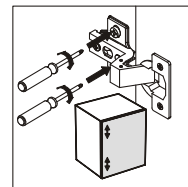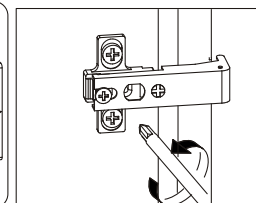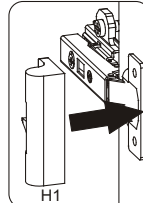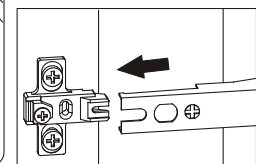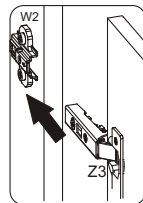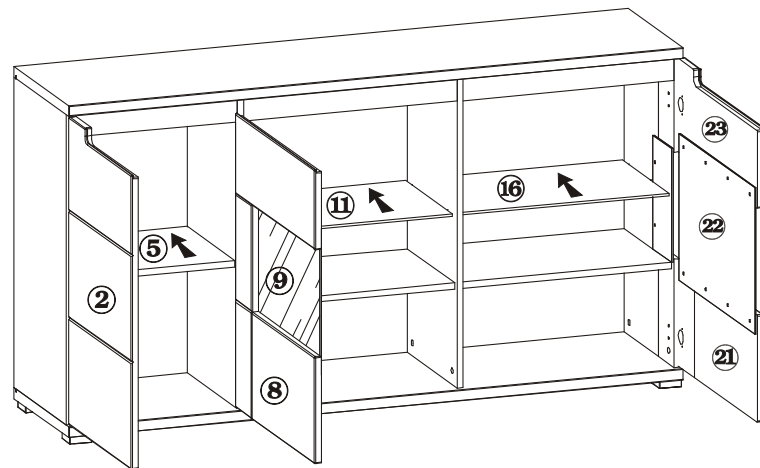



# DENIS

# DS4

 - (D)** Montageanleitung
- (GB)** Assembly instructions
- (ES)** Instrucciones de instalación
- (FR)** Instructions de montage
- (CZ)** Montážní návod
- (PL)** Instrukcja montażu
- (HU)** Összeszerelési útmutató
- (SK)** Montážny návod
- (RU)** Инструкции по монтажу
- (IT)** Istruzioni di montaggio
- (RO)** Instrucțiuni de asamblare
- (TR)** Montaj talimatı
- (NL)** Handleiding voor de montage


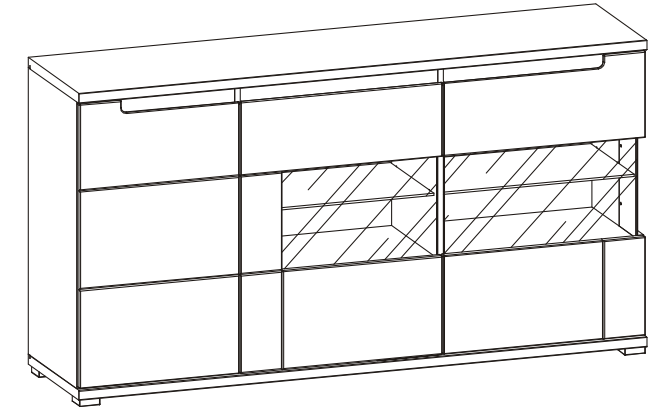


1620x400x870

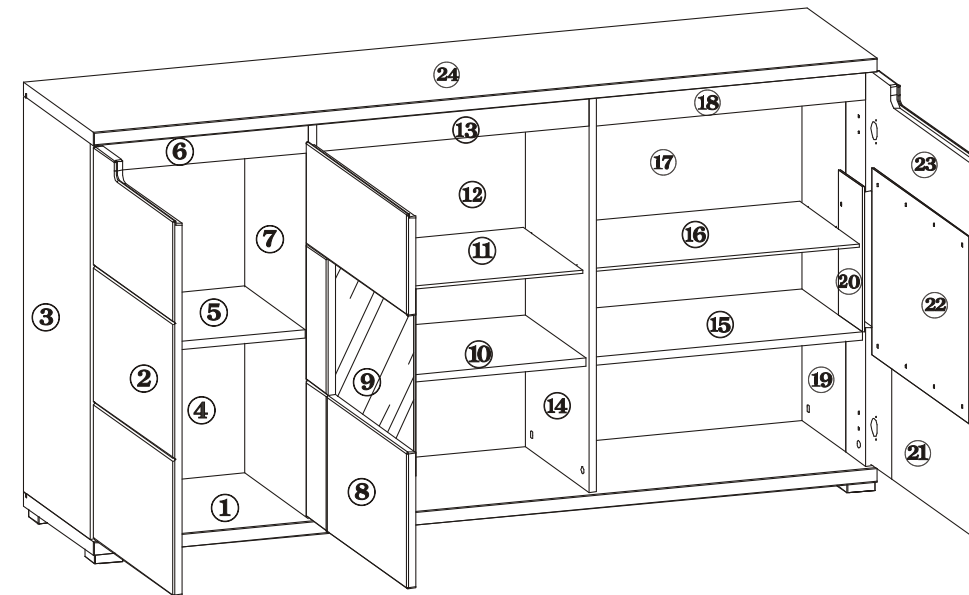 
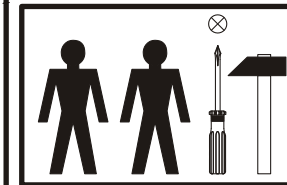 


Lp.	A	25	
12	809x579	24	1618x400
11	555x340	23	576x240
10	563x346	22	374x550
9	374x486	21	576x274
8	576x753	20	292x134
7	794x362	19	794x378
6	435x60	18	555x60
5	434x346	17	809x570
4	809x450	16	547x340
3	794x378	15	555x346
2	456x788	14	794x362
1	1618x400	13	563x60

4x B4	2x LED L1	12x B3	17x P3	4x 8x55 K2	2x Z2	8x C1		
12x G1	3x H1	17x 4x16 A9	8x C2	12x 8x30 K1	12x B5	8x B1	10x 6,3x12 A10	16x Z5
12x 3,5x16 A3	12x 3x20 A2	6x W2	4x #0 Z3	6x O1	16x M1	16x T1	5x S1	1x Z1

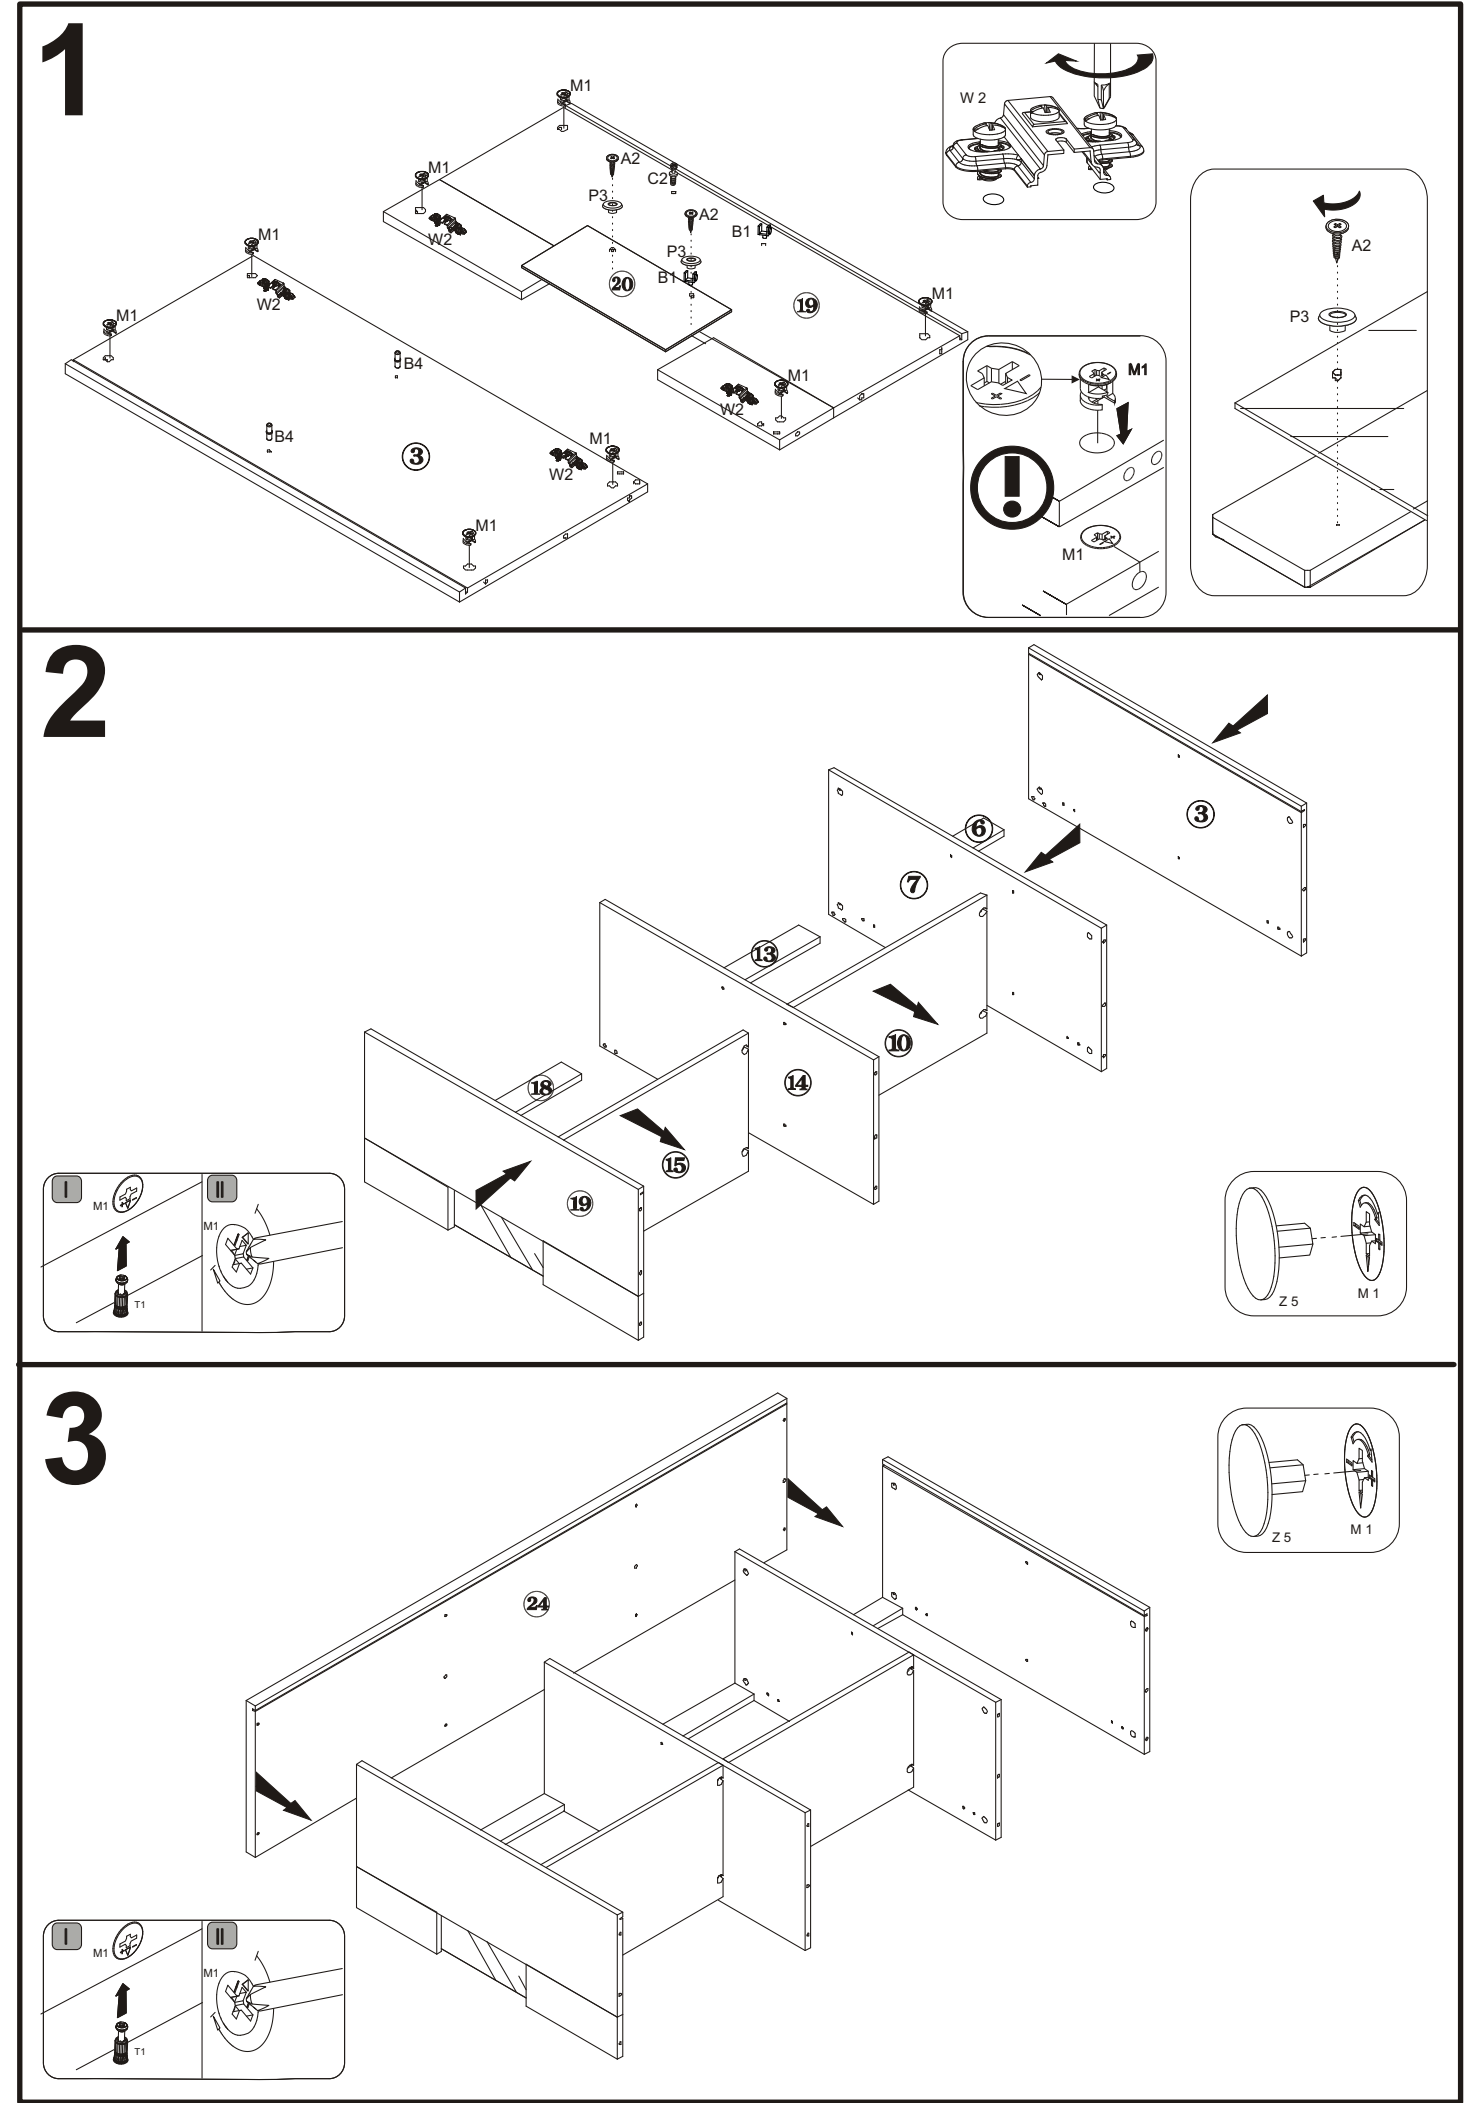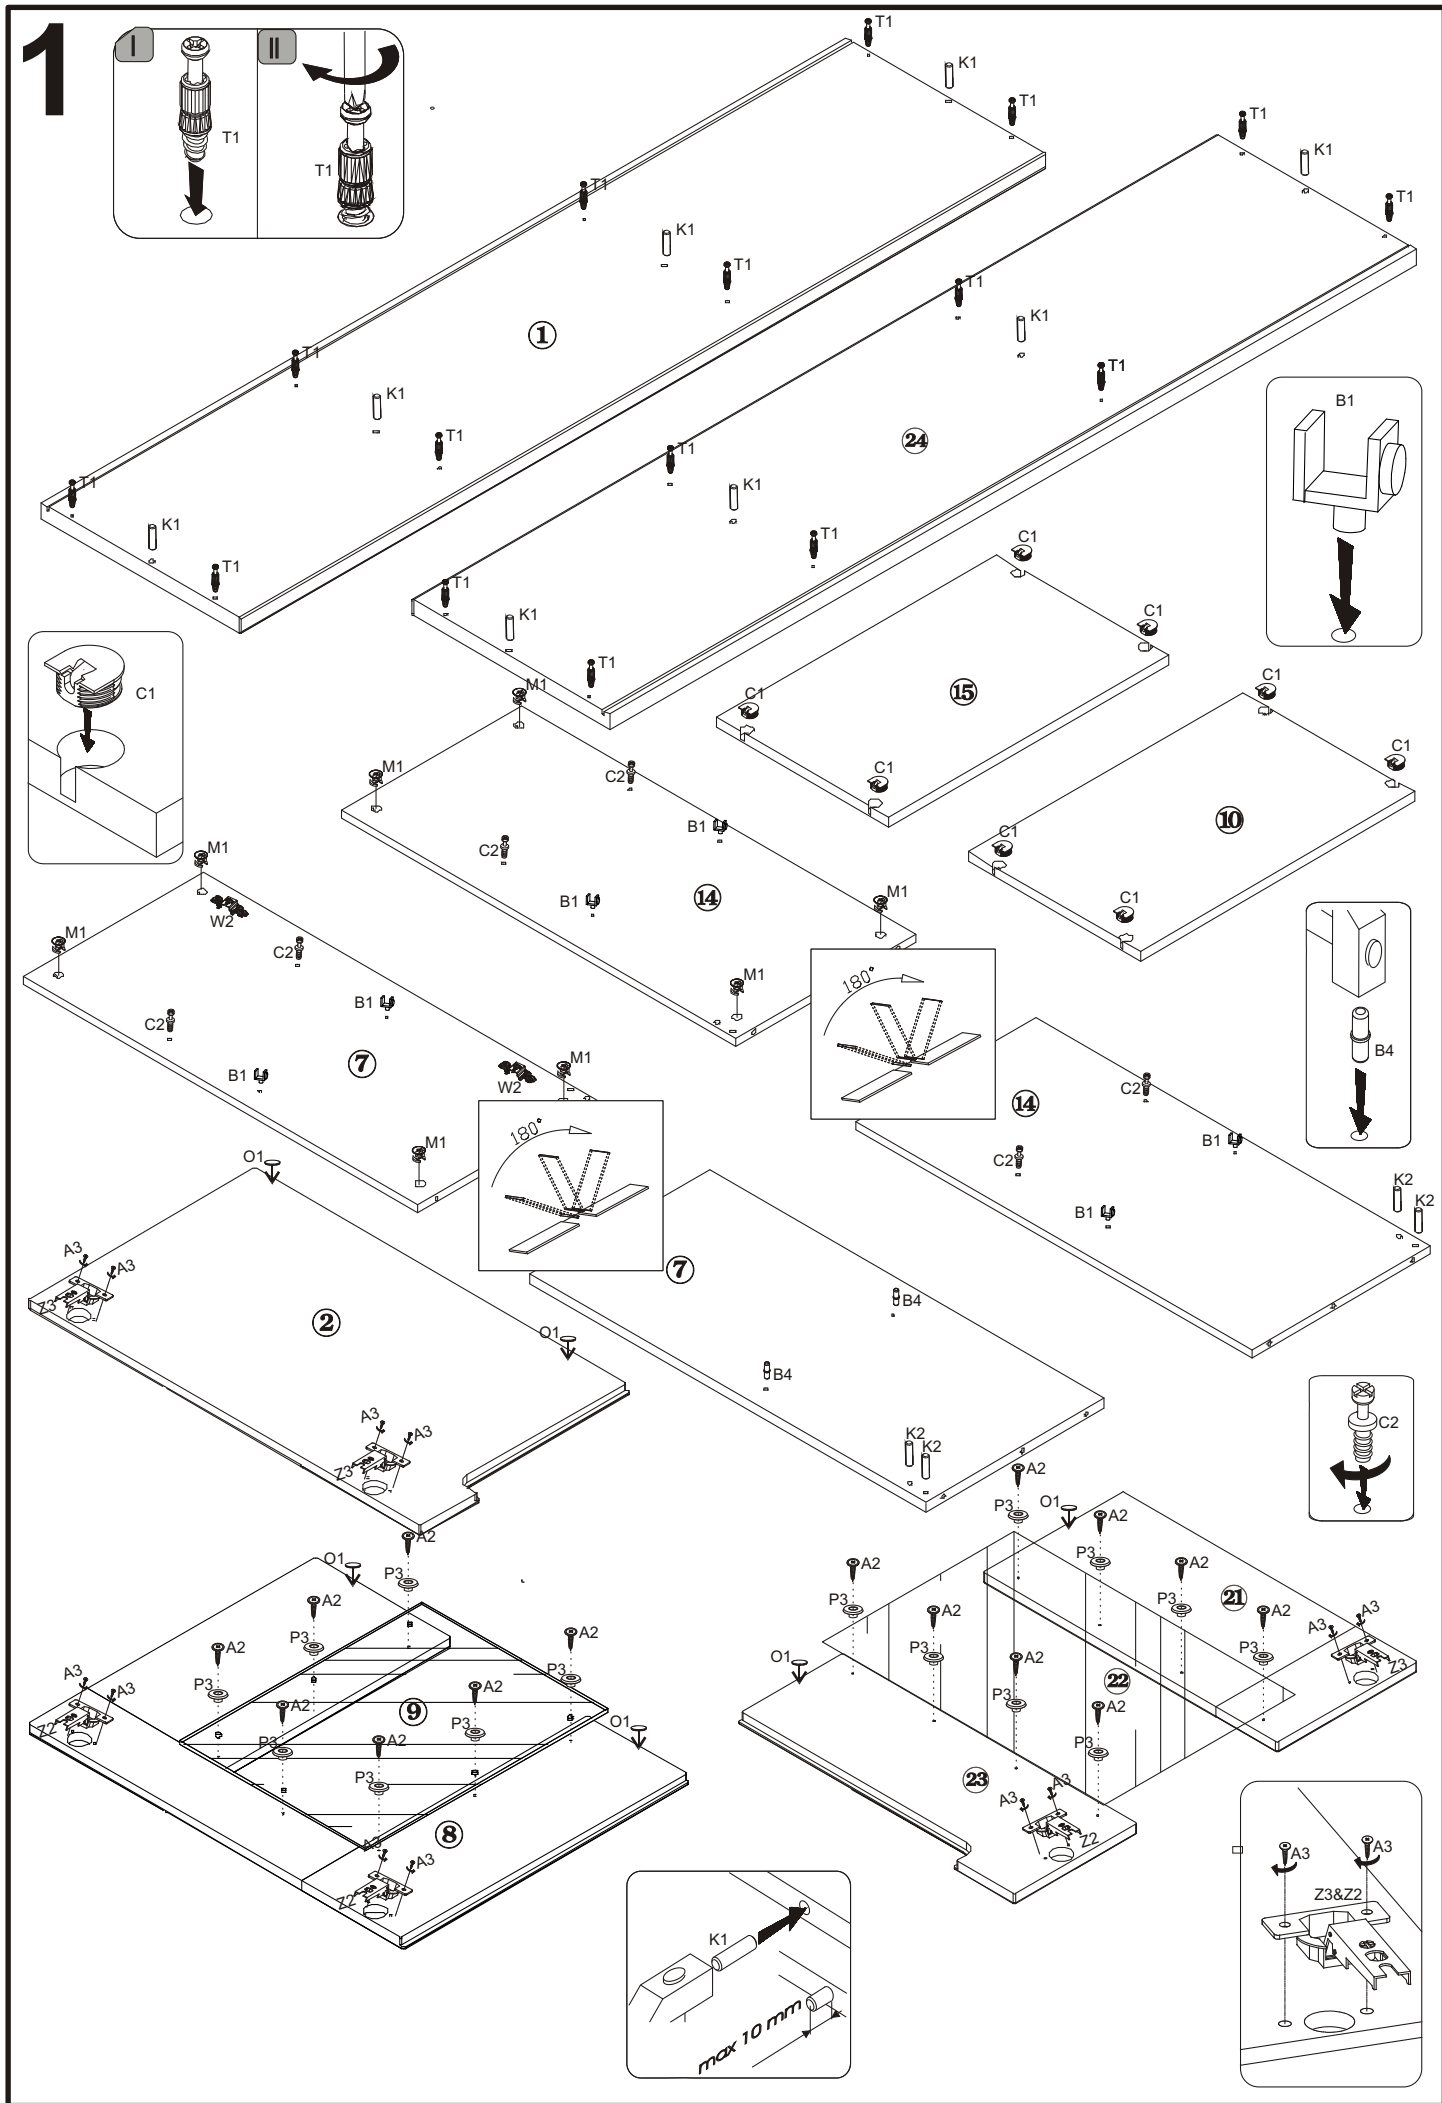  

# 2

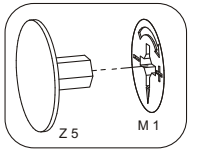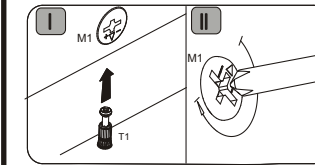  

# 3

