 
 
 
 


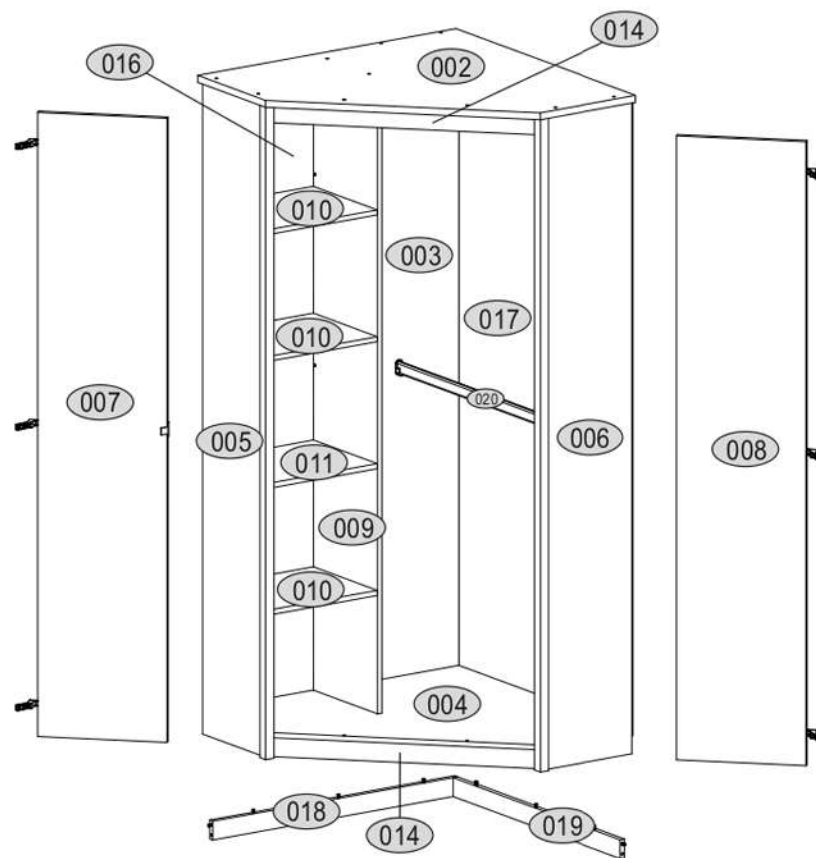

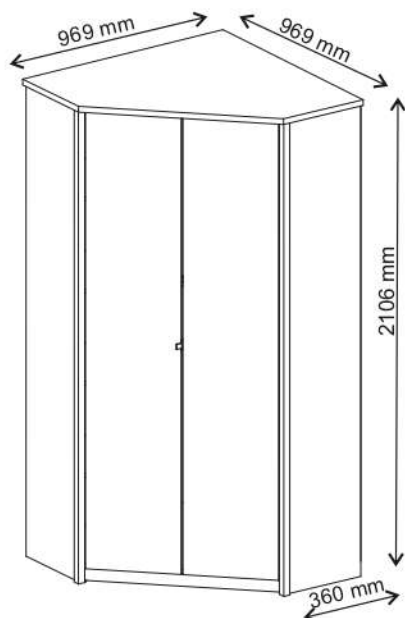

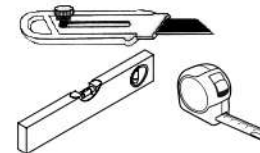

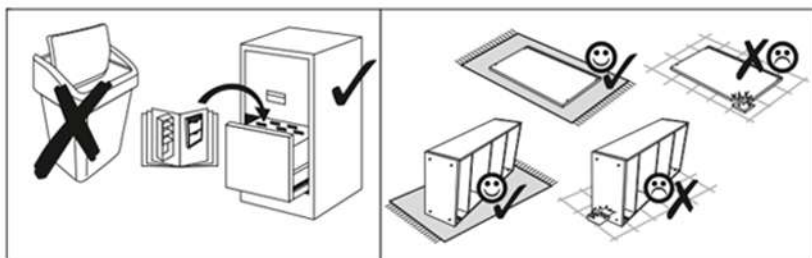






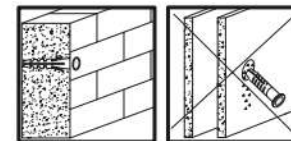 
ERODIN 2D






KÓD	ROZMER			BALÍK	
	1	2	3	1	2
002	969	969	22	1	3/3
003	2002	519	16	1	1/3
004	935	935	16	1	3/3
005	2078	360	16/32	1	2/3
006	2078	360	16/32	1	2/3
007	1987	404	16	1	2/3
008	1987	404	16	1	2/3
009	2002	344	16	1	1/3
010	400	342	16	3	1/3
011	400	342	16	1	1/3
014	847	60	16	2	1/3
016	2032	419	3	1	1/3
017	2032	472	3	2	1/3
018	919	60	16	1	1/3
019	903	60	16	1	1/3
020	914			2	1/3
PRÍSLUŠENSTVO				1	1/3




x12 e1 Ø7x50 mm 	x10 e27 Ø7x70 mm 	x7 s1 	x8 r1 Ø15x12 mm 
x8 r16 	x2 s2 	x33 f1 Ø8x30 mm 	x2 e3 Ø6x13 mm 
x22 p25 Ø3.5x16 mm 	x6 a16 	x6 b6 	x1 c2z200 
x4 n301 	x12 d1 	x10 k1 	x60 l1 
x1 p17 Ø 6x60 mm 	x1 n14 	x1 f3 Ø10x50 mm 	x1 z1 



   
POZOR! Nábytok musí byť trvalo pripevnený k stene tak, aby sa zamedzilo riziku prevrátenia. Balík neobsahuje upevňovacie skrutky, pretože typ upevnenia je treba vybrať podľa typu steny. Vyberte typ vhodný pre Vašu stenu.

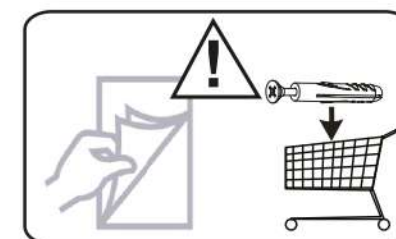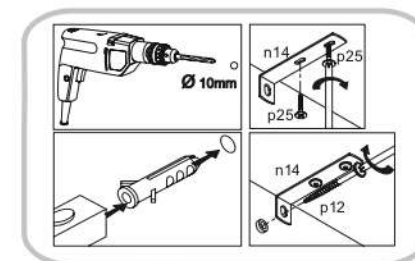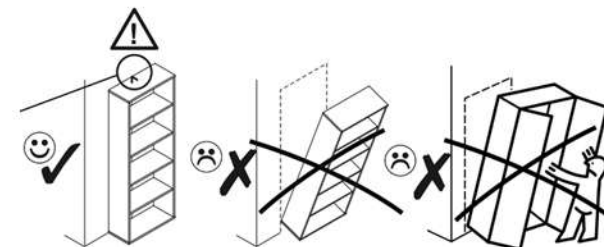


1

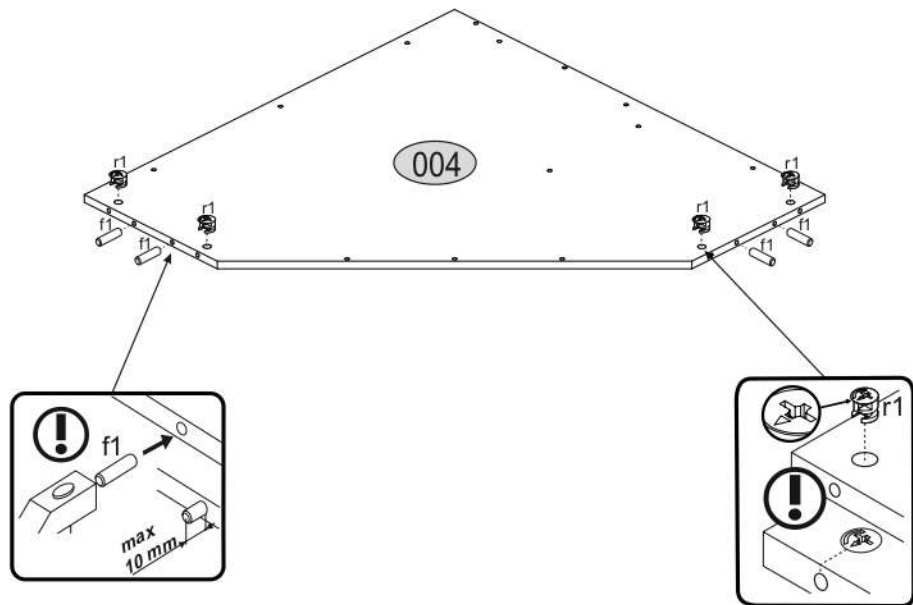 


2

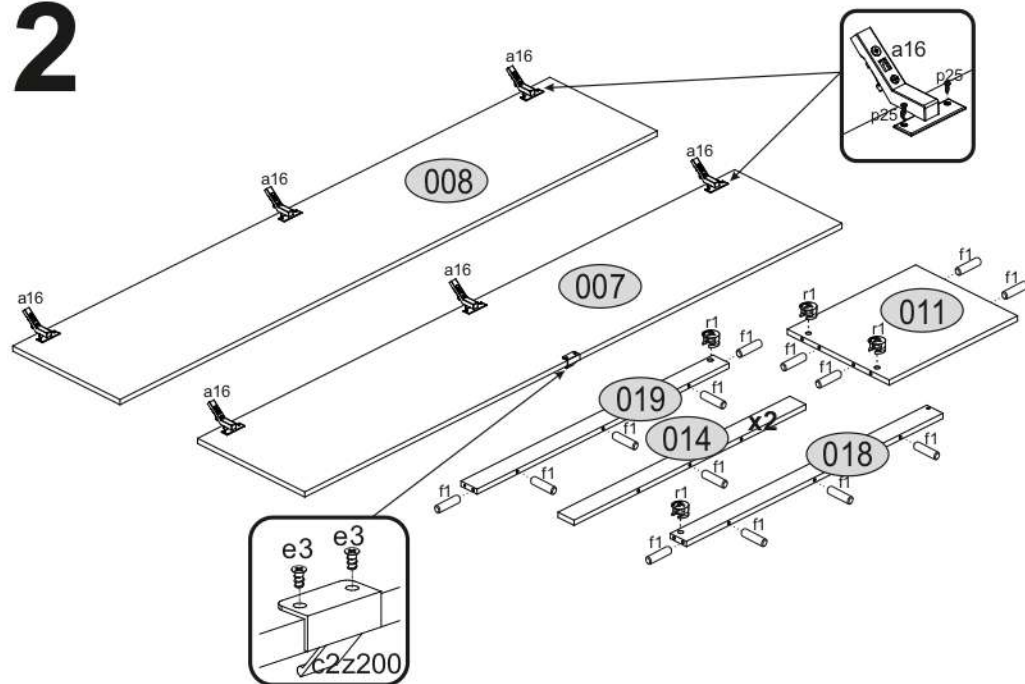 


3

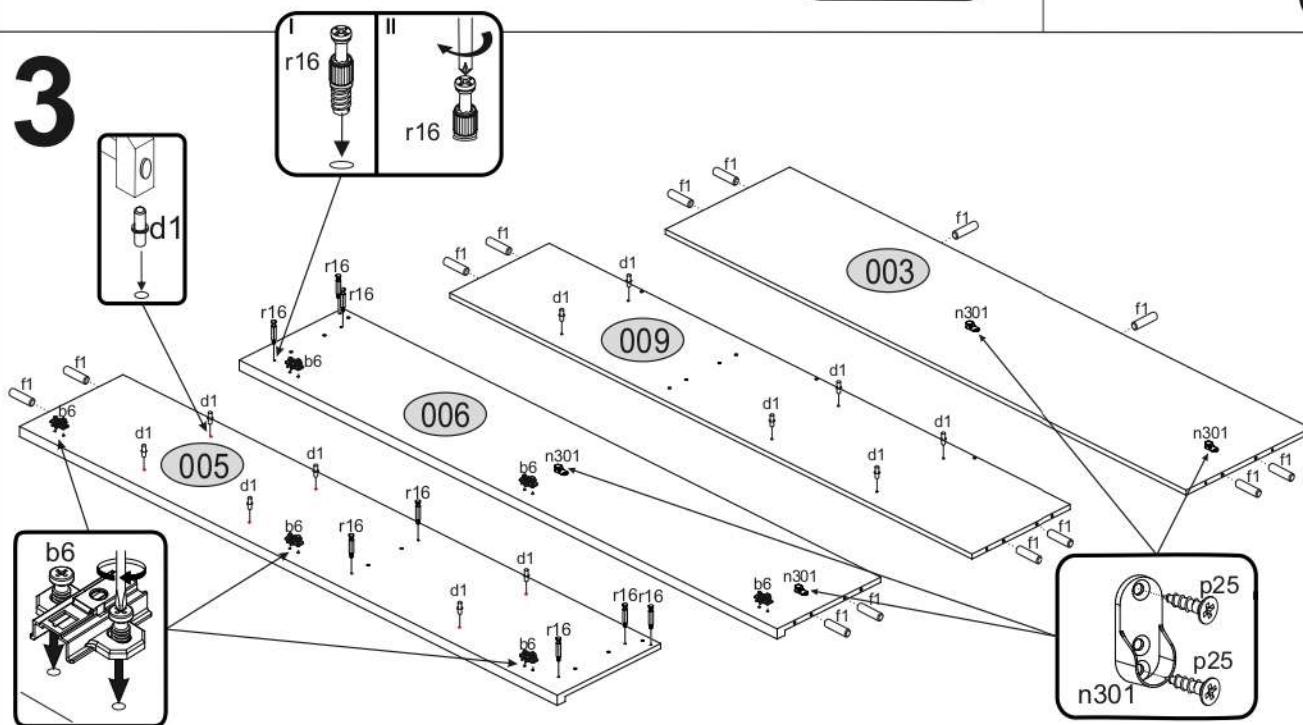 


4

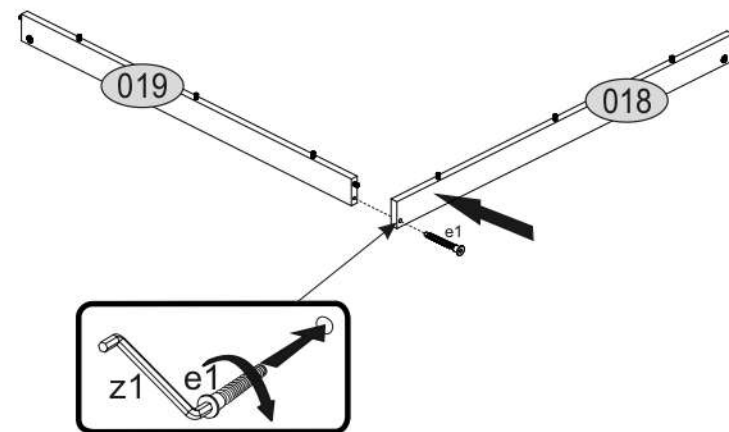 


5

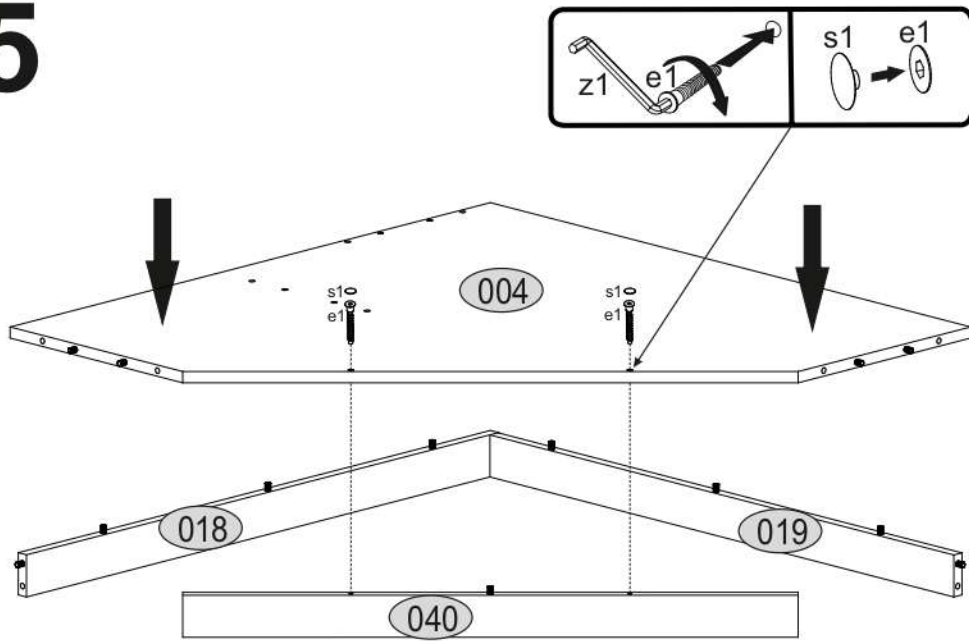 


6

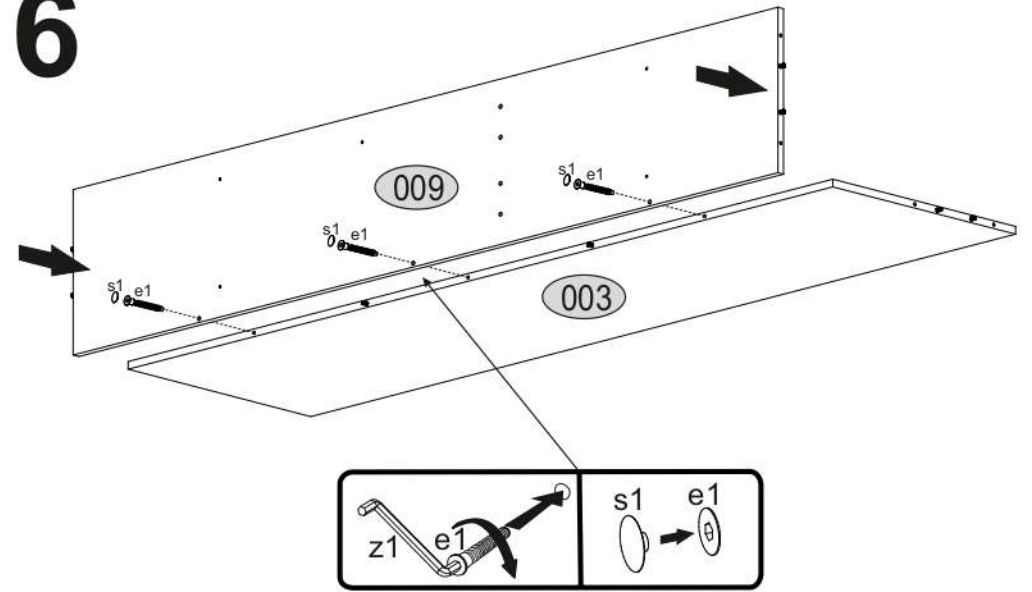 


7

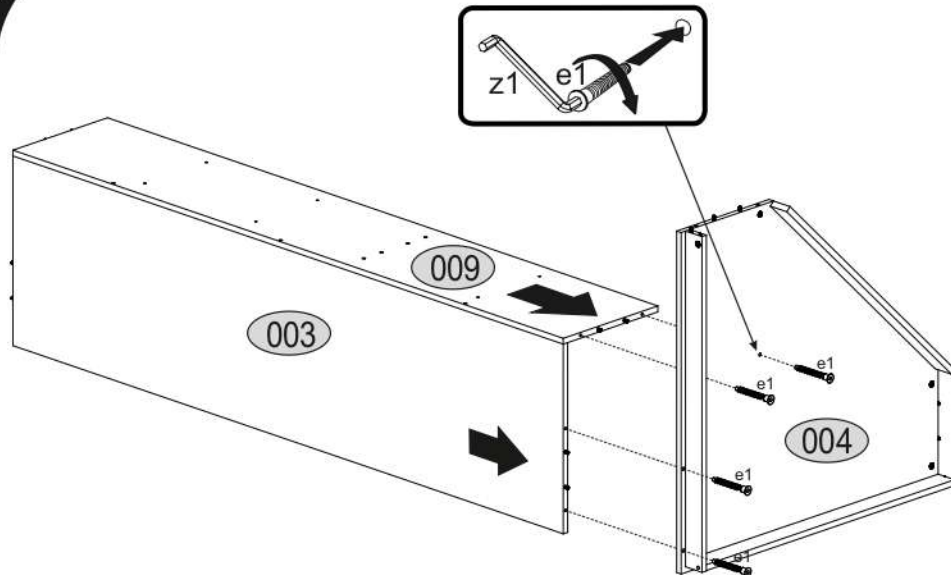 


8

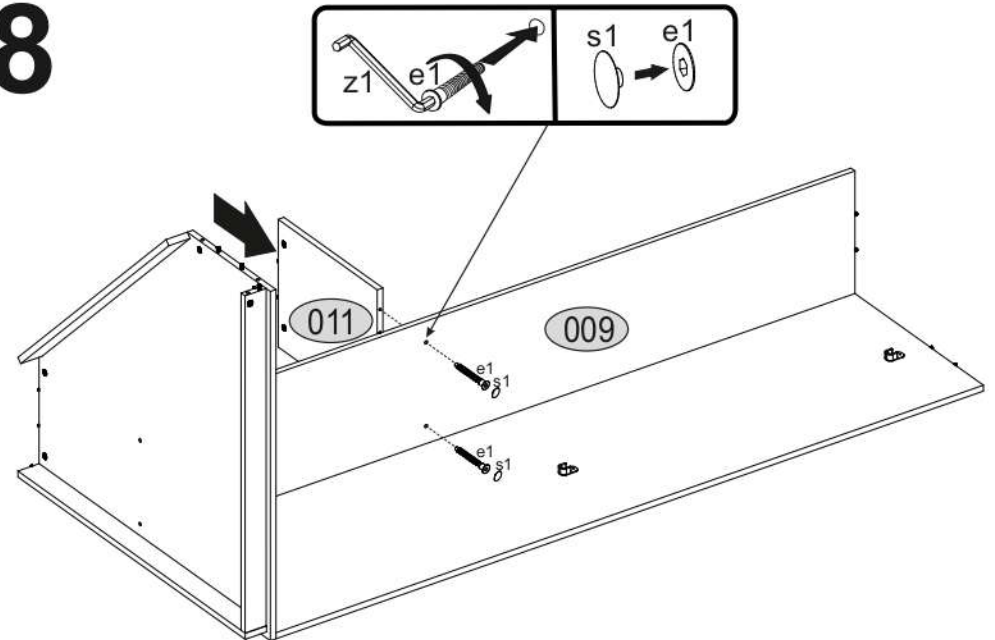 


9

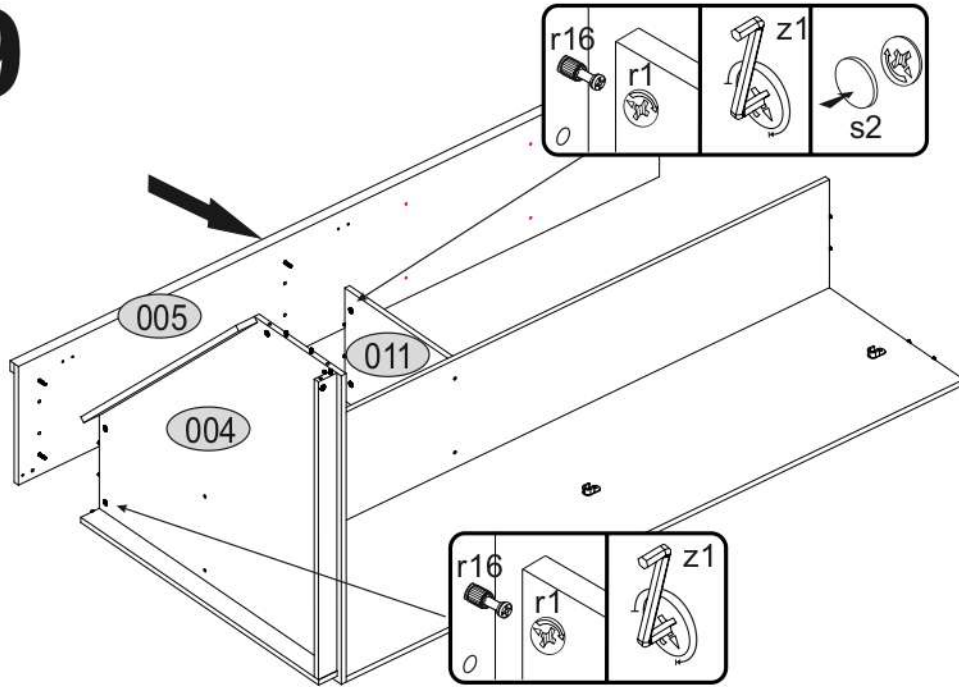 



10

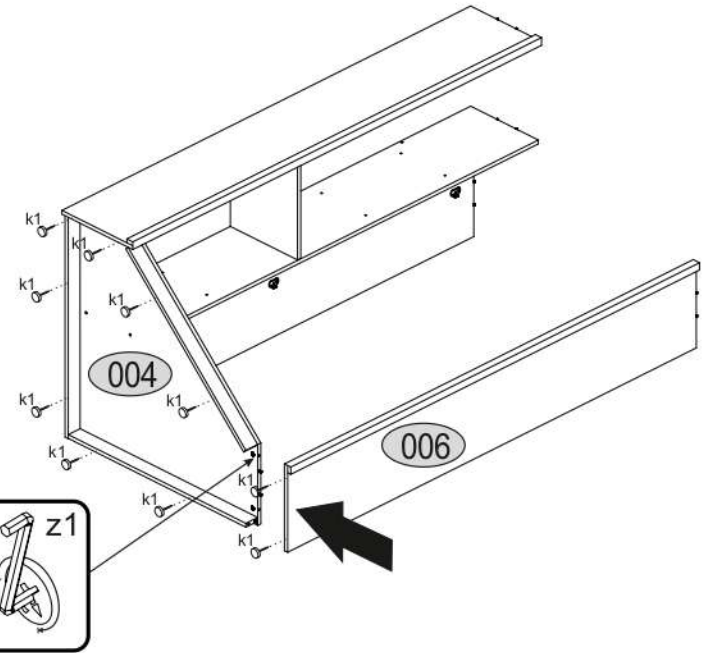 





11

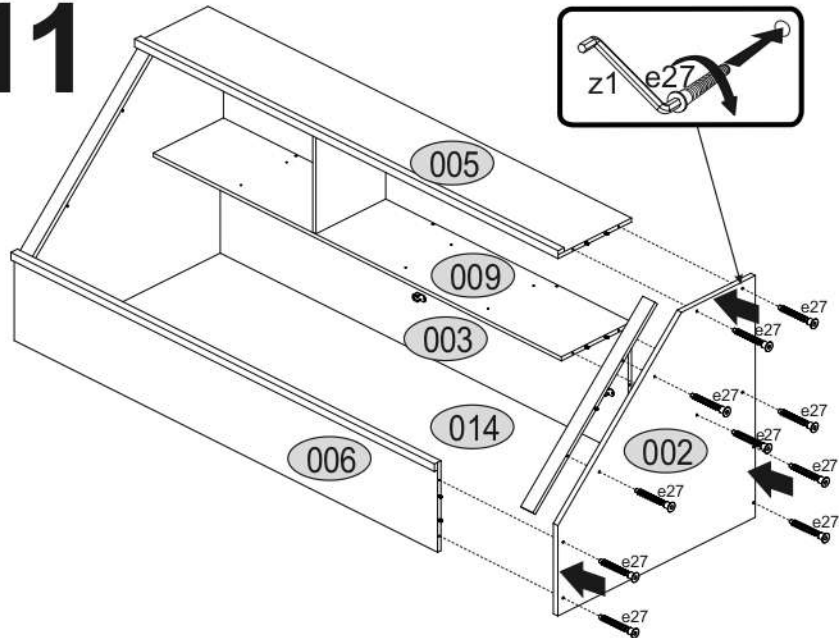 

12

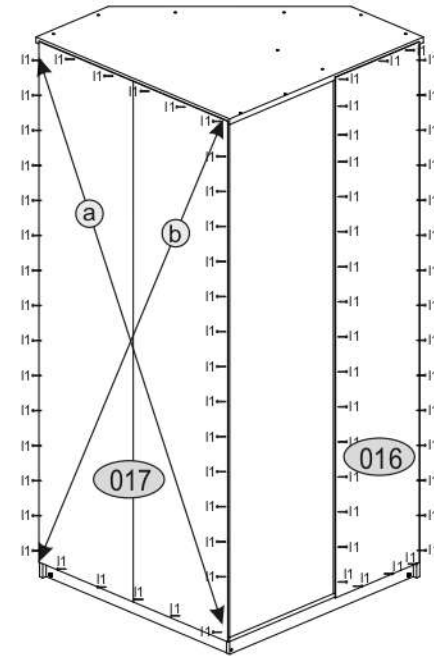  

13

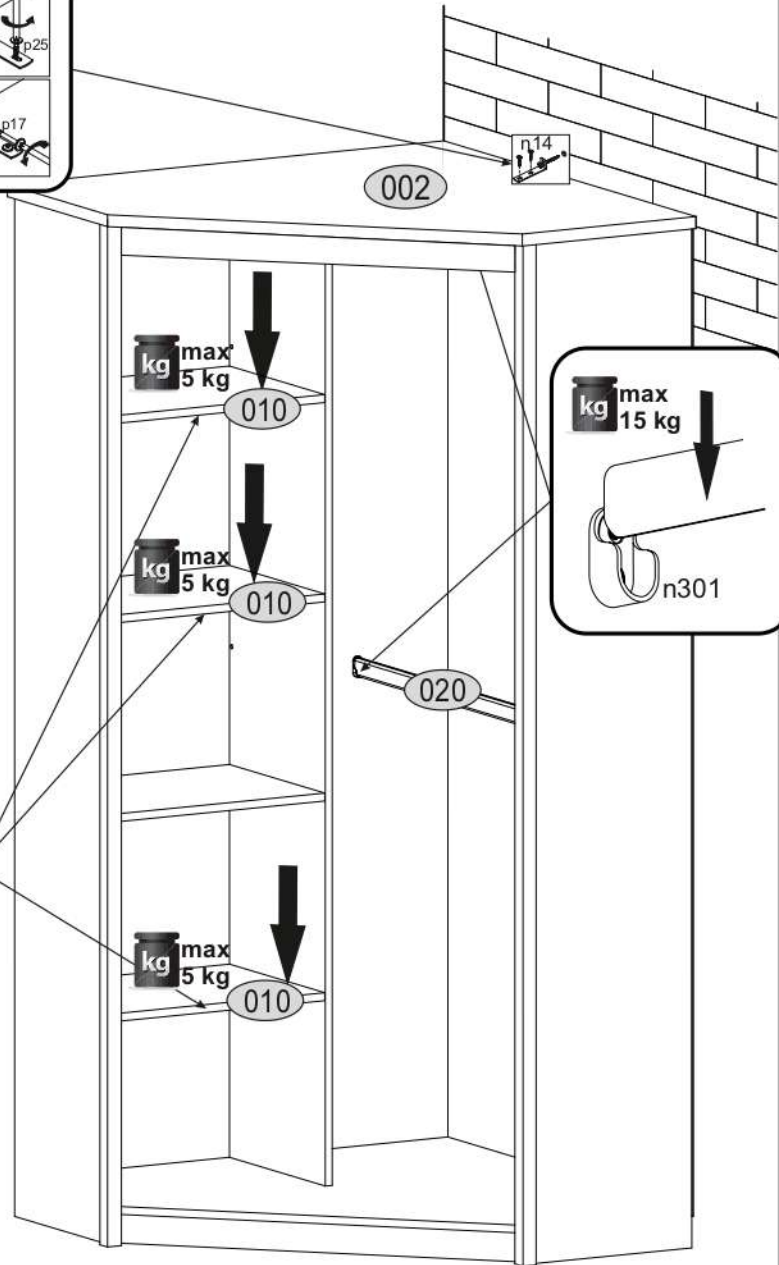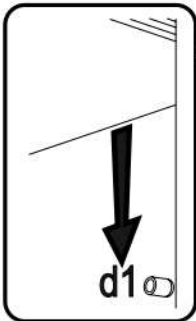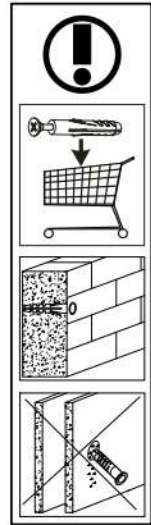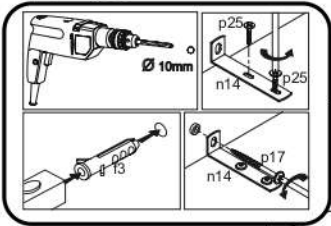    

14

