 
 
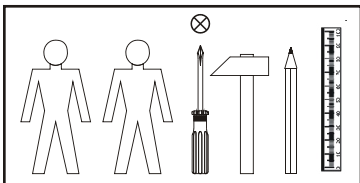 
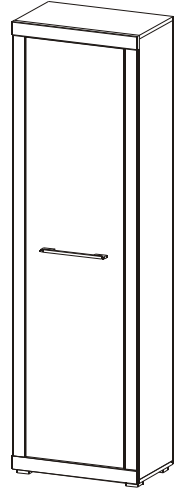 
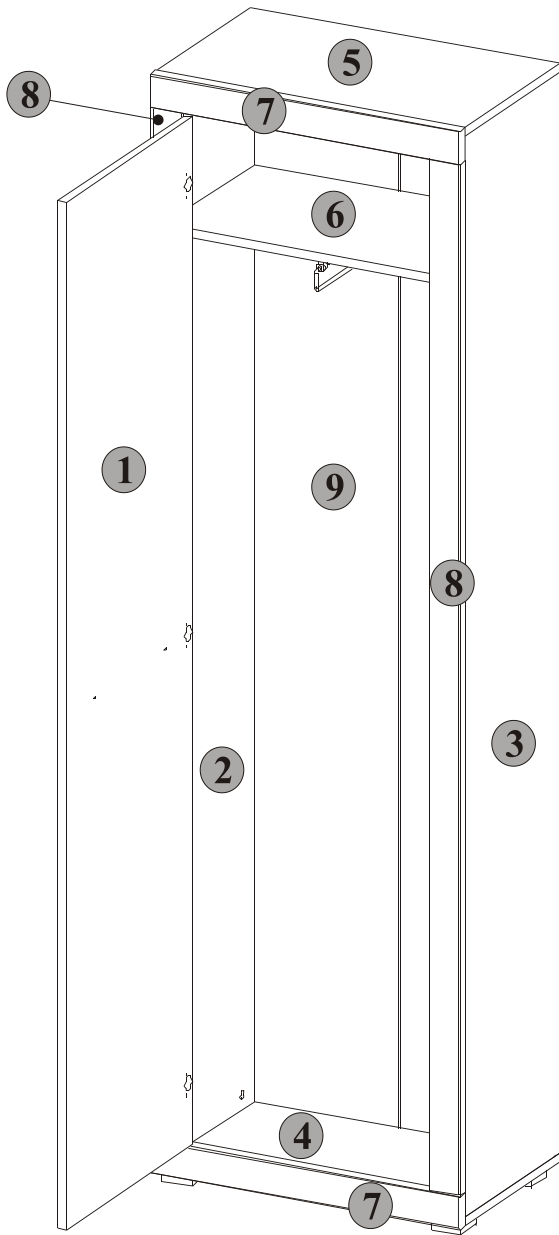 
 
 
 
 
 
 
 
 
 



Montážny návod CREMA skriňa 70-346




A	B	C	D
1	M102-005	1830x457	1/1
2	M102-105	1923x343	1/1
3	M102-106	1923x343	1/1
4	M102-203	581x343	1/1
5	M102-204	581x343	1/1
6	M102-302	548x323	1/1
7	M102-701	582x60	1/1
8	S19-730A	1836x60	1/1
9	M102-904	1937x563	1/1



 
3

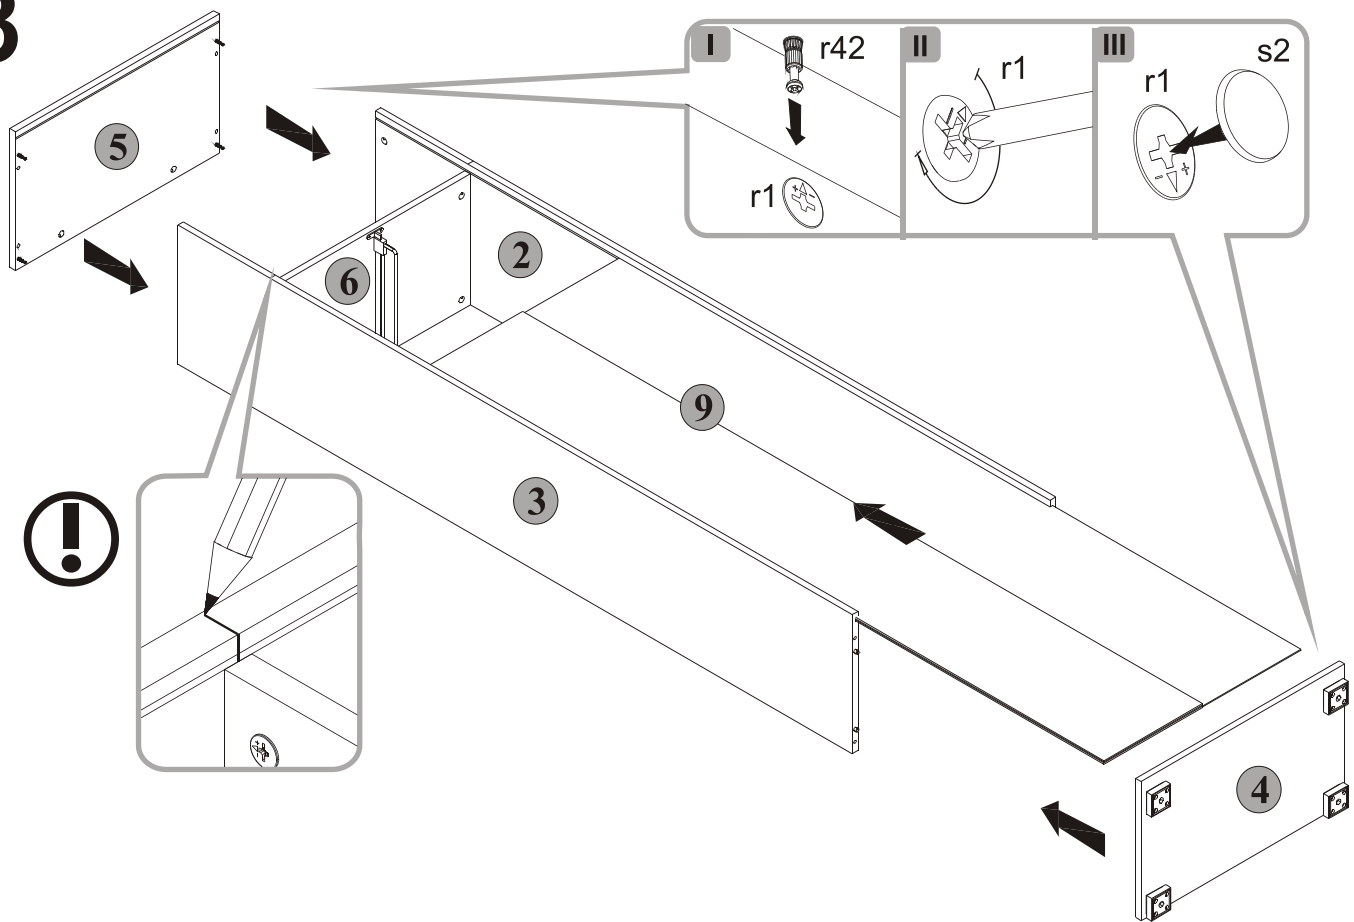

4

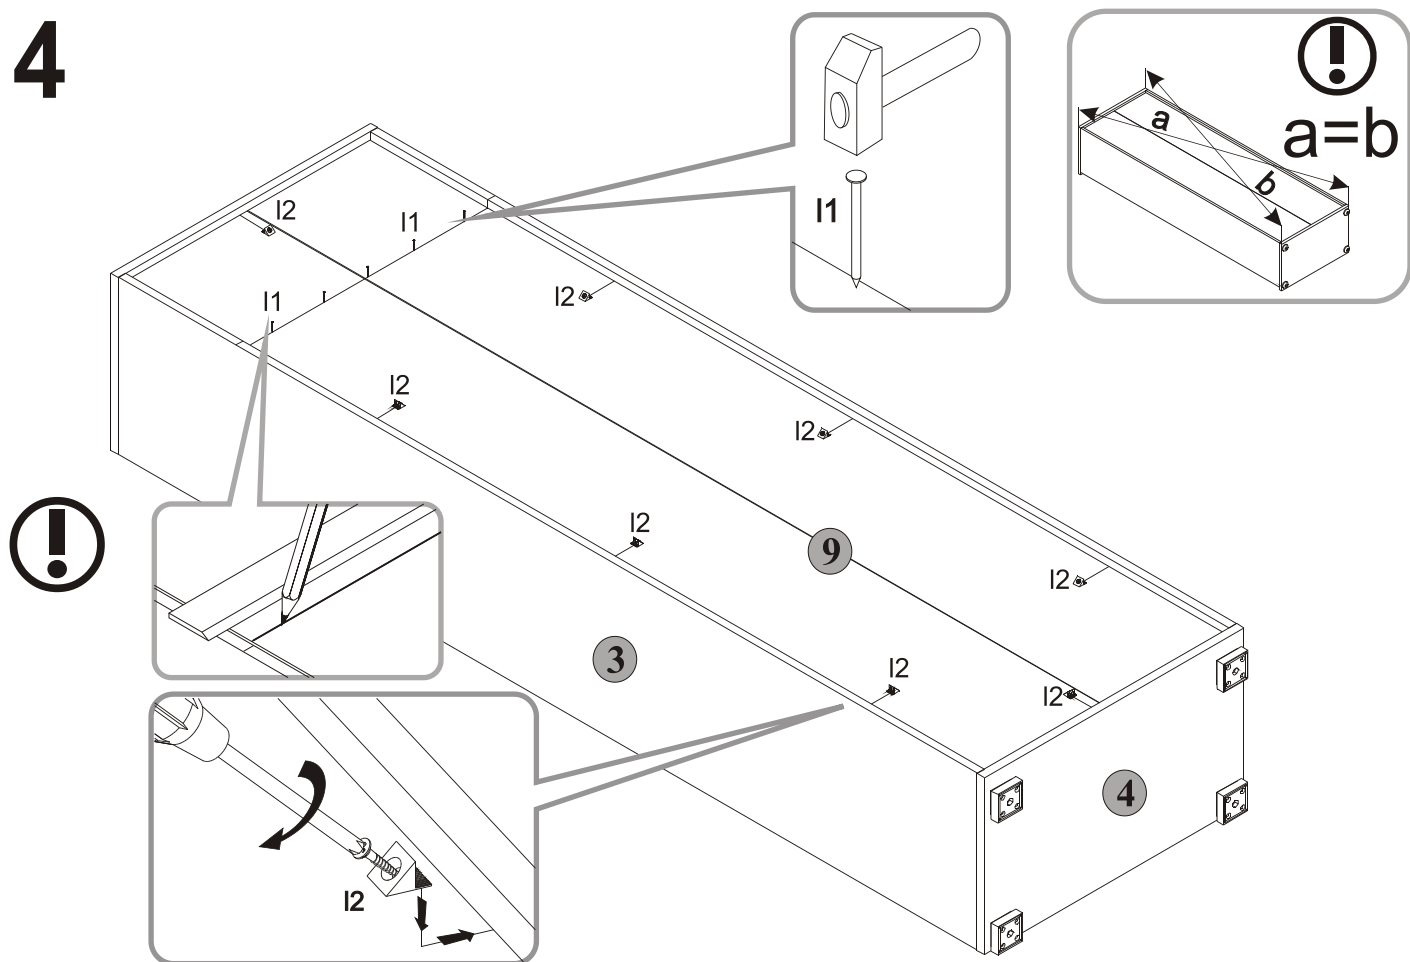 

5

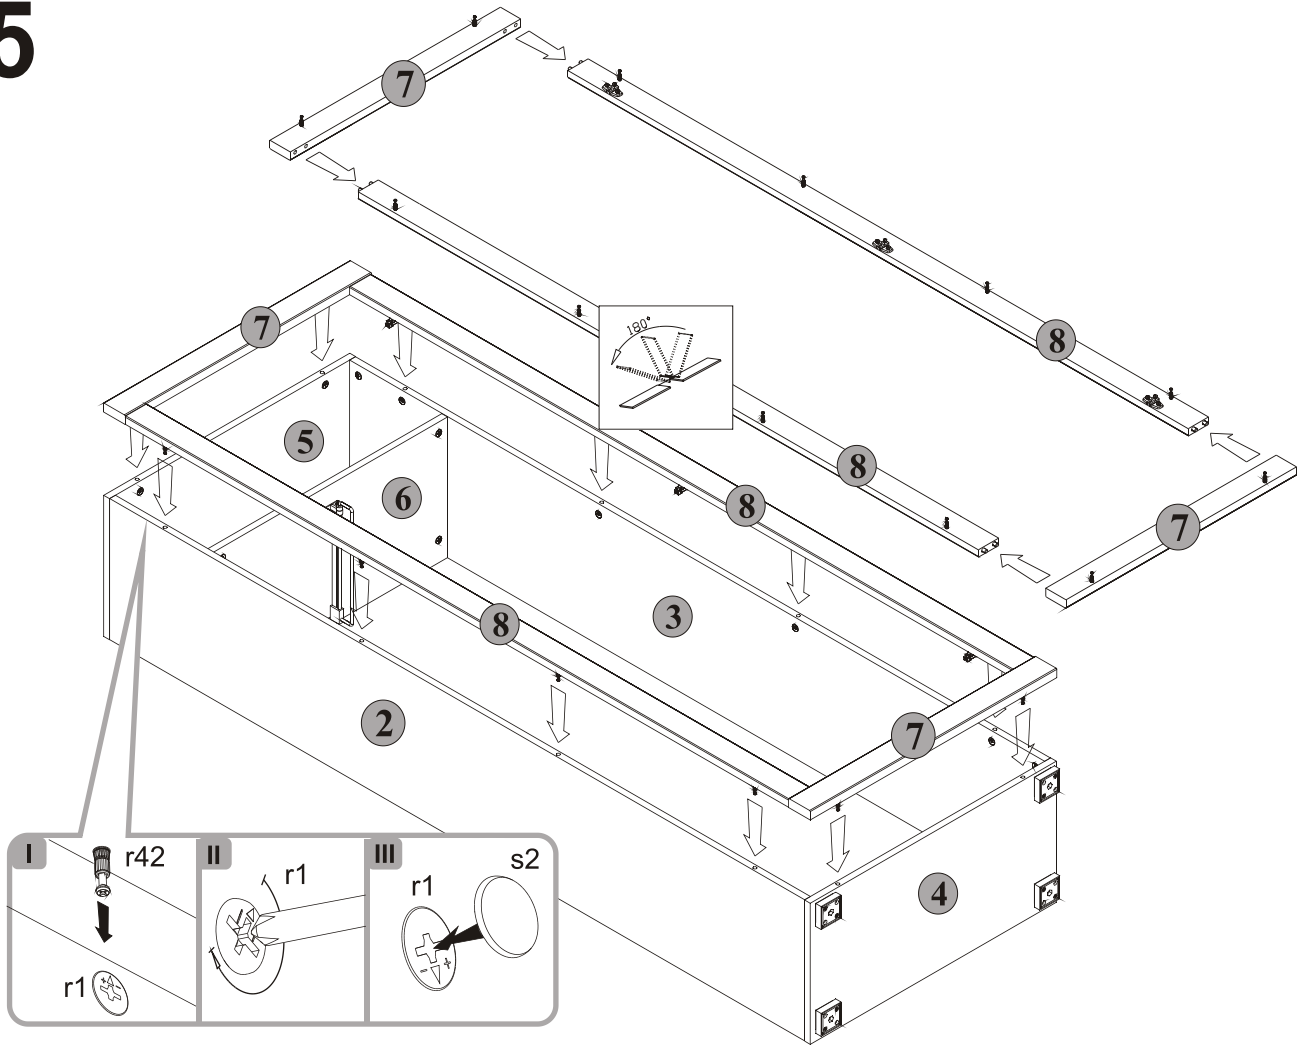 

6

