

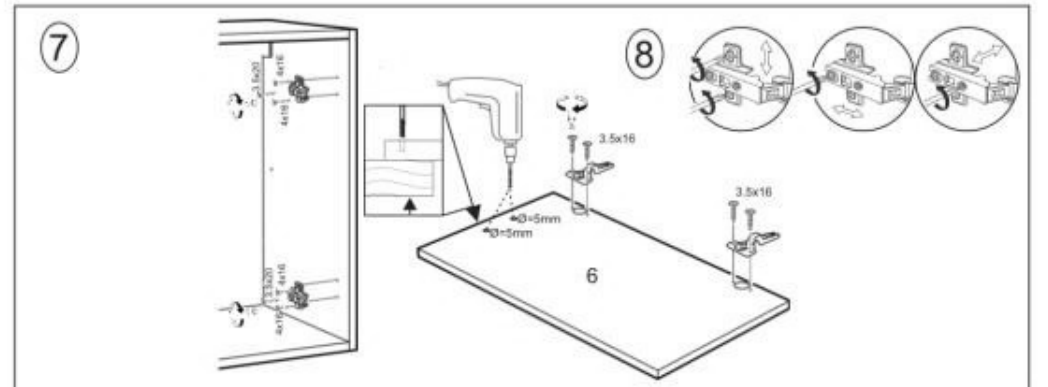
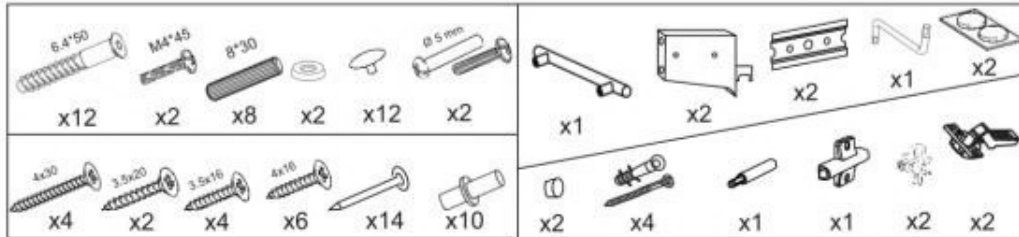
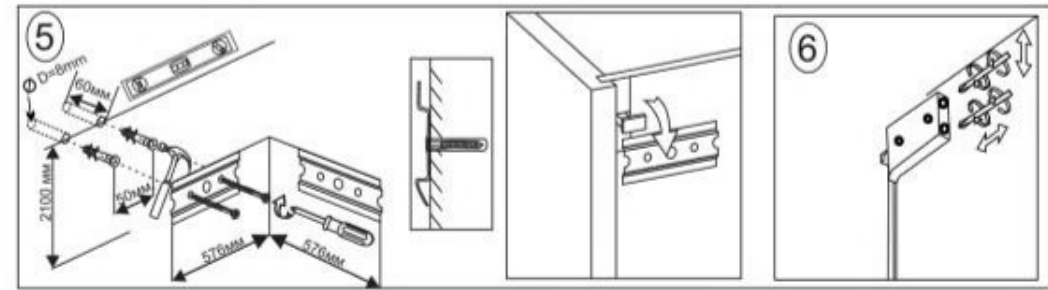


MS VENTO

(RU) Инструкция по сборке: ВУФ 60/60/72; (CS) Návod montáž: HRF 60/60/72; (HU) Szerelési útmutató: FSH 60/60/72;
 (EN) Assembly instructions: UCF 60/60/72; (SK) Návod montáž: HRF 60/60/72; (PL) Instrukcja montaż: GN 60/60/72;

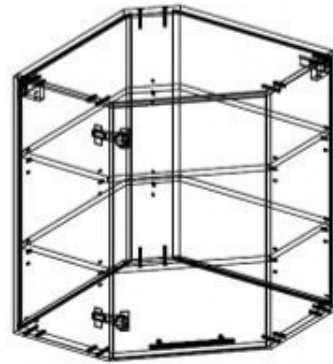

(RU) № детали	Размер (мм)	Количество (шт)
(CS) № podrobnosti	Rozměr (mm)	Množství (ks)
(HU) № részletek	Méret (mm)	Mennyiség (db)
(EN) № details	Size (mm)	Quantity (pcs)
(SK) № podrobnosti	Rozmer (mm)	Množstvo (ks)
(PL) № szczegóły	Rozmiar (mm)	Liczba (szt)
1, 2	720 x 298 x 16	2
3	578 x 578 x 16	1
4	578 x 578 x 16	1
5	563 x 563 x 16	2
6	688 x 138 x 16	1
7	713 x 396 x 16	1
8, 9	698 x 494 x 2.5	2

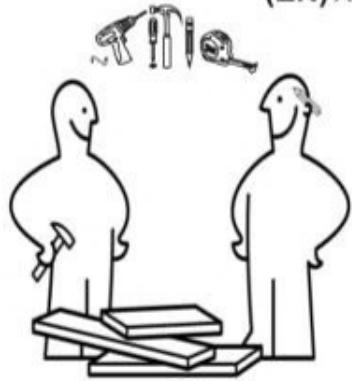