



Montážny návod Crema botník 36-346



















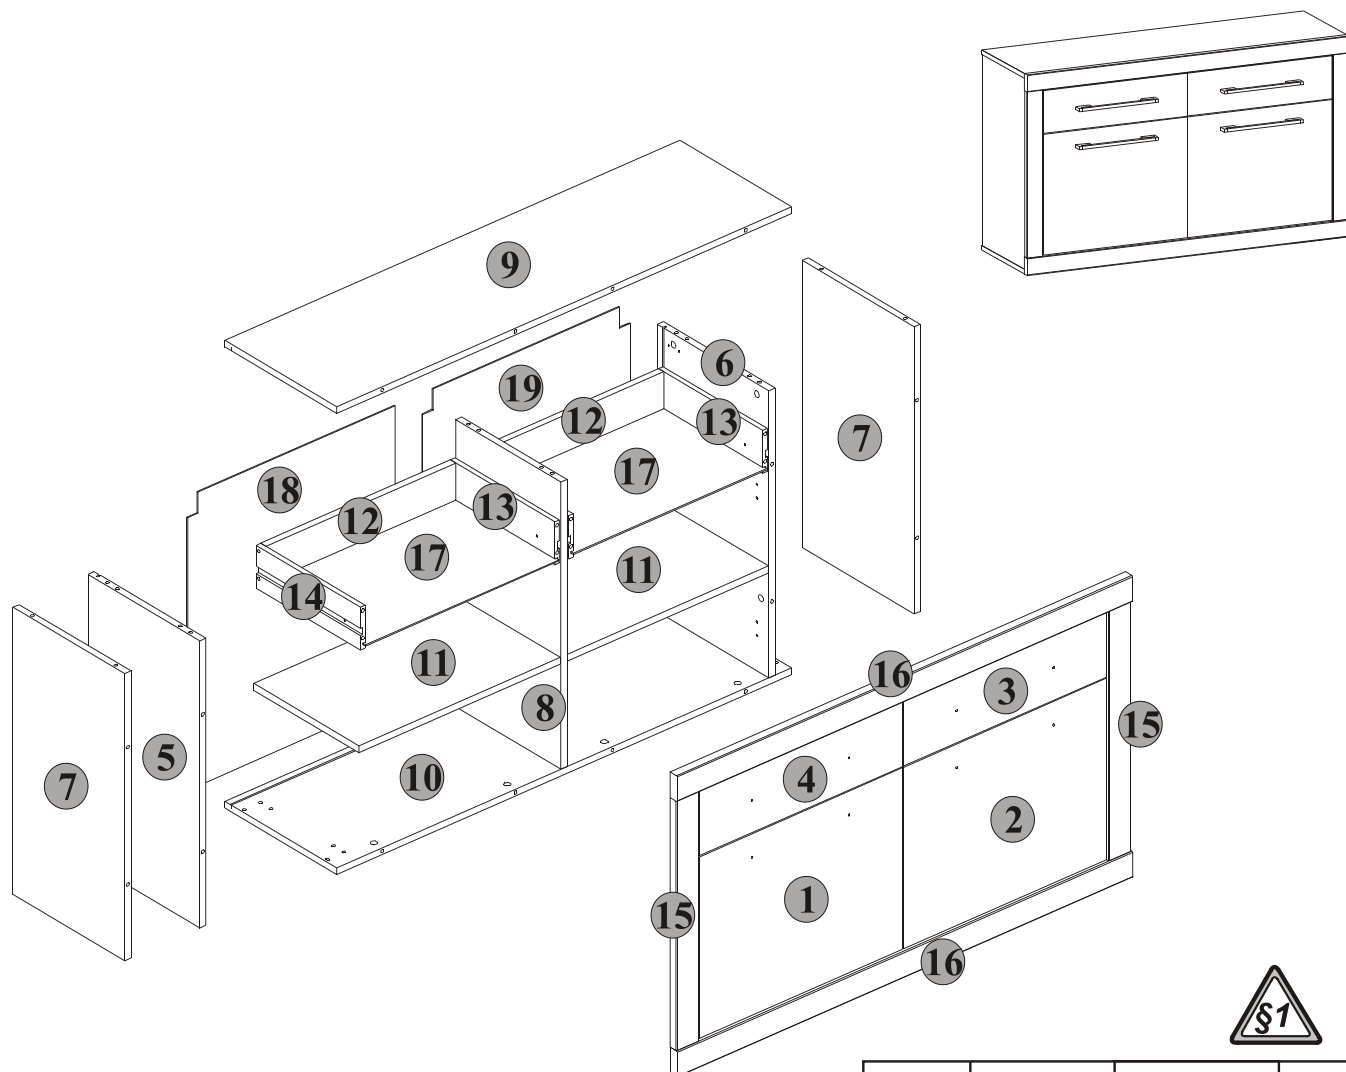


A	B	C	D
1	M 102-001	422x537	1/2
2	M 102-002	422x537	1/2
3	M 102-003	537x150	1/2
4	M 102-004	537x150	1/2
5	M 102-101	668x343	2/2
6	M 102-102	668x343	2/2
7	M 102-103	668x343	2/2
8	M 102-104	668x323	1/2
9	M 102-201	1201x343	2/2
10	M 102-202	1201x343	2/2
11	M 102-301	532x322	1/2
12	M 102-501	501x100	1/2
13	M Z1-522	320x100	1/2
14	M Z1-523	320x100	2/2
15	M 102-702	581x60	1/2
16	S 19-788	1202x60	2/2
17	M 102-901	511x316	1/2
18	M 102-902	683x547	1/2
19	M 102-903	683x547	1/2

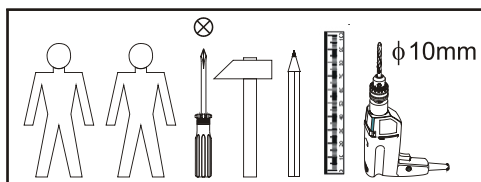


40x f8x30 mm f1	8x f6,5x40 mm f25	3x f10x50 mm f35	4x K16 a1	4x b1	4x 300 mm c196	8x f5x17mm d1	6x f7x50 mm e1	8x f6x13 mm e3
8x f4x42 mm p22	5x f2,9x16 mm p55	3x f6x60 mm p75	4x M4x9 mm j2	8x l2	5x 20x13x3,51mm n108	1x n38 ^P	2x n38 ^L	6x f4x30 mm p21
8x f4x42 mm p22	5x f2,9x16 mm p55	3x f6x60 mm p75	18x f15x12mm #16 r1	18x r42	8x s2	1x z1	4x 310mm w4	1x y1



1

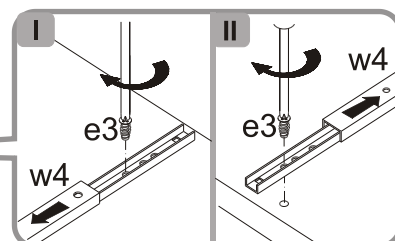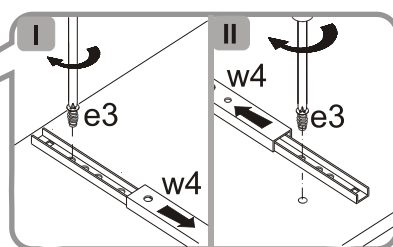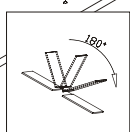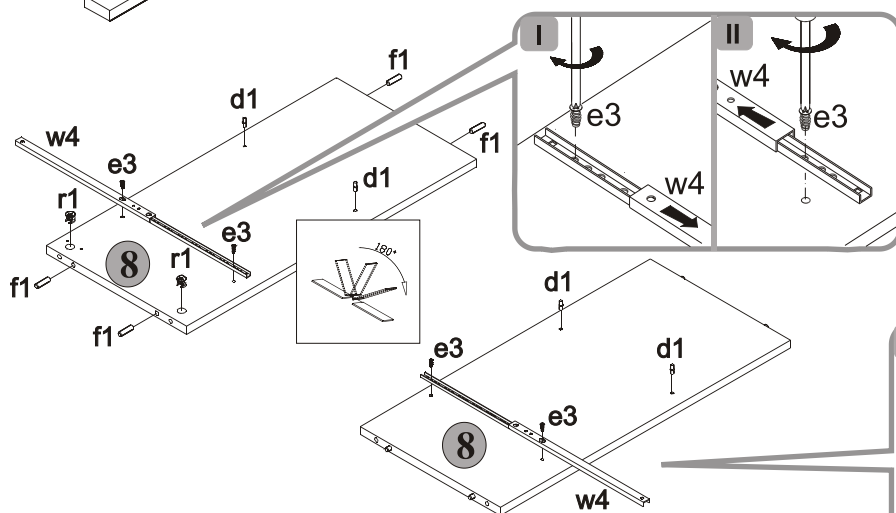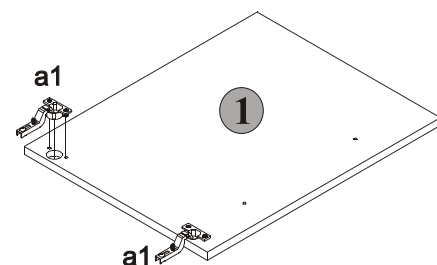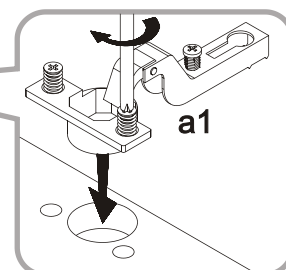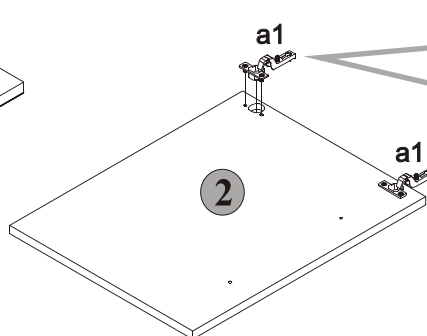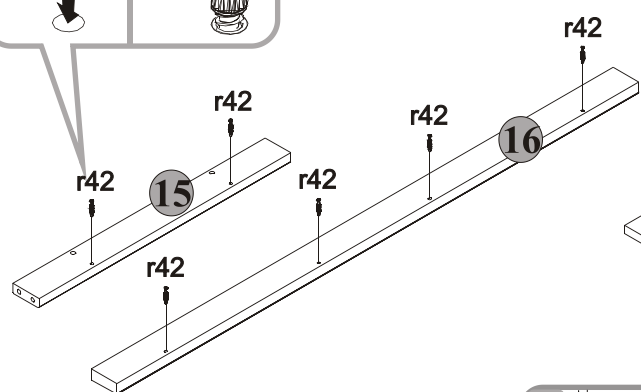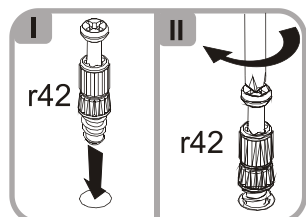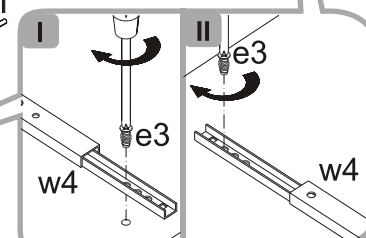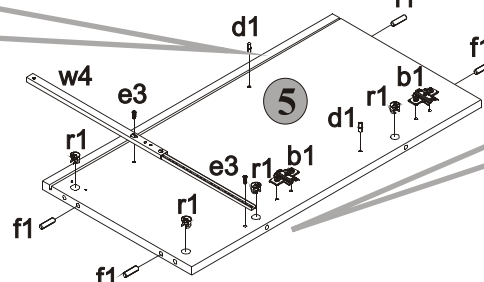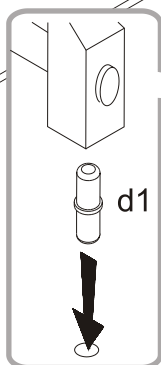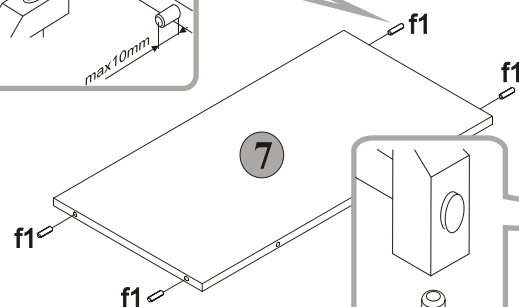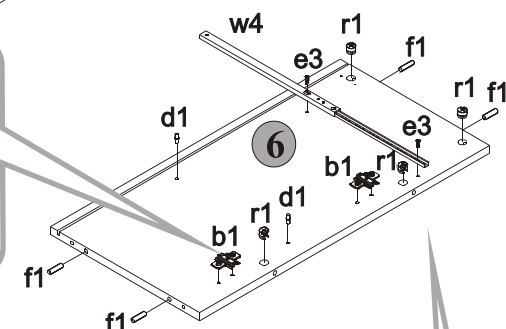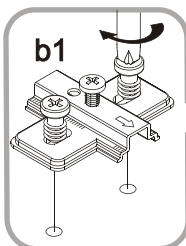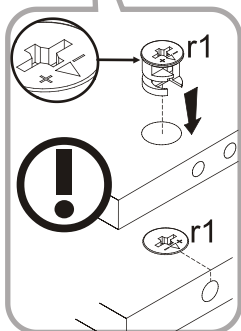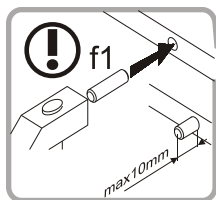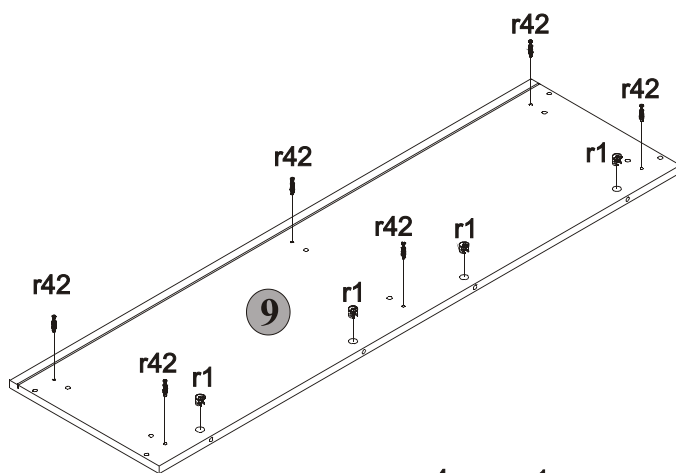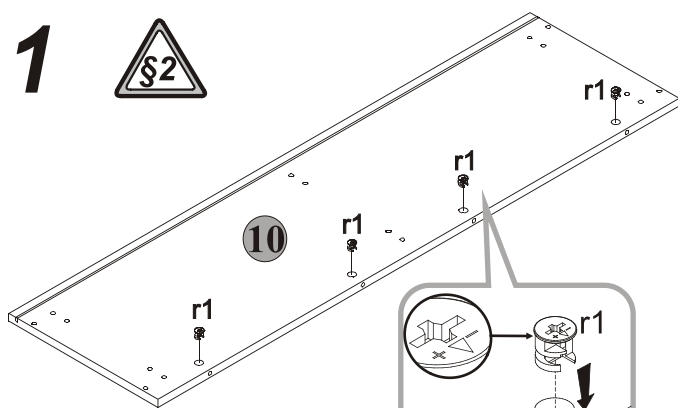


2

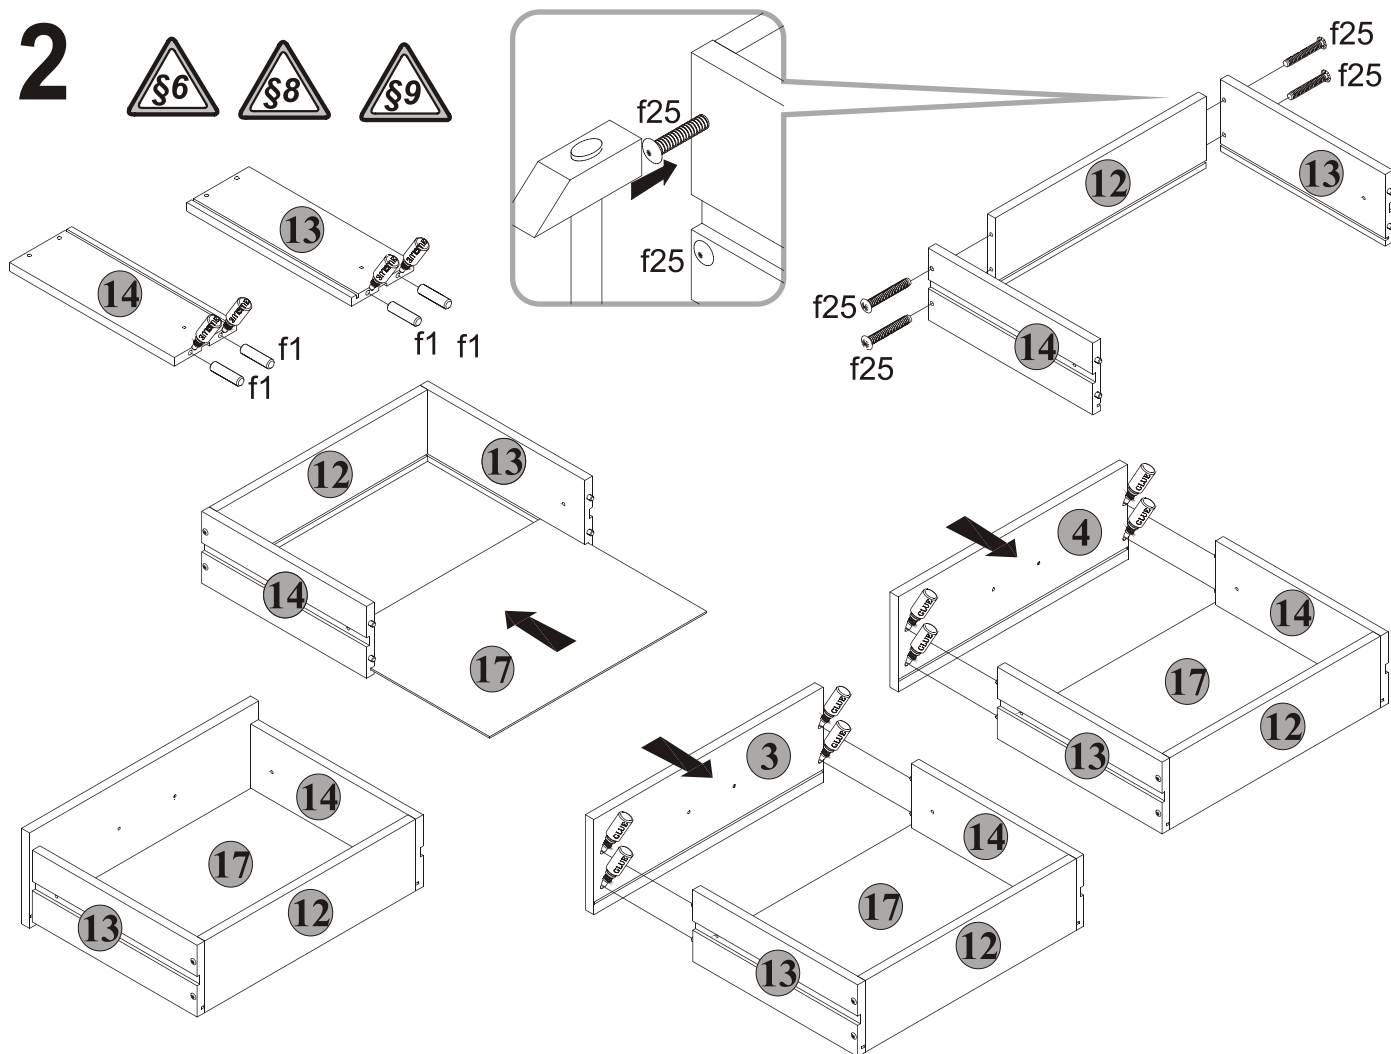


3

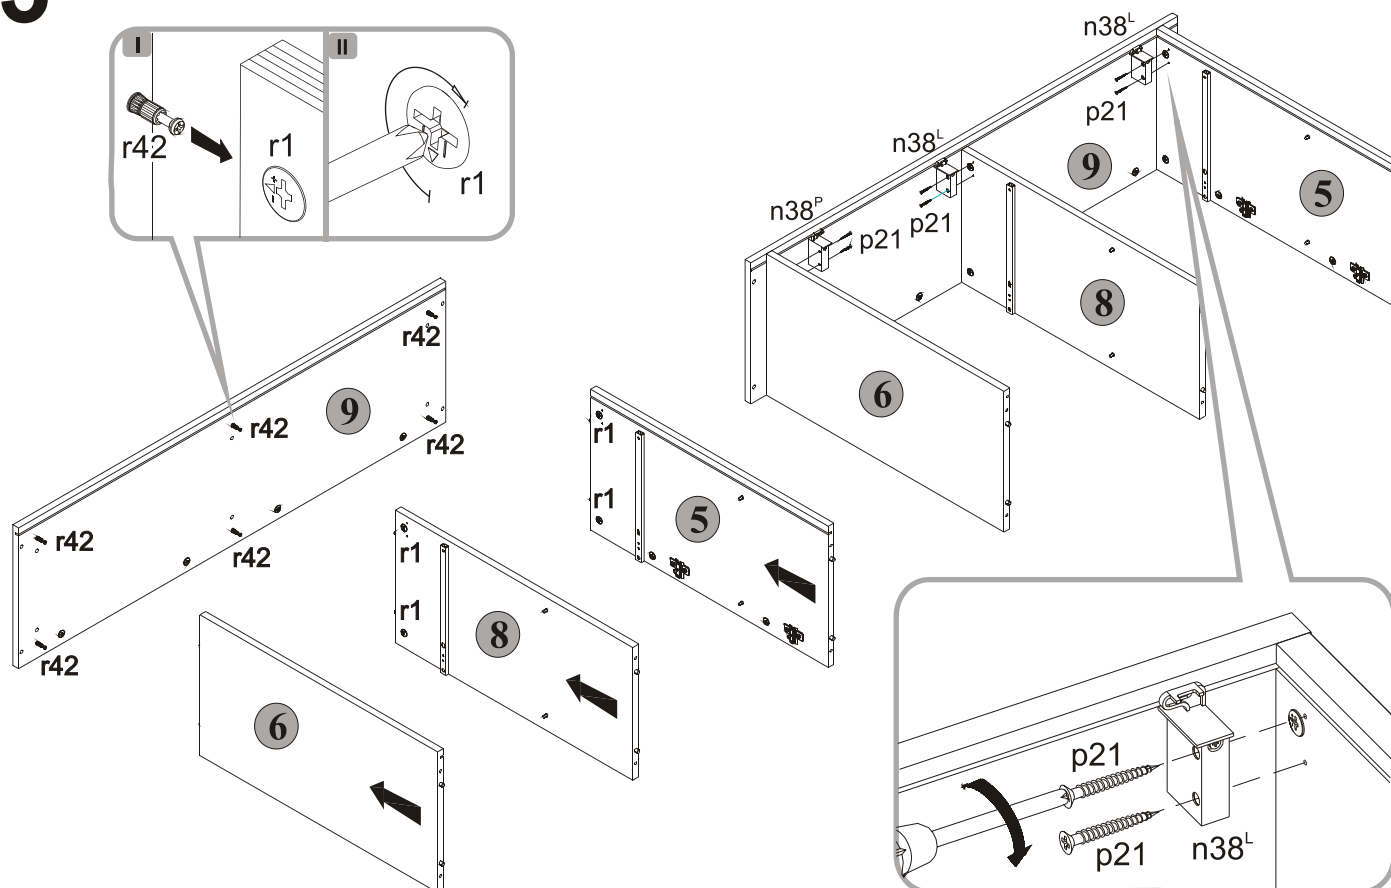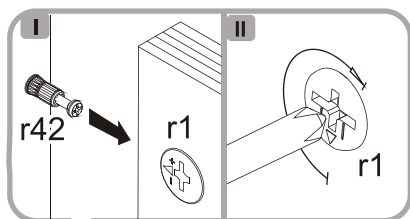


4

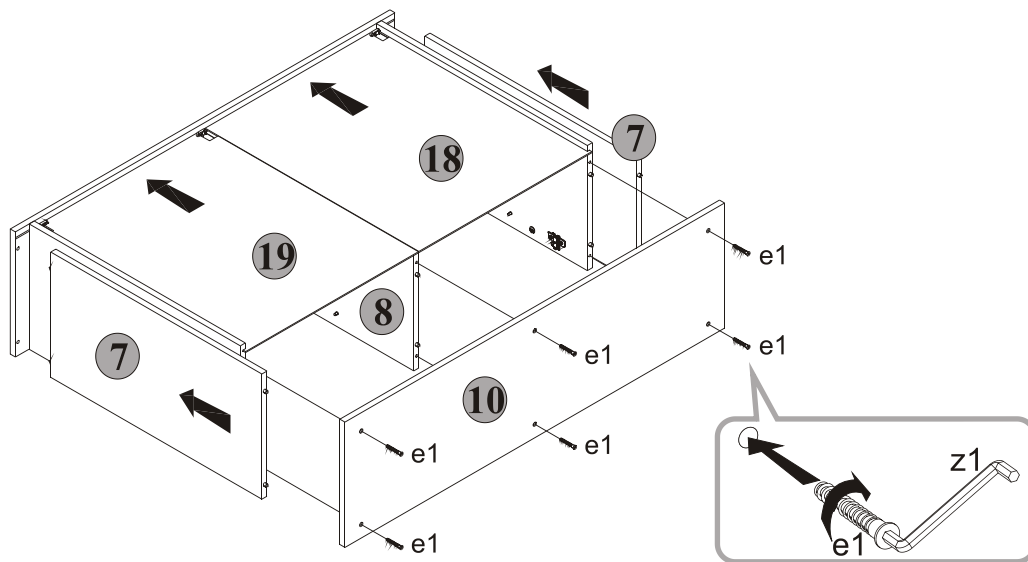



5

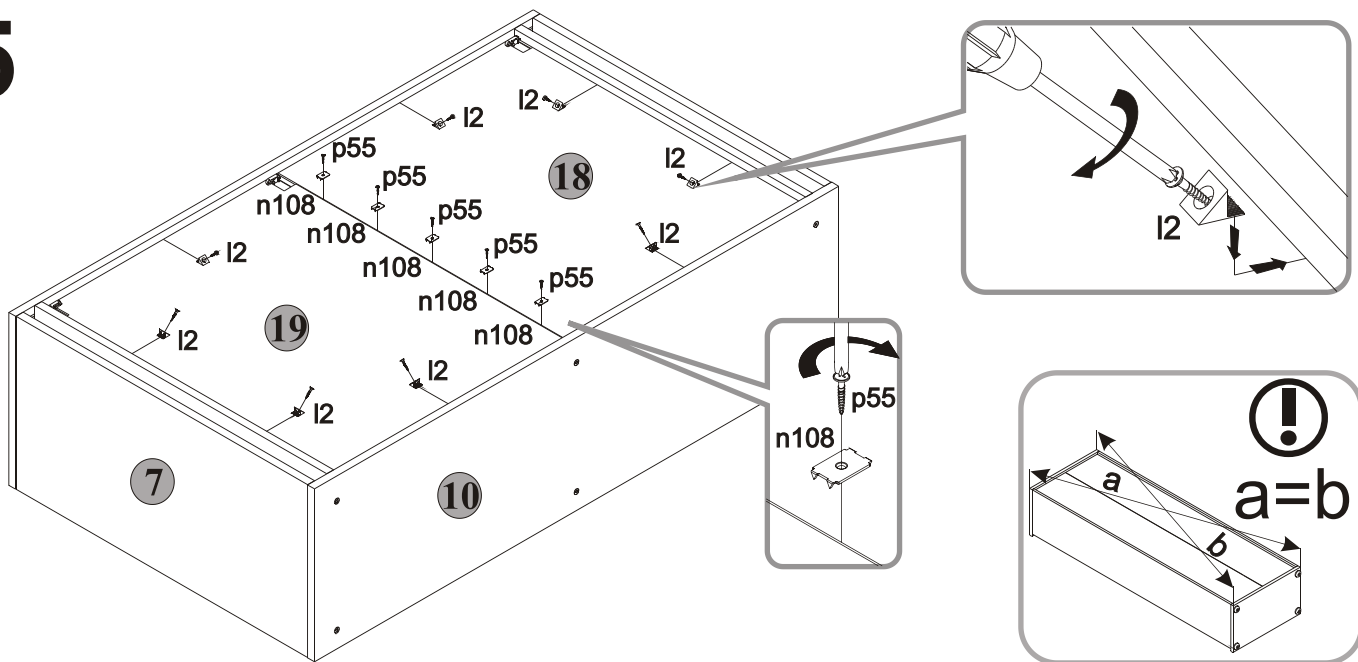



6

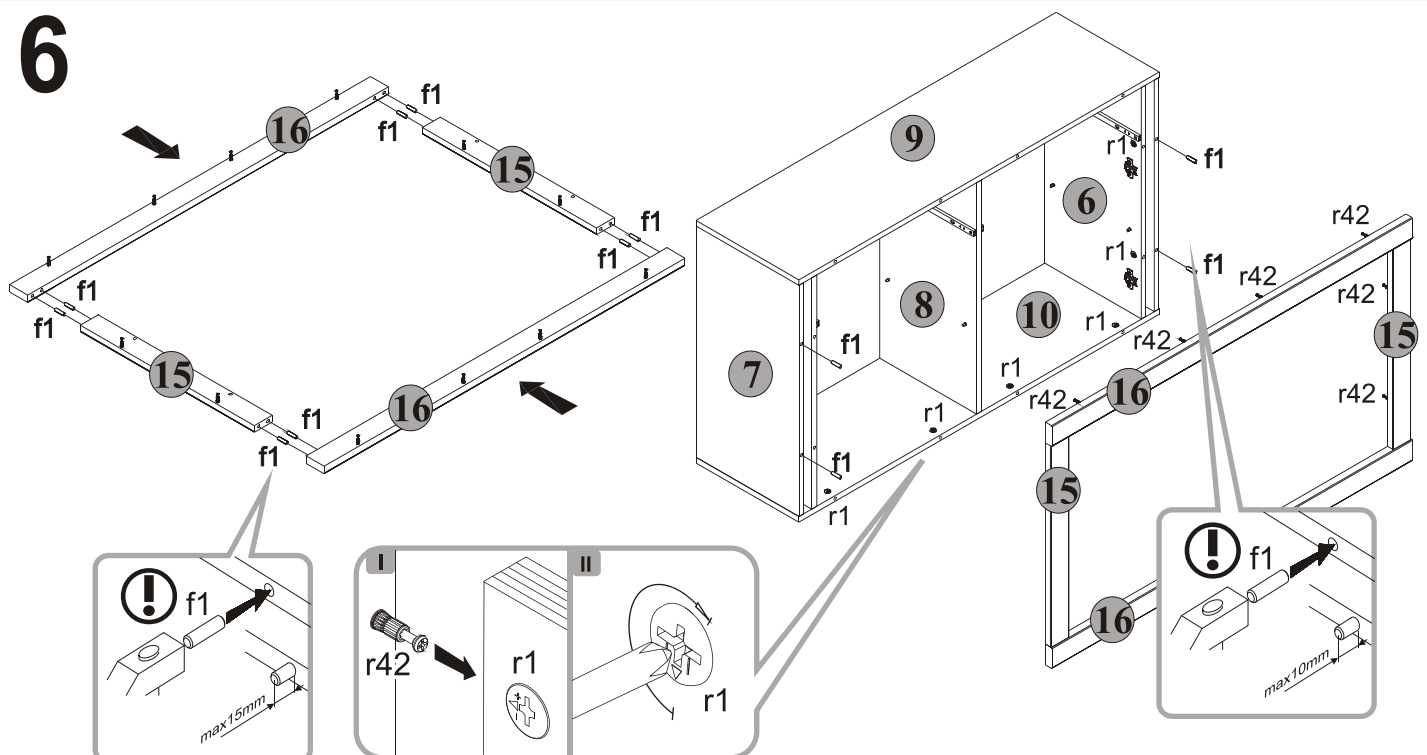


7

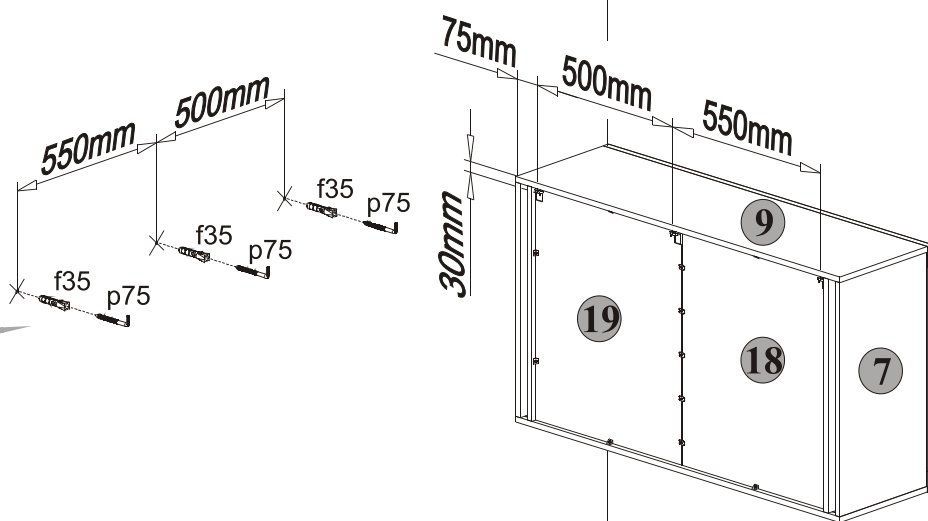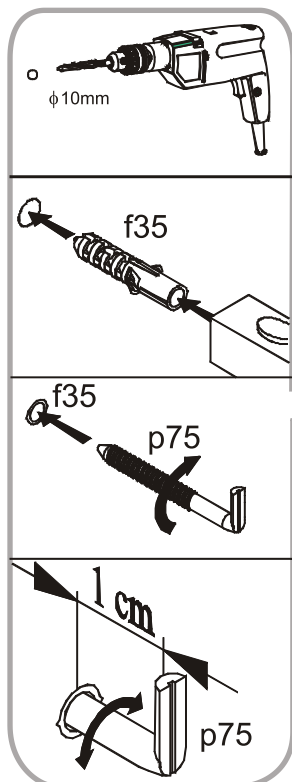

8

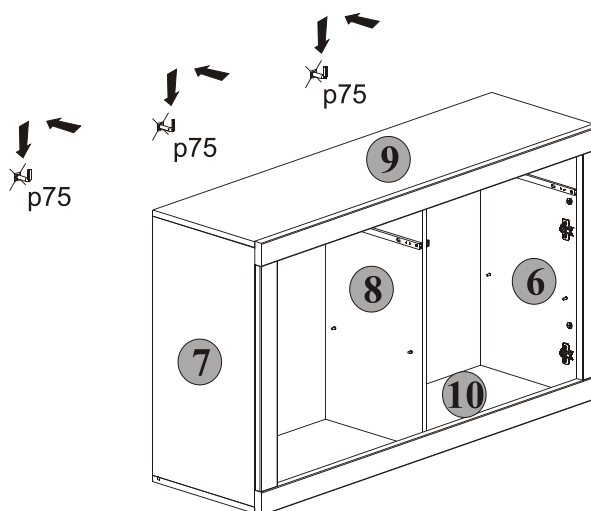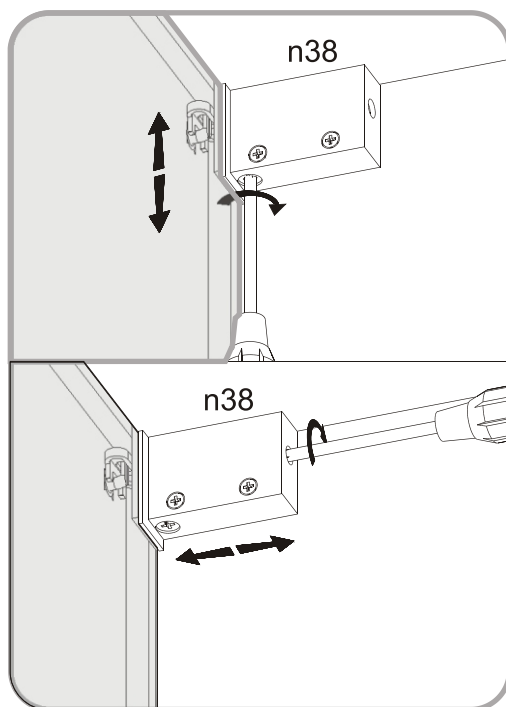

9

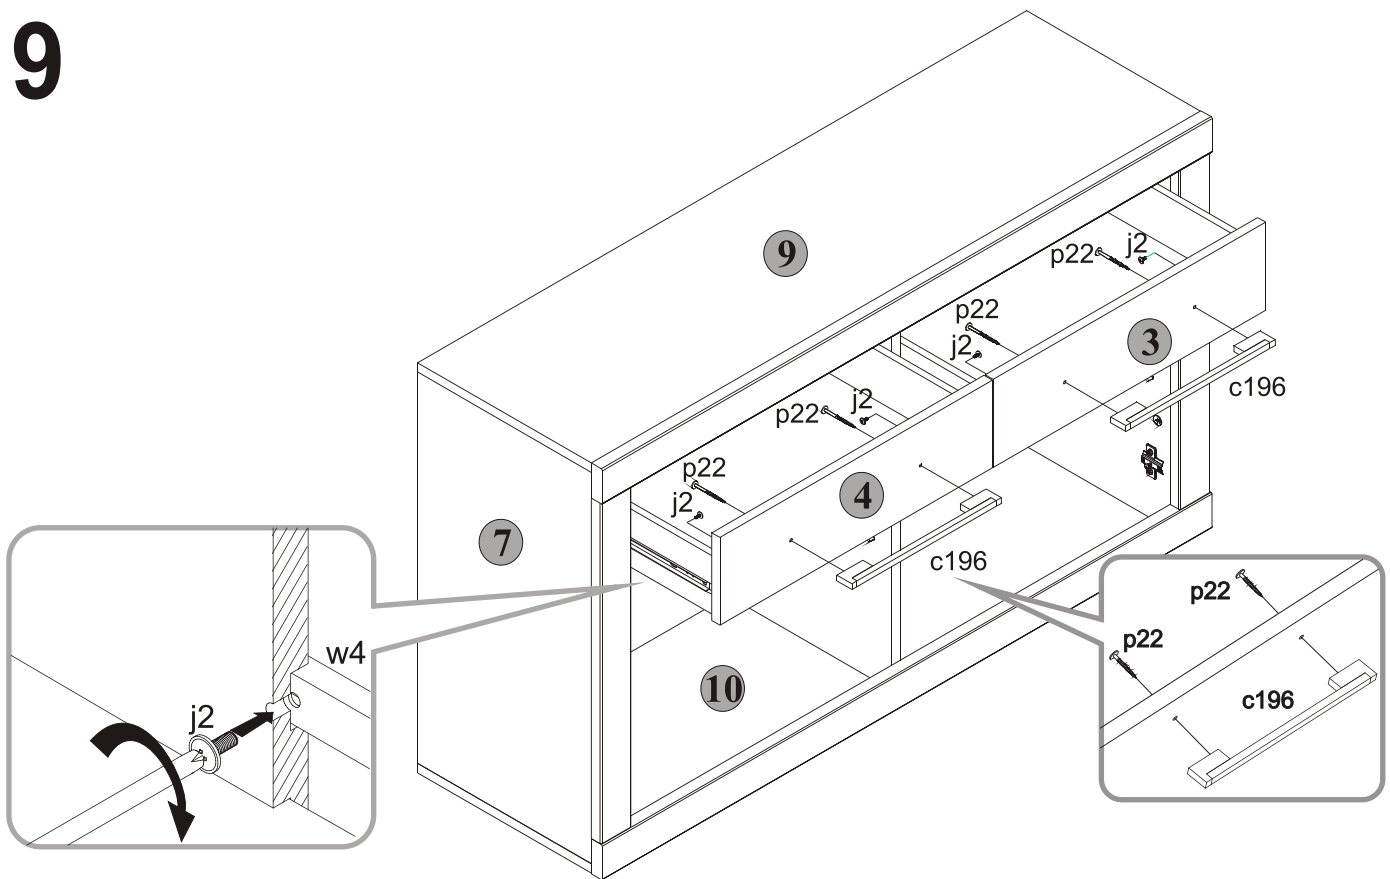

10

