
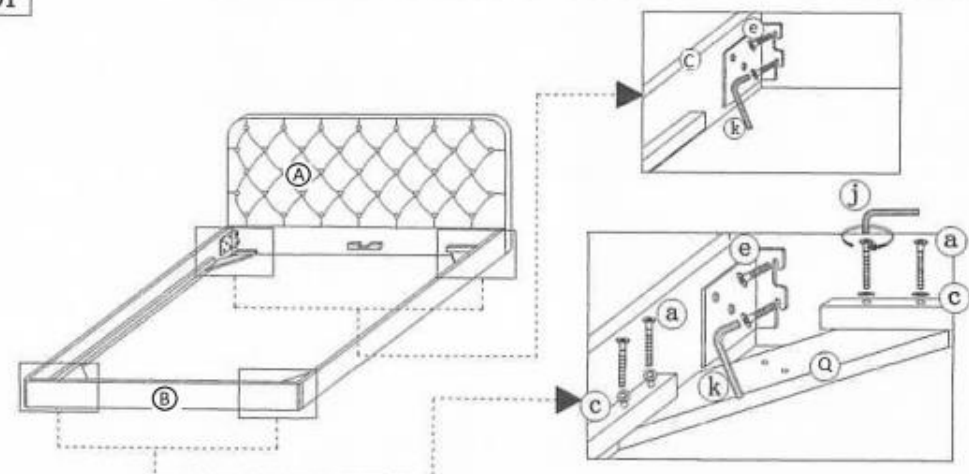





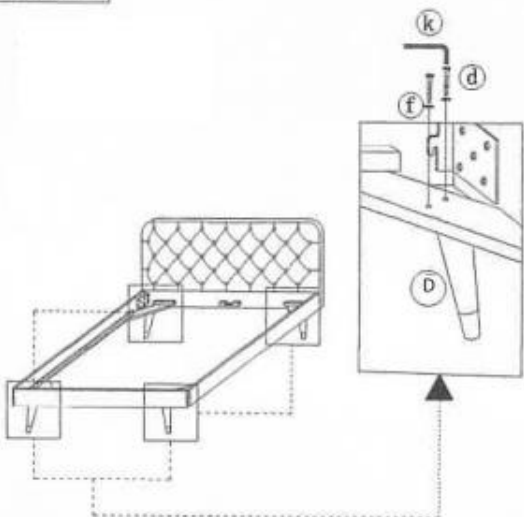


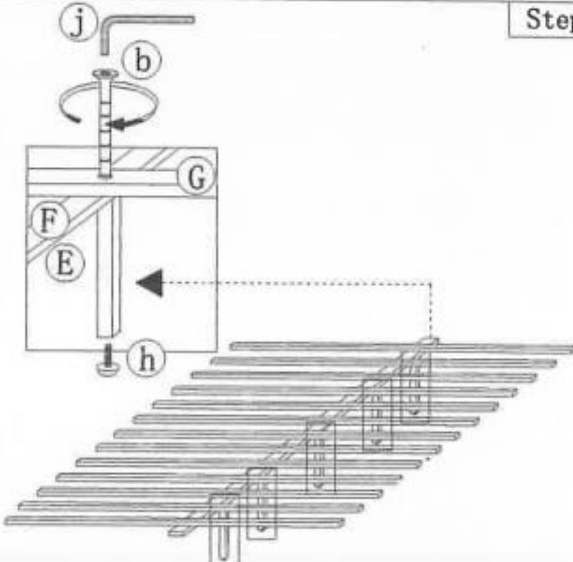


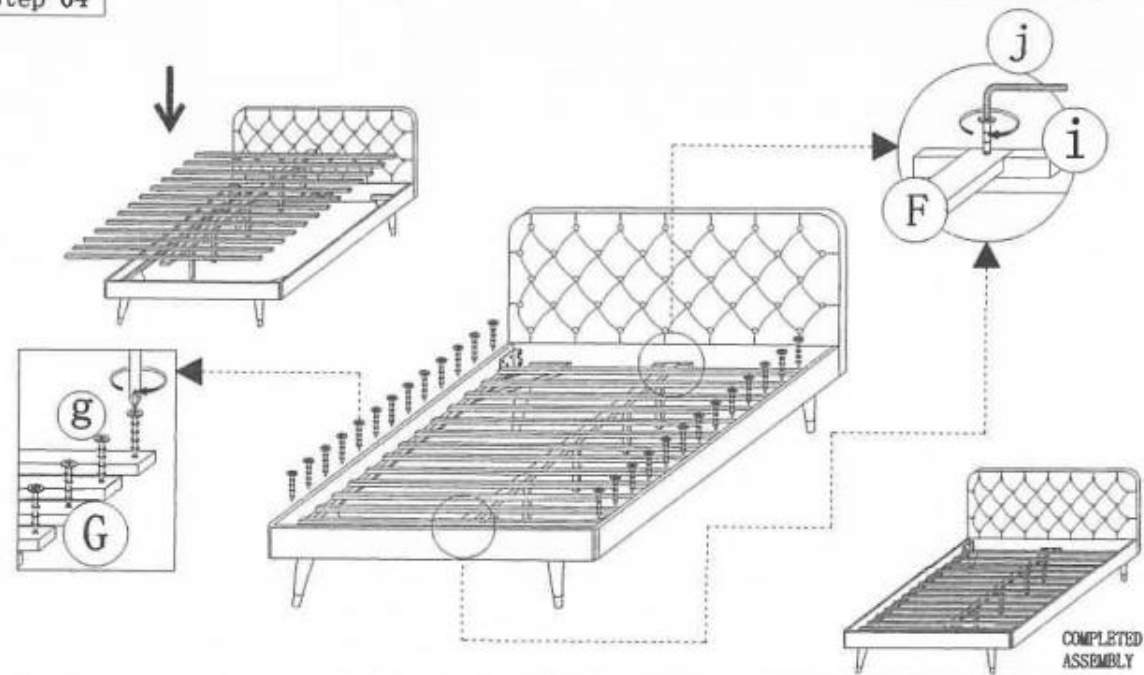


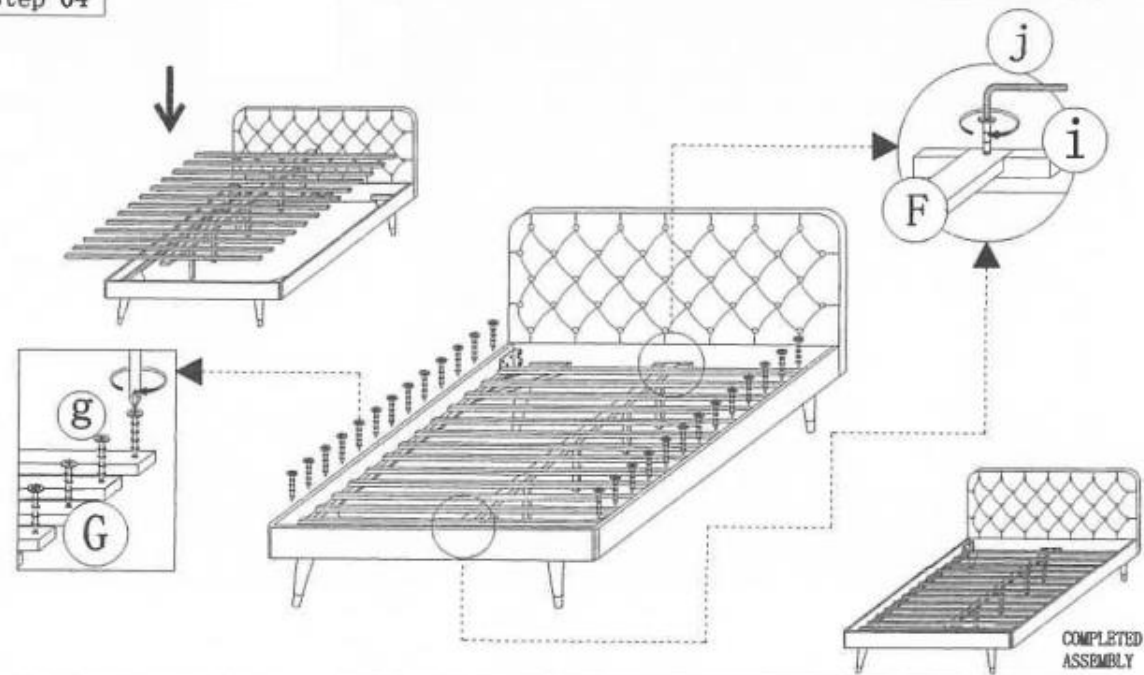


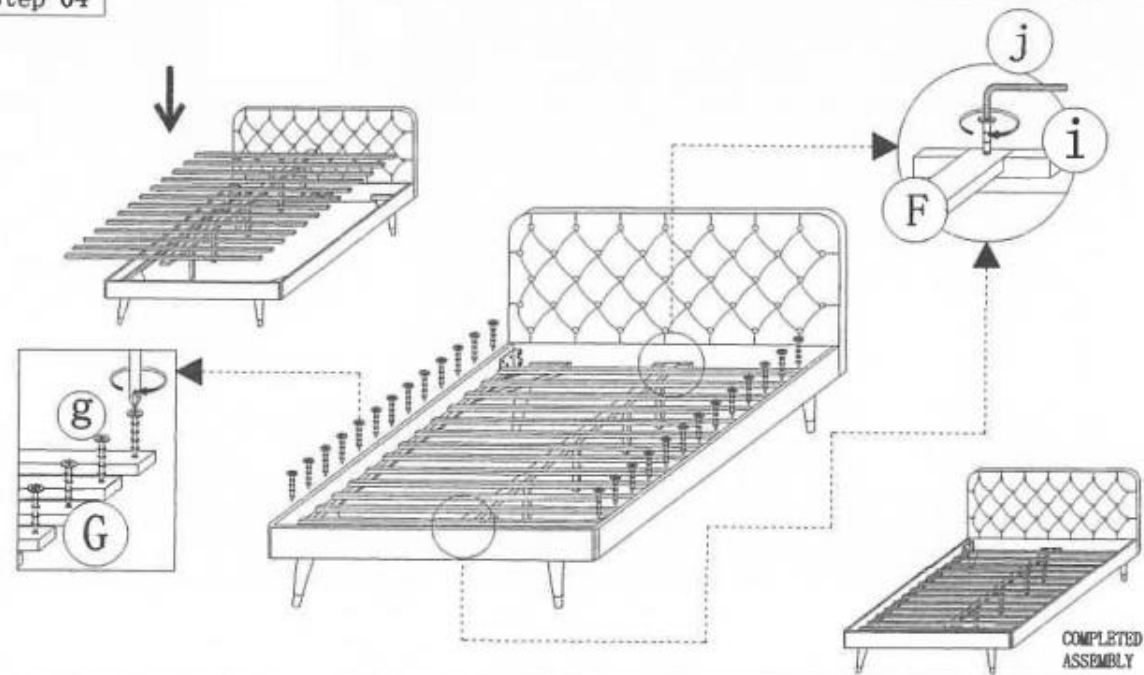


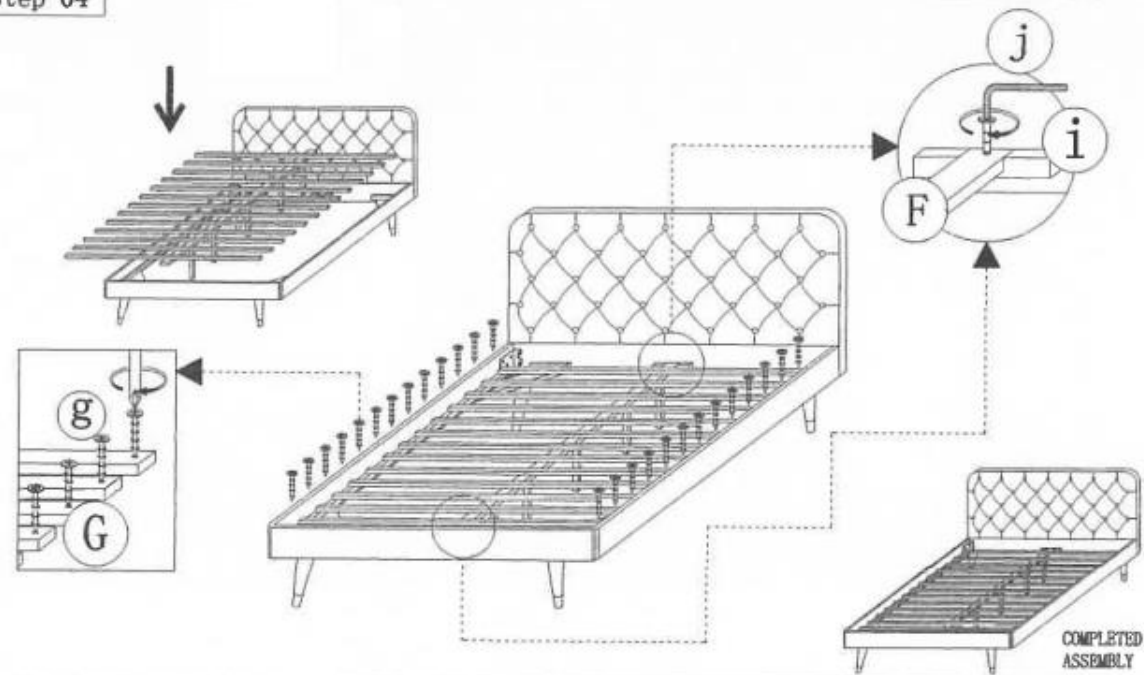





MODEL: CASSIDY 4'6"/5'5'6"

ASSEMBLY INSTRUCTION

ASSEMBLY TIPS: Remove hardware from box and sort by size. Check that all hardware and parts are present before assembling. Following instruction below in proper sequence to ensure fast, easy and correct assembly.

WARNING: DO NOT FULLY TIGHTEN ALL BOLTS UNTIL ALL PARTS IN PLACE, FAILURE TO FOLLOW THIS INSTRUCTION MAY CAUSE THE BOLTS TO BE MISALIGNED DURING THE ASSEMBLY.

Part List		Step 01
A	 X1 Headboard	
B	 X1 Footboard	
C	 X2 Side Rail	
D	 X4 Leg	
E	 X5 Support Leg	
Hardware List		Step 02
F	 X1 Center Rail	
G	 X13 Slat	
Hardware List		Step 03
H	 X16 a JCBC M6 X 50 MM	
I	 X5 b JCBC M6 X 60 MM	
J	 X16 c Flat Washer M6	
K	 X8 d JCBB M8 X 50 MM	
L	 X8 e JCBB M8 X 16 MM	
M	 X8 f Flat Washer M8	
N	 X26 g CSK M4 X 30 MM	
O	 X5 h Adjuster Screw	
P	 X2 i JCBC M6 X 30 MM	
Q	 X4 Corner Block	
j-k	 X1 Allen Key M5	 <p>COMPLETED ASSEMBLY</p>