







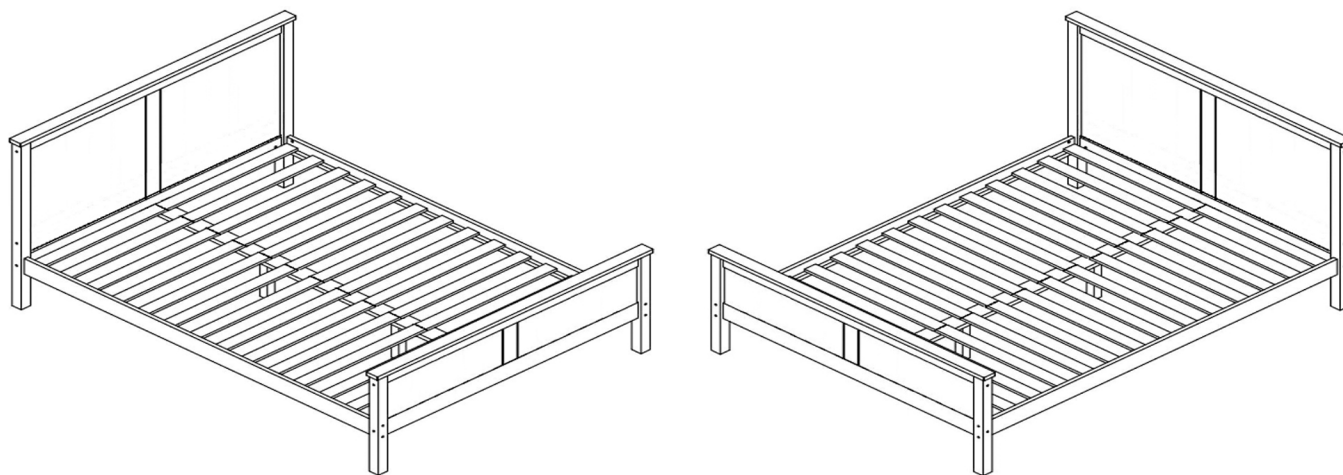


PROVO postel'

Montážny návod


B1021




Súčiastky




			G	  Ø15mm	8
A	 M6x90mm	8	D	 Φ8x30mm	4
B	 M6	8	E	 Ø4x30mm	38
C	 Φ7x60mm	2	F		1

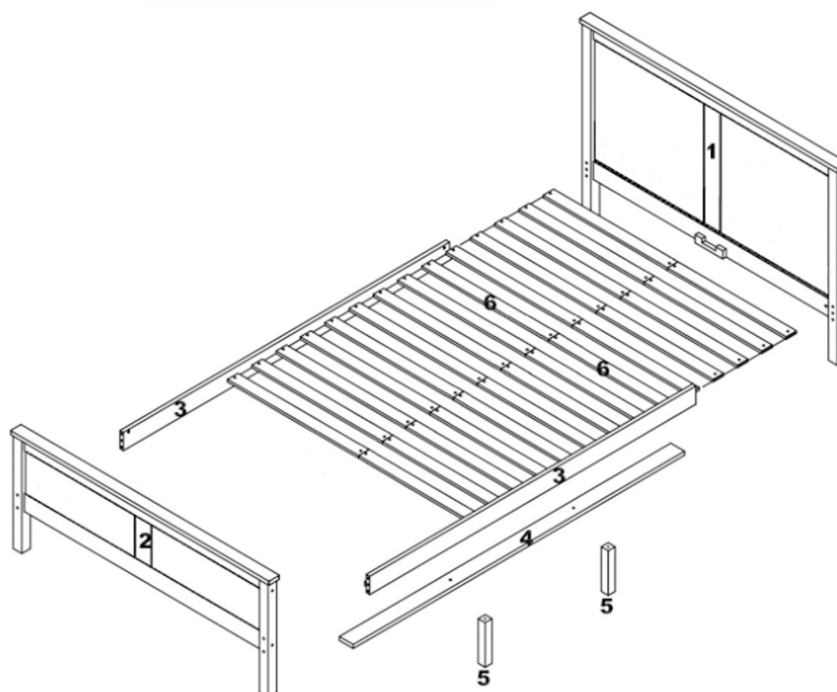Časti




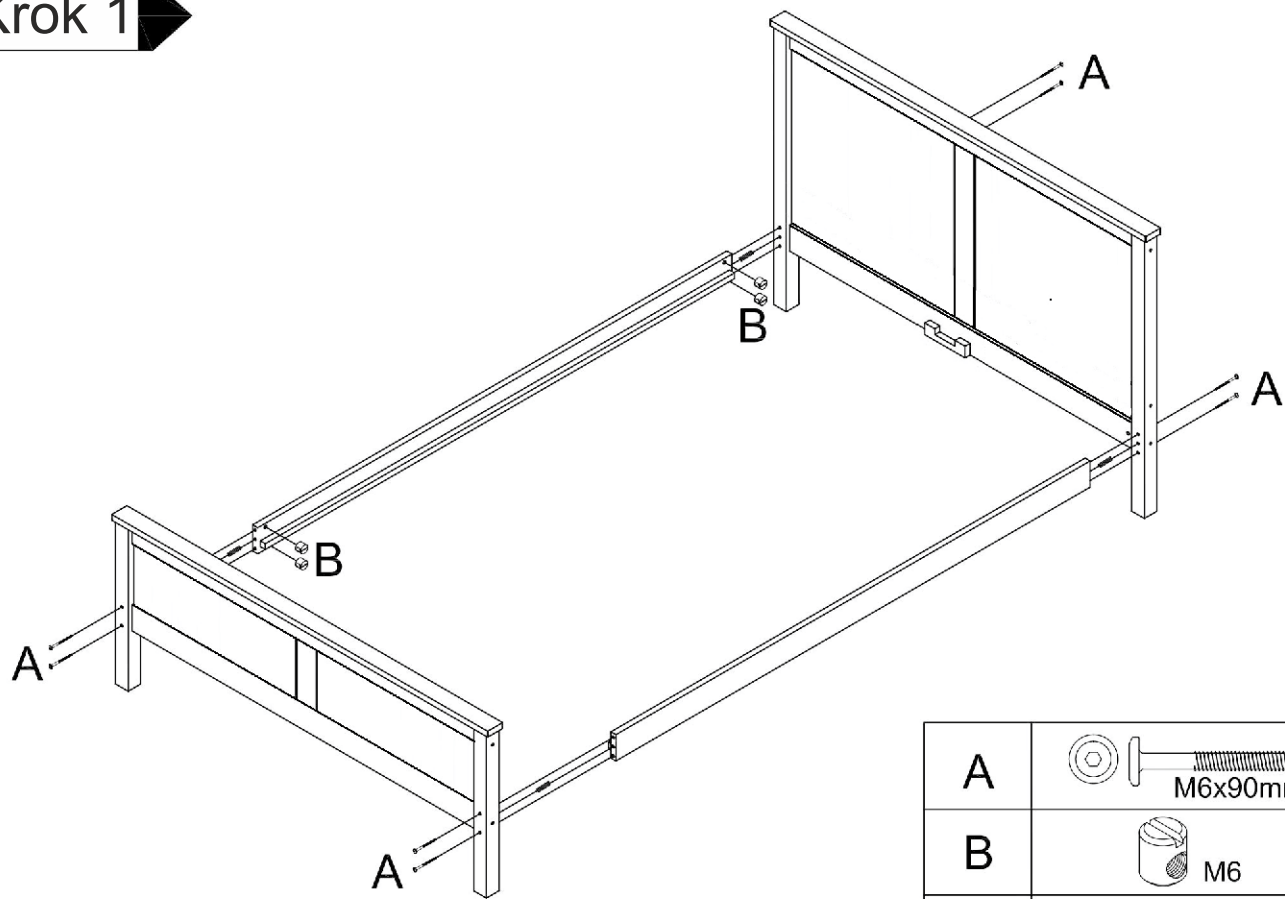

Krok 1




A	 M6x90mm	8
B	 M6	8
D	 Ø8x30mm	4

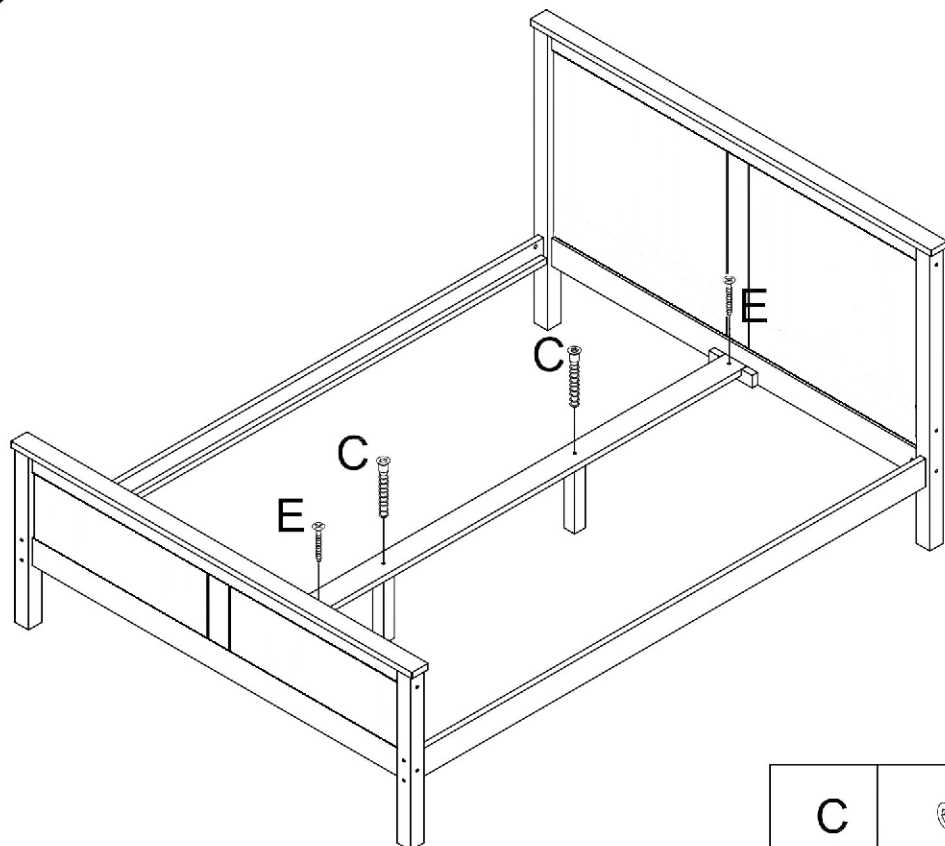



Krok 2

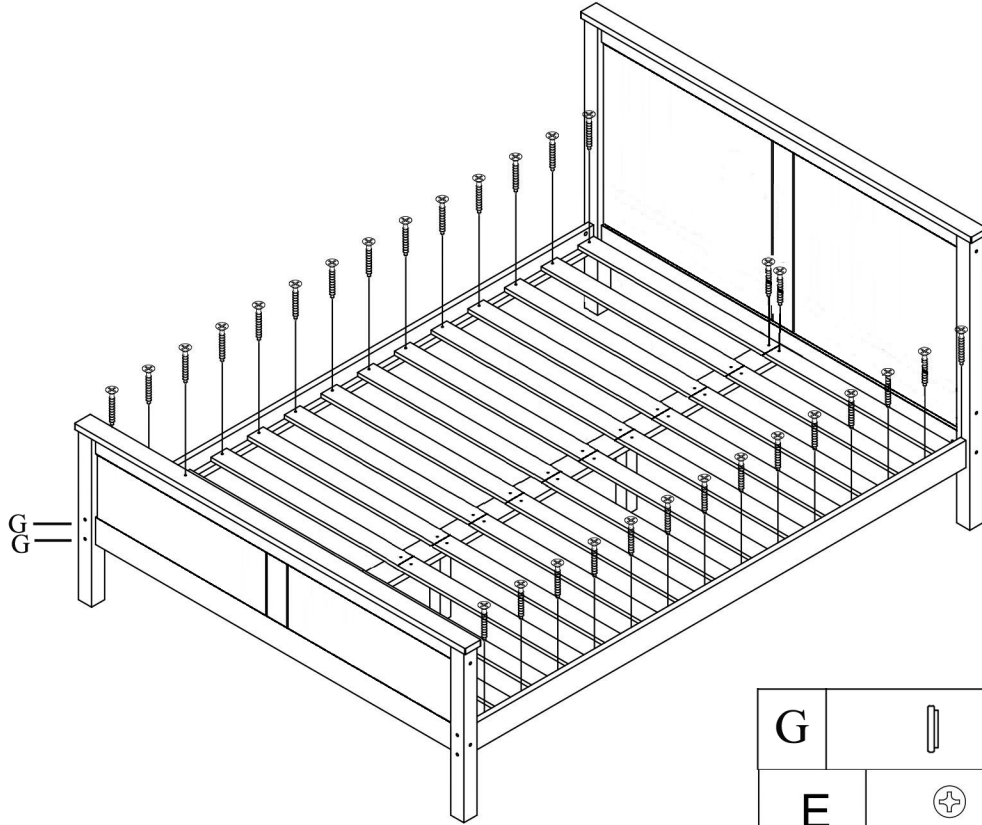

C	 Ø7x60mm	2
E	 Ø4x30mm	2

Krok 3



G			Ø15mm	8
E			Ø4x30mm	72

