





VERDI, posteľ 90x200




B1206


Montážny návod

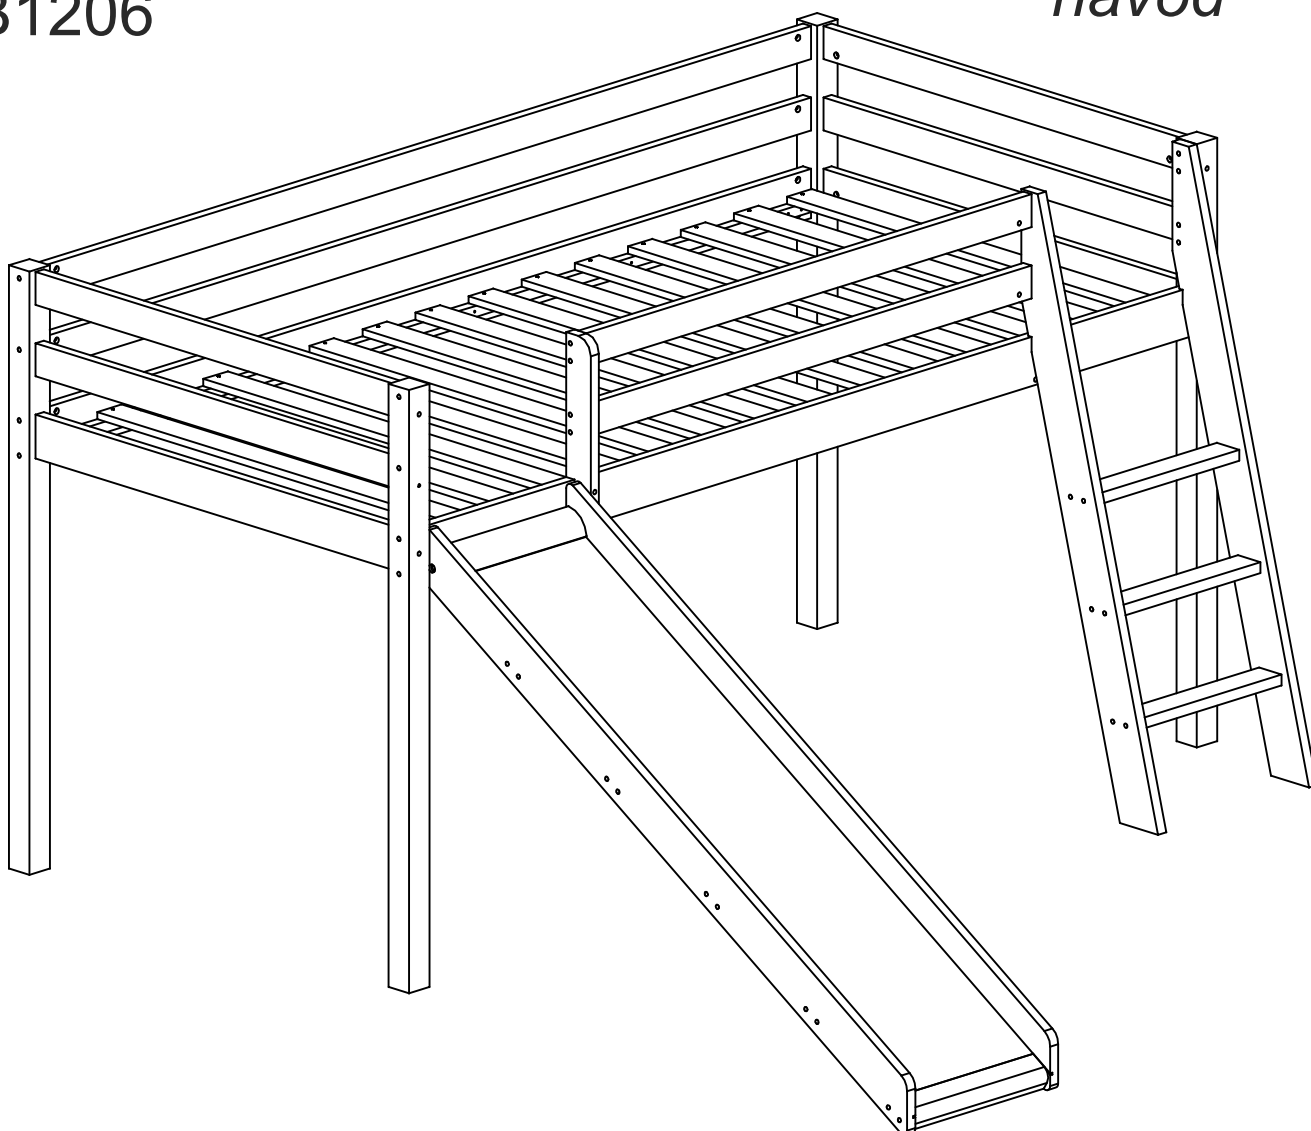


Súčiastky

A	 15mm M6x100mm	20
B		24
C	 15mm M6x70mm	06
D	 15mm M6x60mm	02
E	 15mm M8x20mm	04
F	 Ø8x30mm	34

G		02
H	 8mm Ø4x30mm	40
I	 15mm Ø6x70mm	35
J		02
K	 8mm Ø4x16mm	04
L	 Ø8mm	16

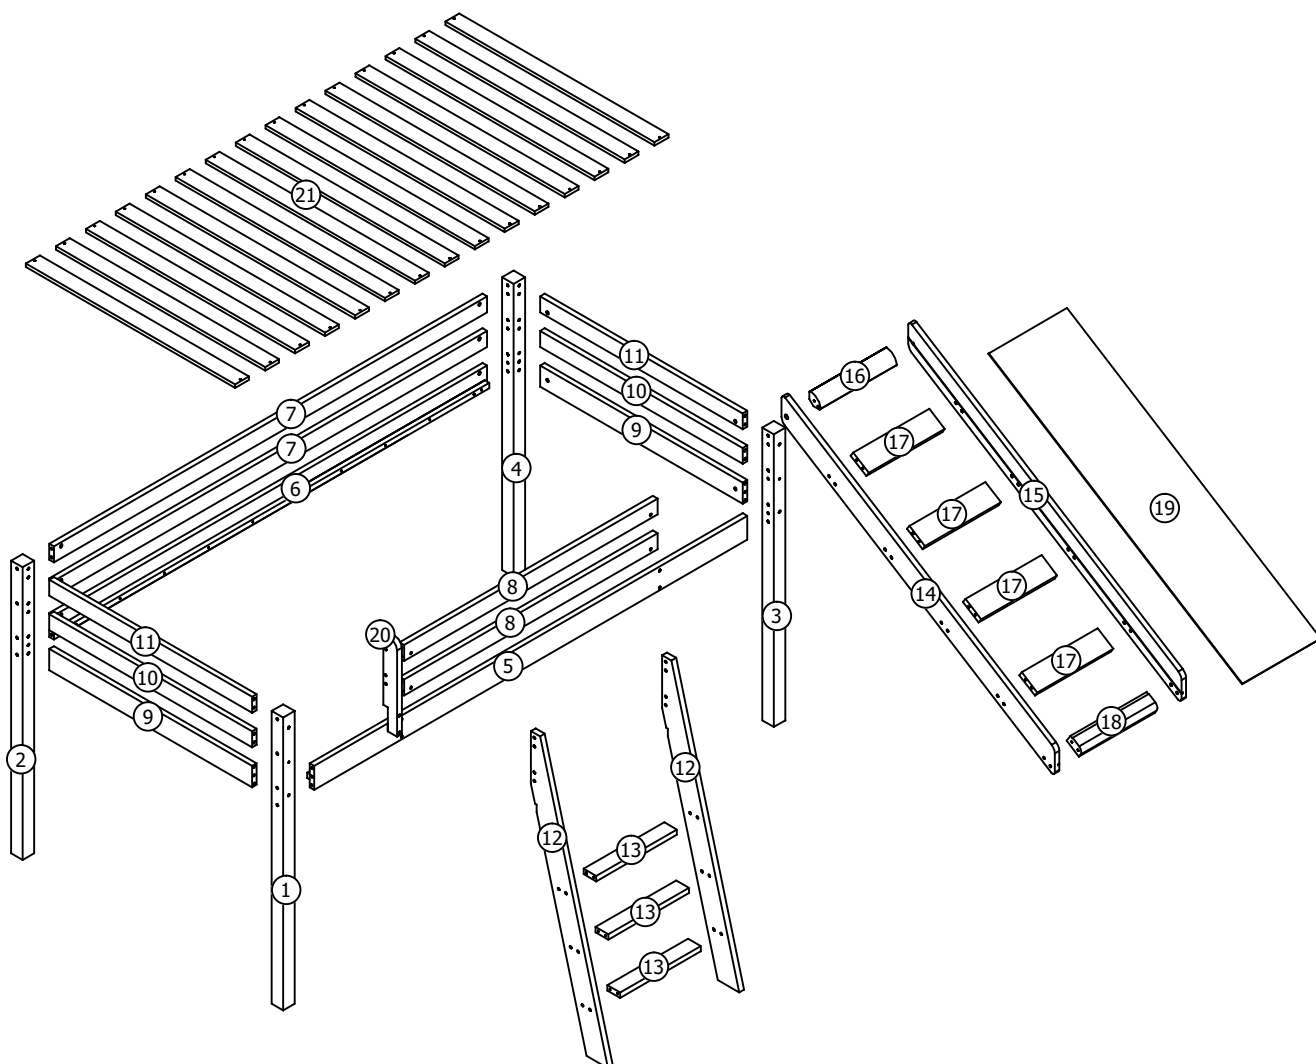



01

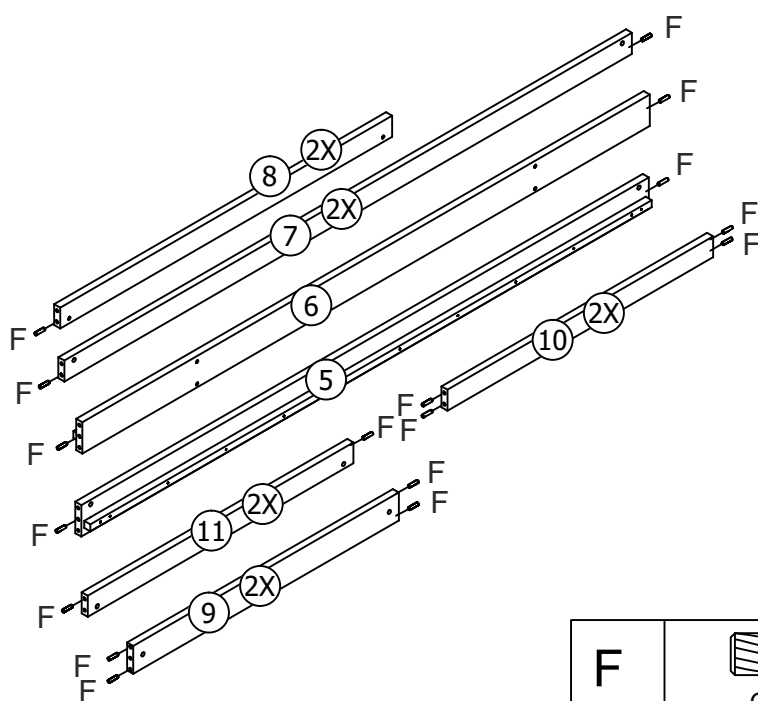


F	 Ø8x30mm	30
---	--	----


02

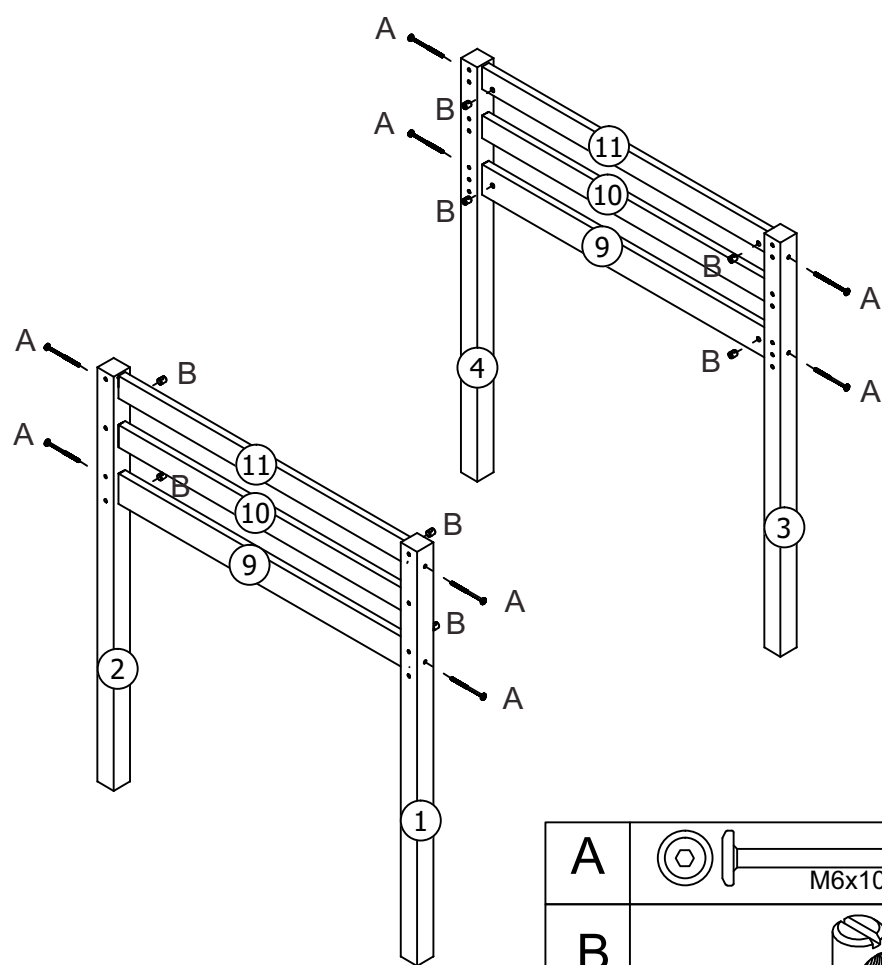


A	 M6x100mm	08
B		08

03

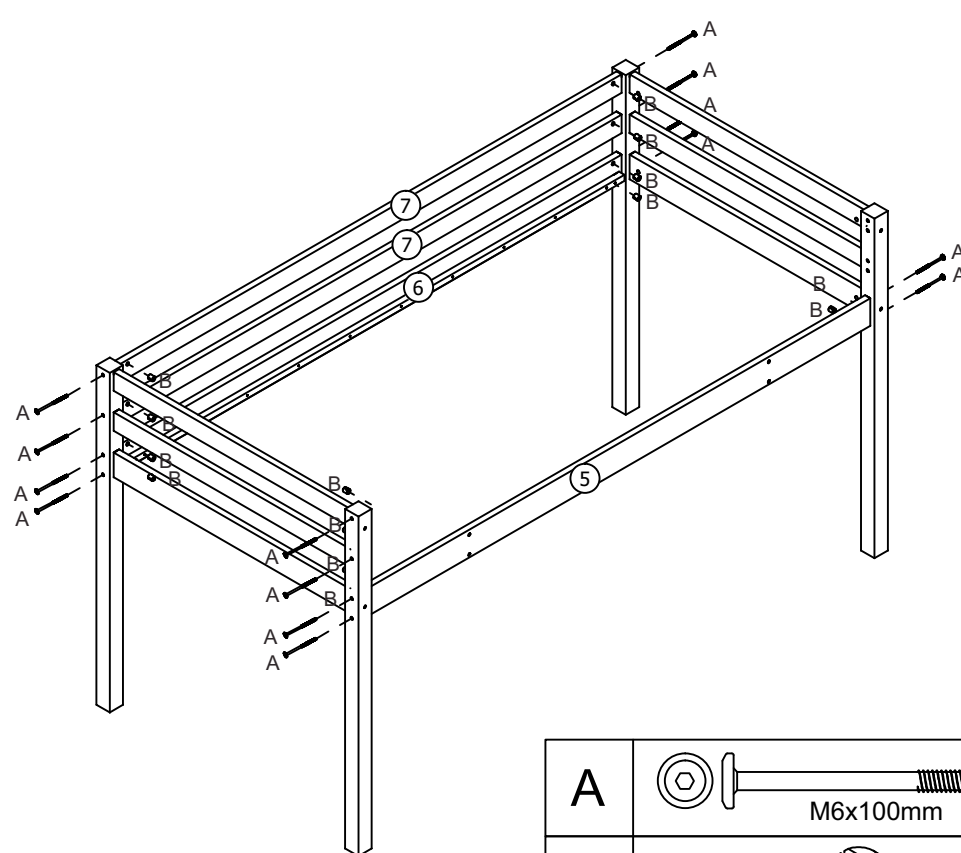


A	 M6x100mm	14
B		14

04

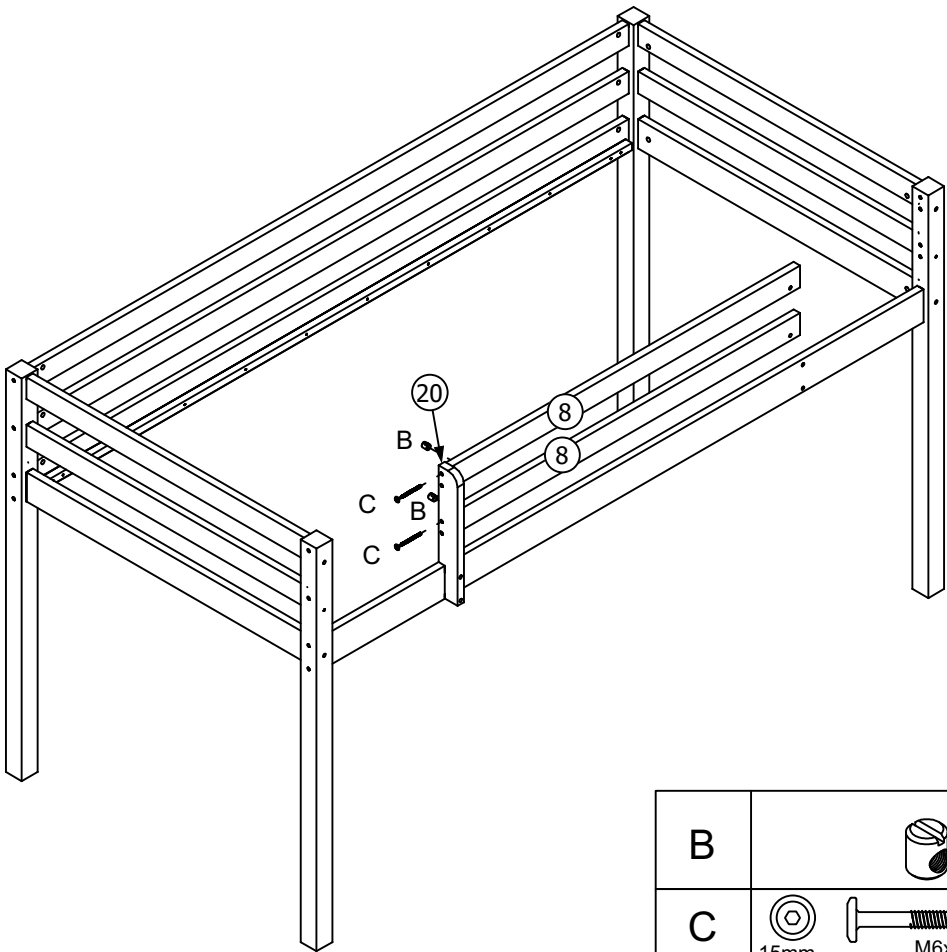


B		02
C	 15mm  M6x70mm	02

05

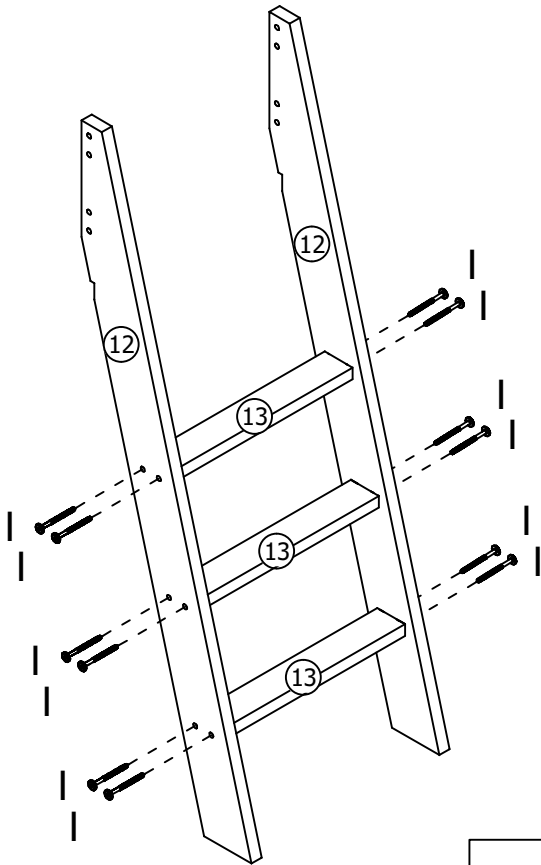


I	 15mm  Ø6x70mm	12
---	--	----



06

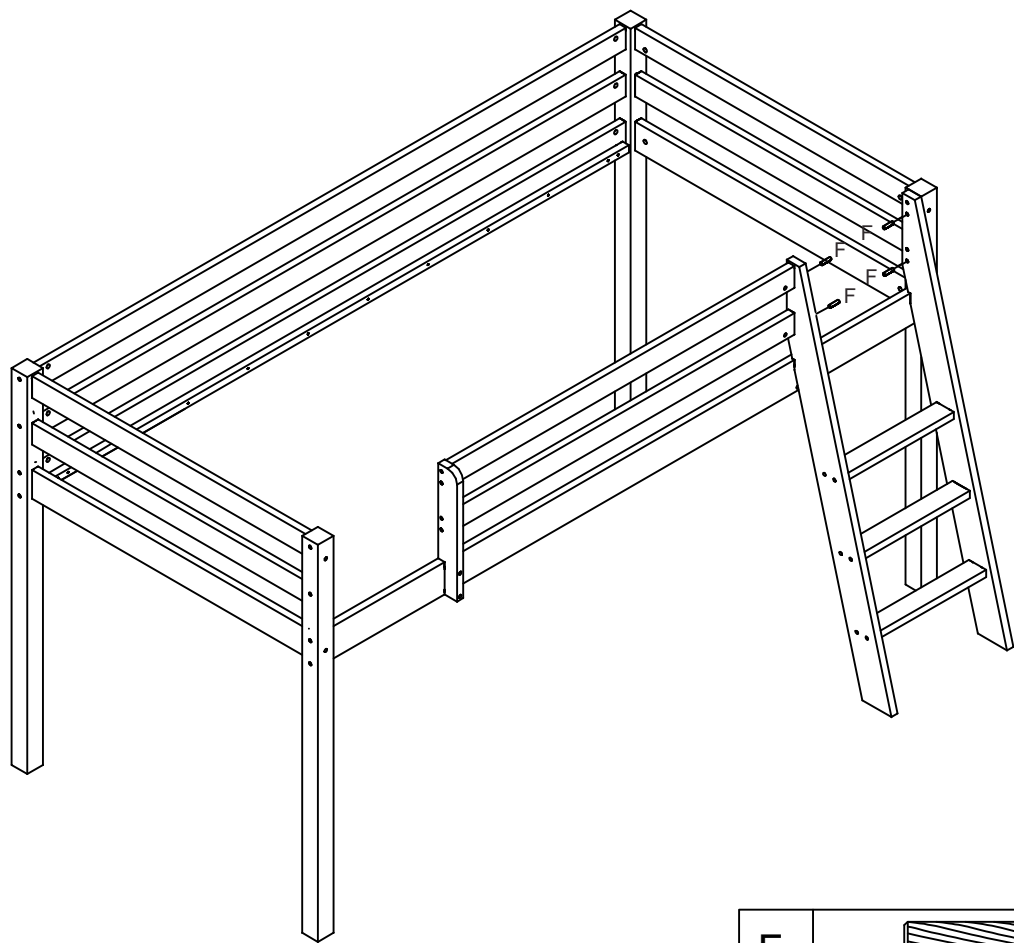



F	 Ø8x30mm	04
---	--	----

07

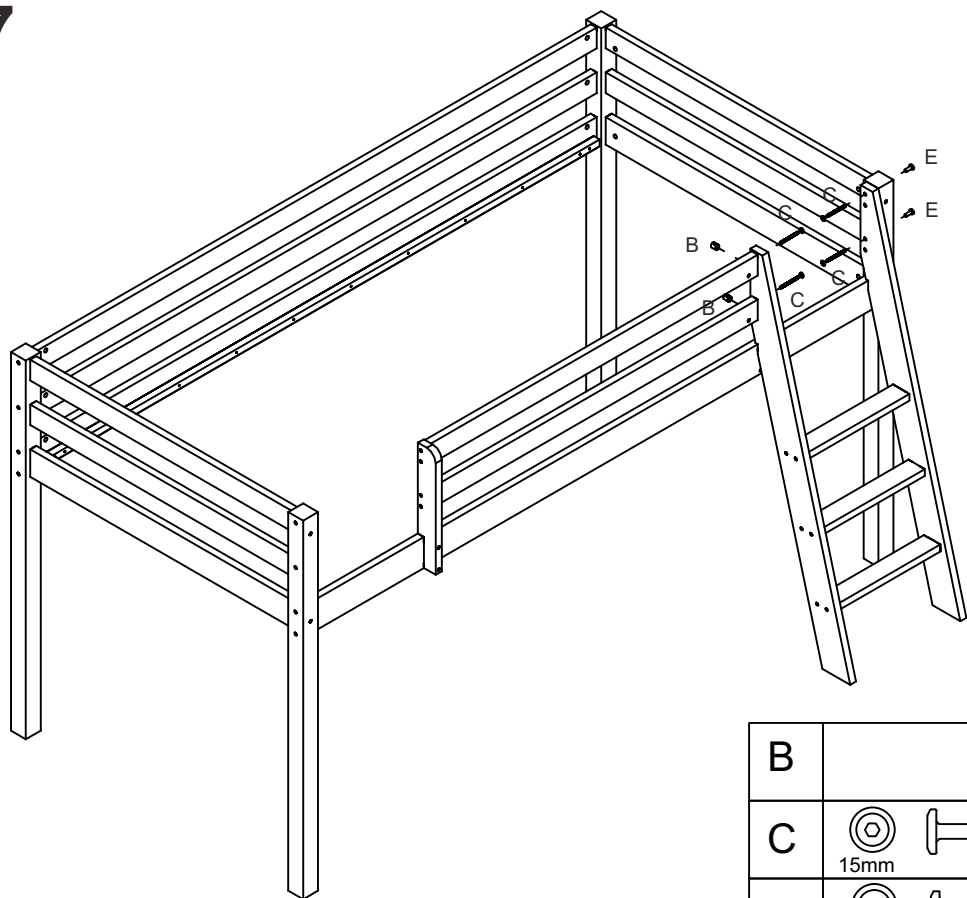



B		02
C	 15mm M6x70mm	02
E	 15mm	02

08

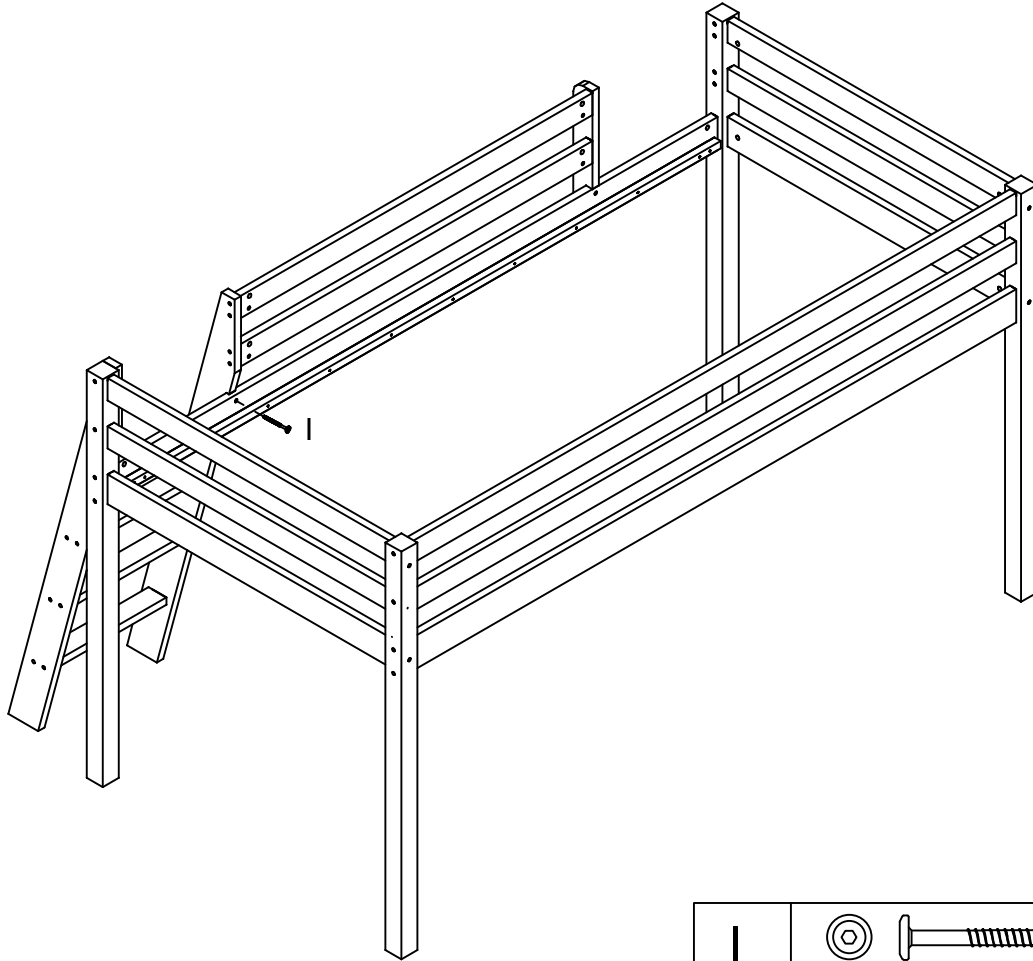


35




09

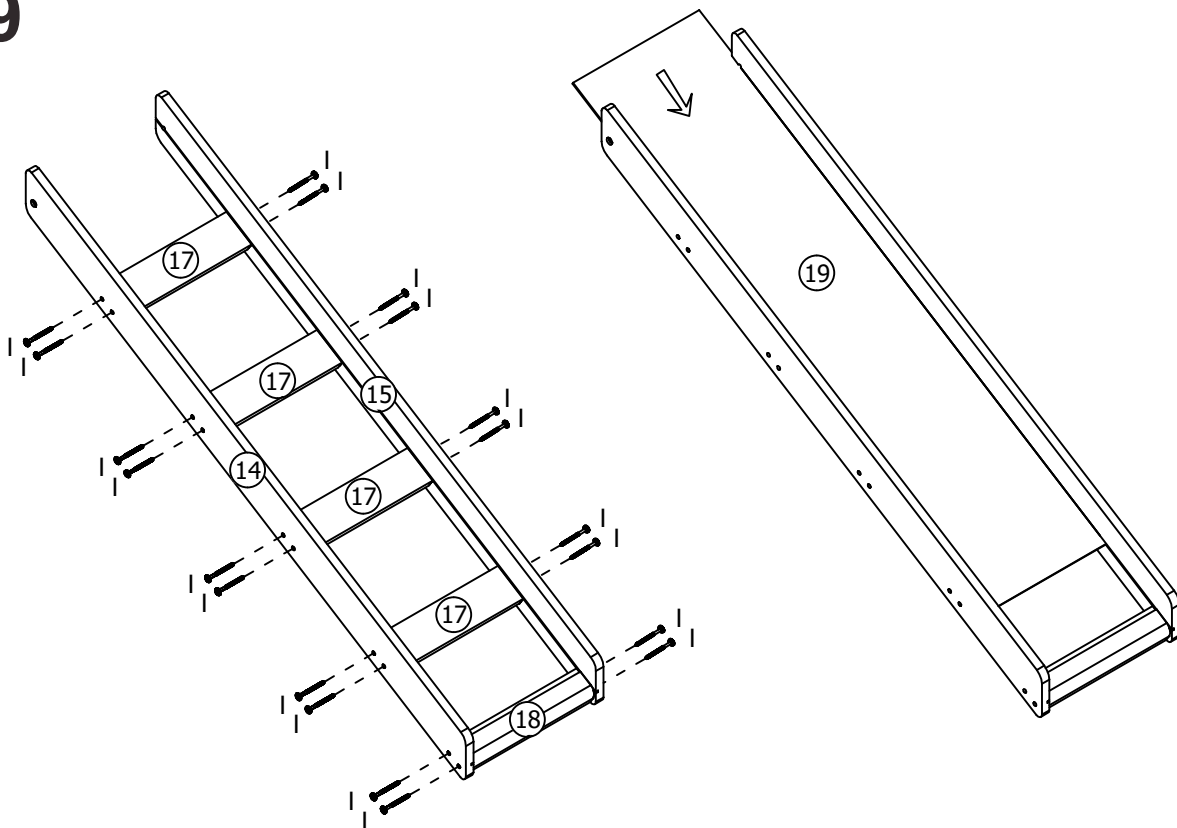


20


10

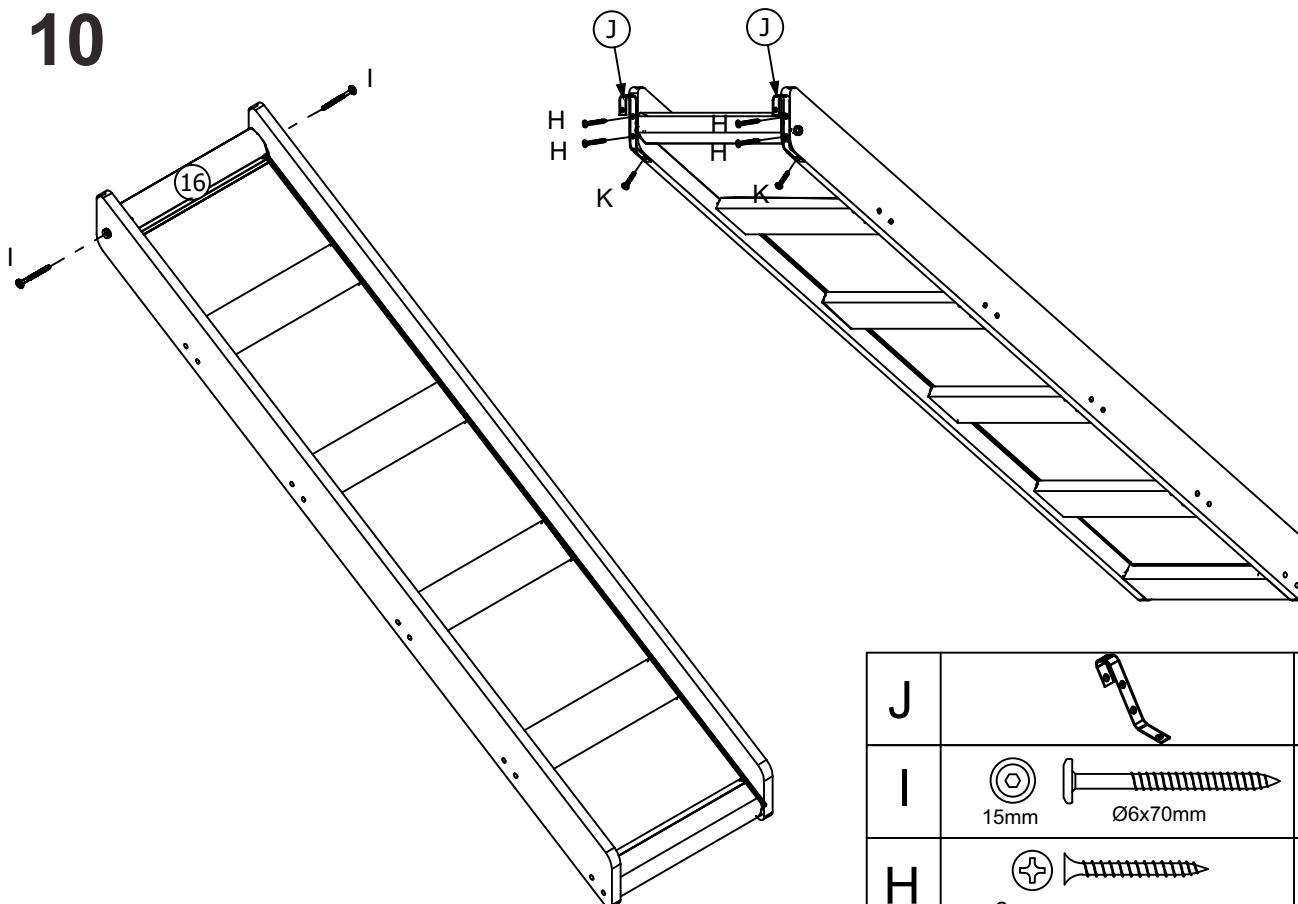


J		02
I	 15mm Ø6x70mm	35
H	 8mm Ø4x30mm	04
K	 8mm Ø4x16mm	02

11

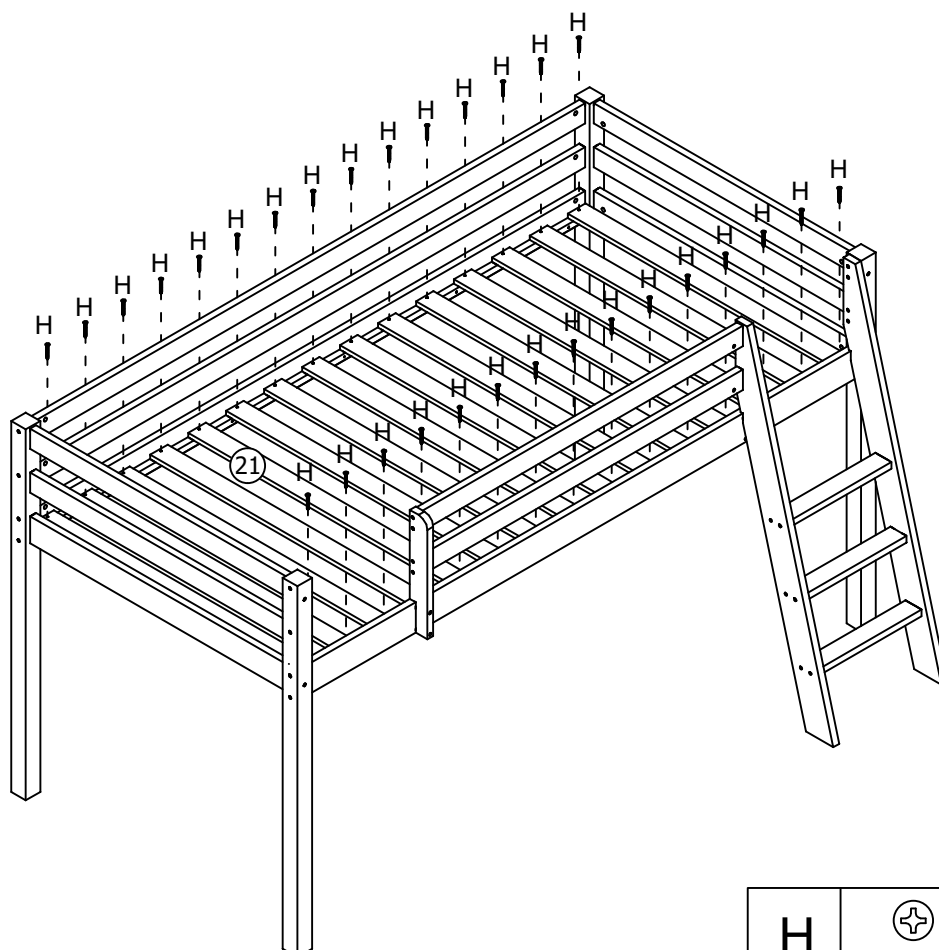


H	 8mm Ø4x30mm	36
---	---	----

12

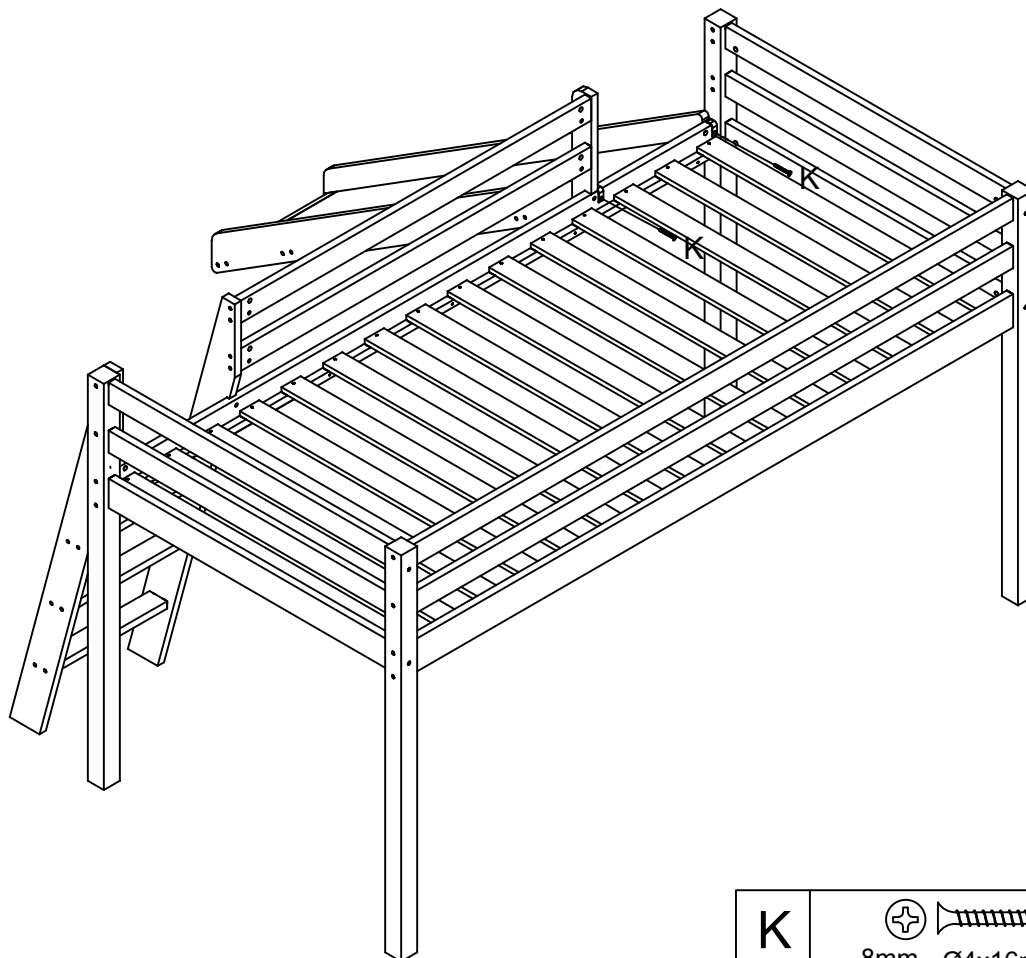


K



02

13

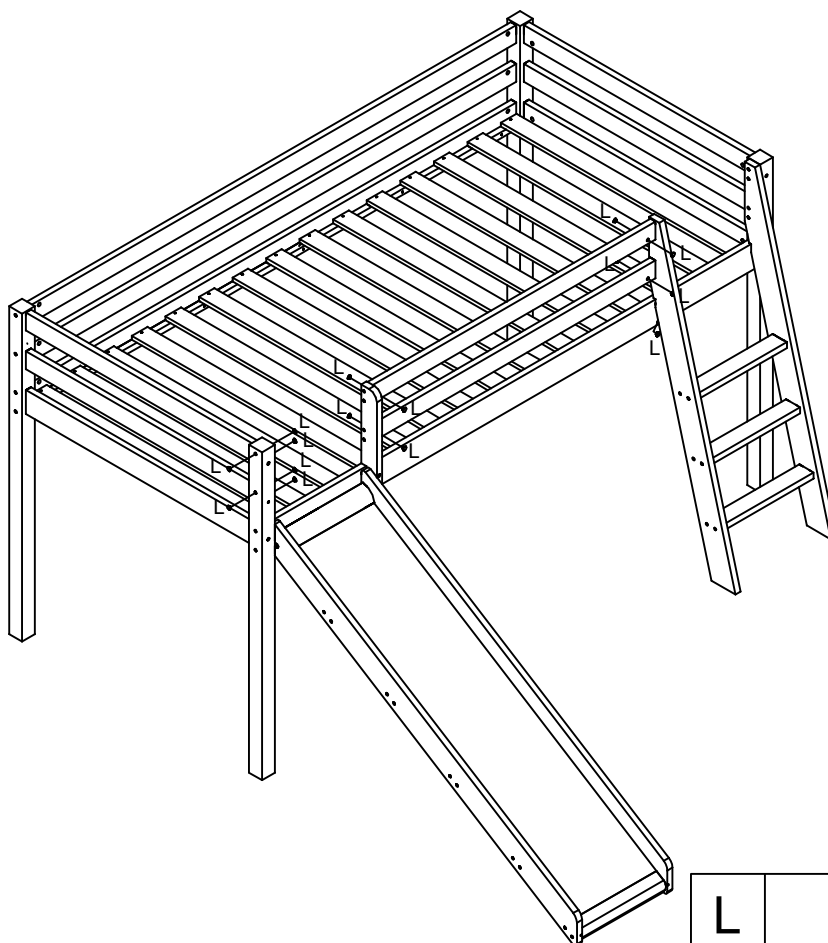

L



16

