


Skriň je nutno dle montážního návodu upevnit kr zdi.
 Dieser Shrank muss an der Wand befestigt sein.
 Wardrobe must be fasten to the wall.

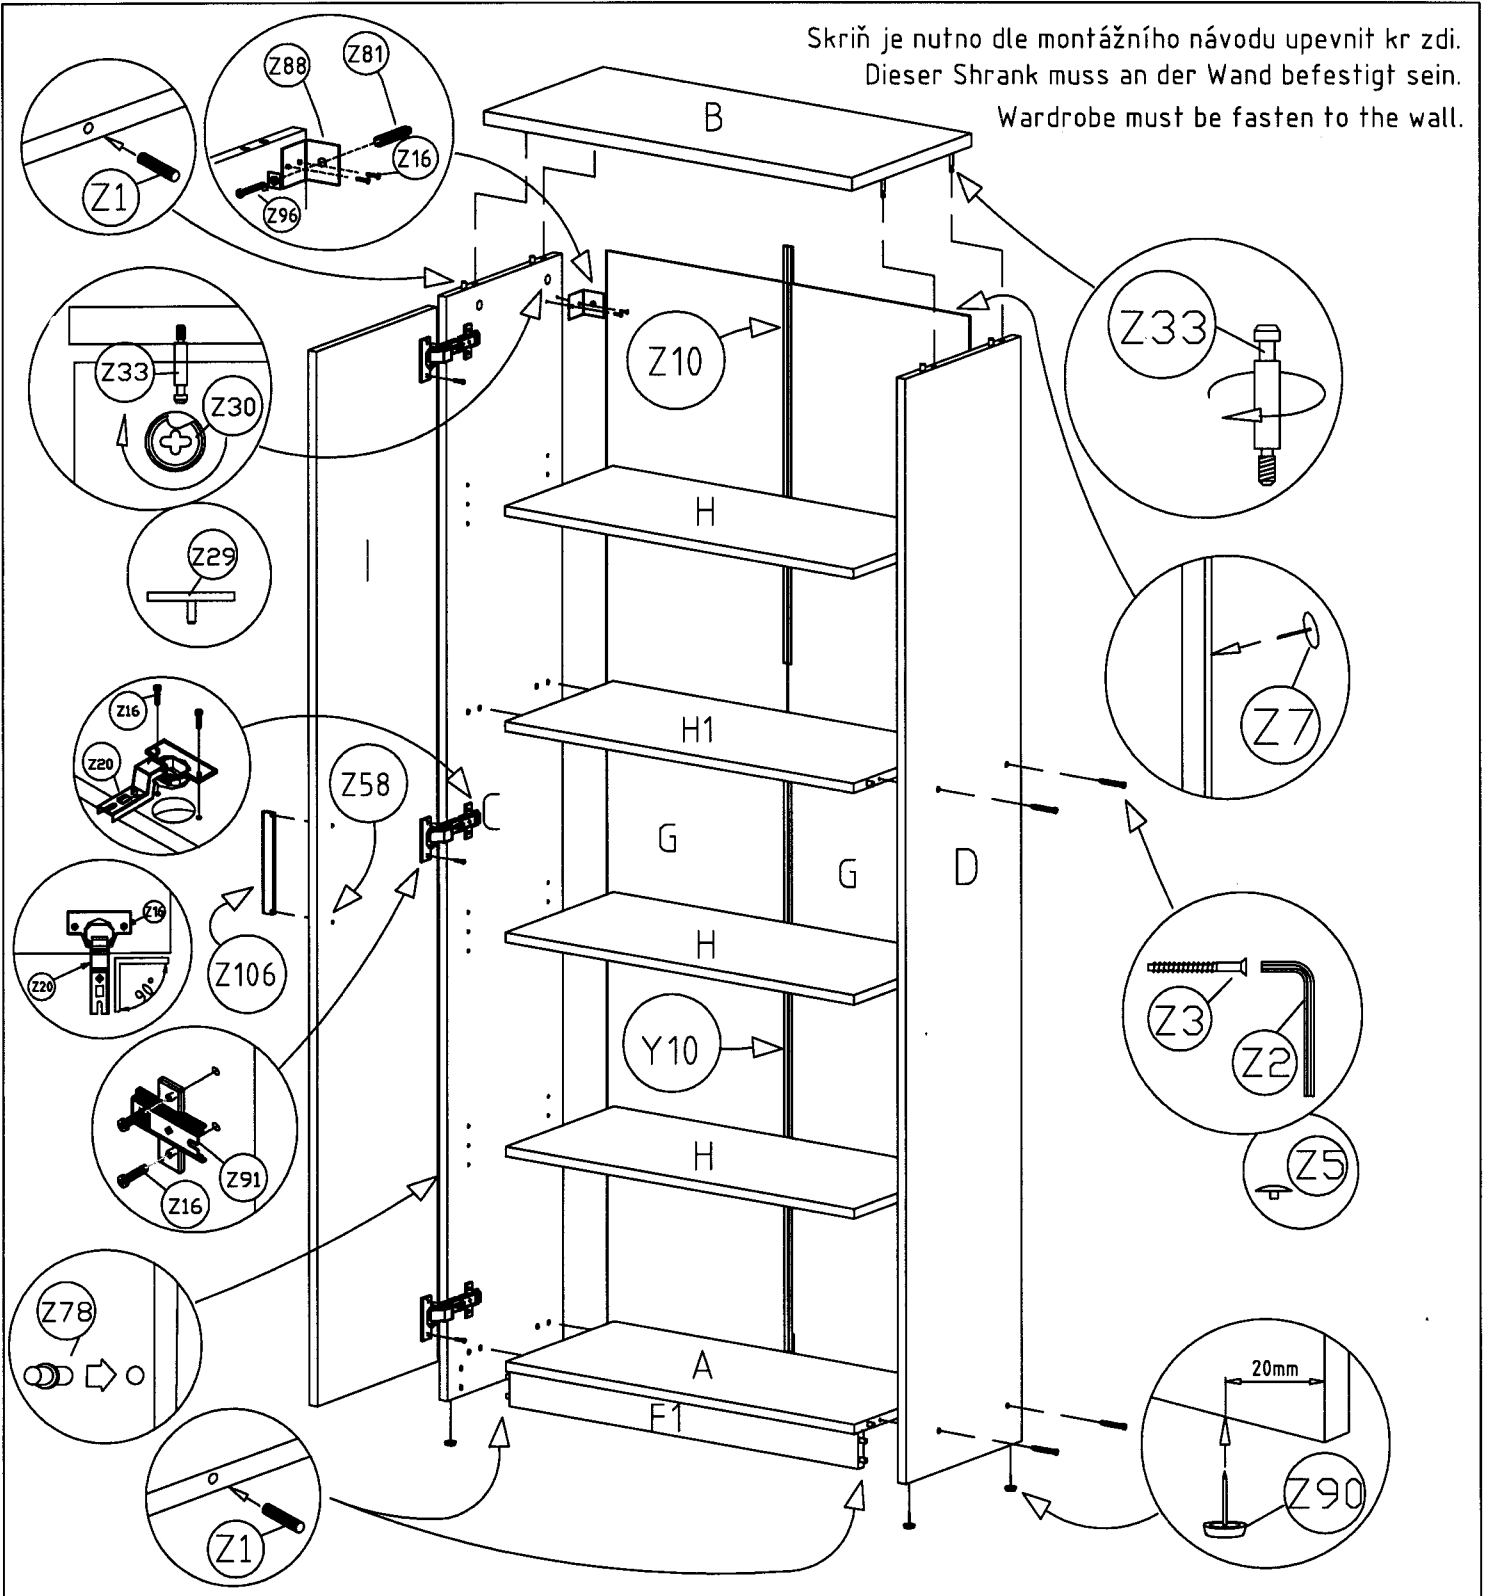

A,H,H1	685x304	5x	Z1		16x	Y10		1046mm	1x	Z78		12x				
B	723x335	2x	Z2		1x	Z16		vrut 3.5x16	28x	Z81		2x				
C,D	1833x325	2x	Z3		8x	Z29			4x	Z96		vrut 5x50	2x			
G	1789x355	2x	Z5		8x	Z30			4x	Z90			4x			
F	685x60	1x	Z7		40x	Z33			4x	Z88			2x			
I	1751x338	2x	Z10		692mm	1x	Z20		6x	Z106		2x	Z58		vrut 4x30	4x