









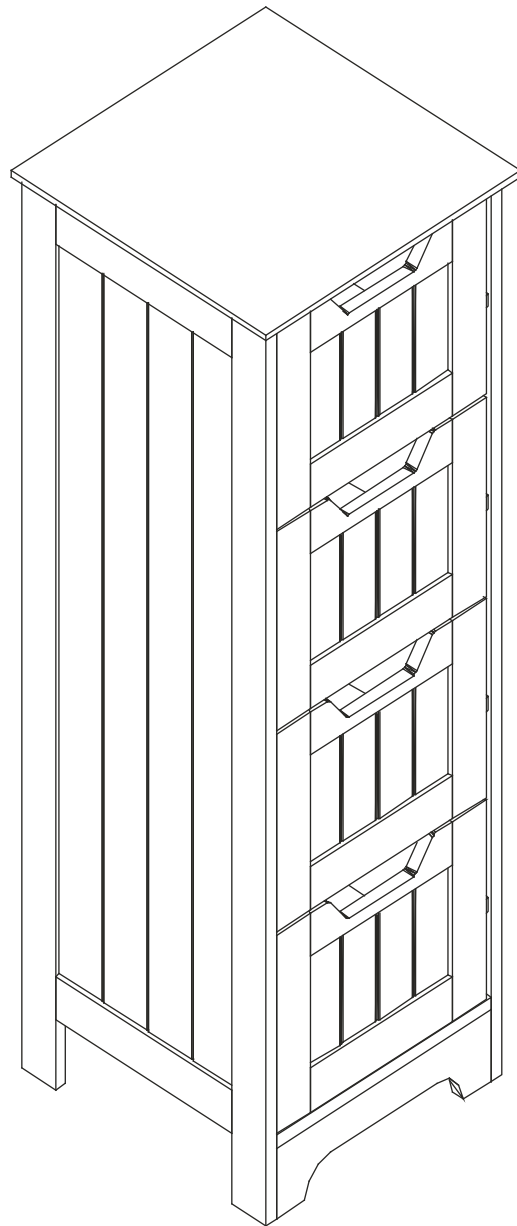





# ATENE TYP7

BWF0909



Montážny návod




# Časti

		Ks	H		8ks
A		1ks	I		8ks
B		1ks	J		4ks
C		1ks	K		4ks
D		1ks	L		2ks
E		1ks	M		1ks
F		1ks			
G		4ks			


# Súčiastky

		Ks	5		8ks
1		22ks	6	 3x14mm	16ks
2		10ks	7	 2.5x10	16ks
3		10ks			
4	 3x25mm	32ks			


# Krok 1

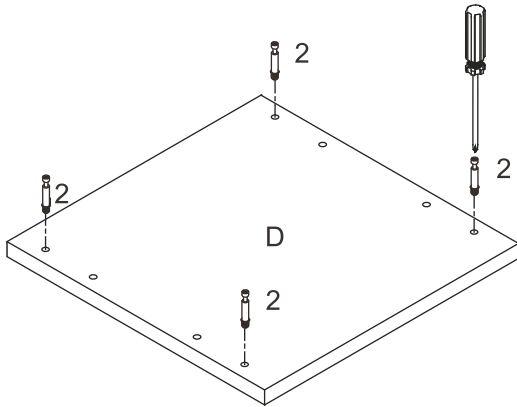


# Krok 2

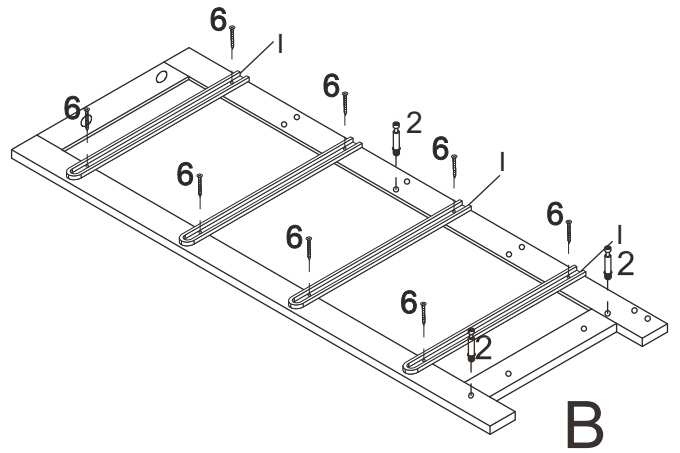


# Krok 3

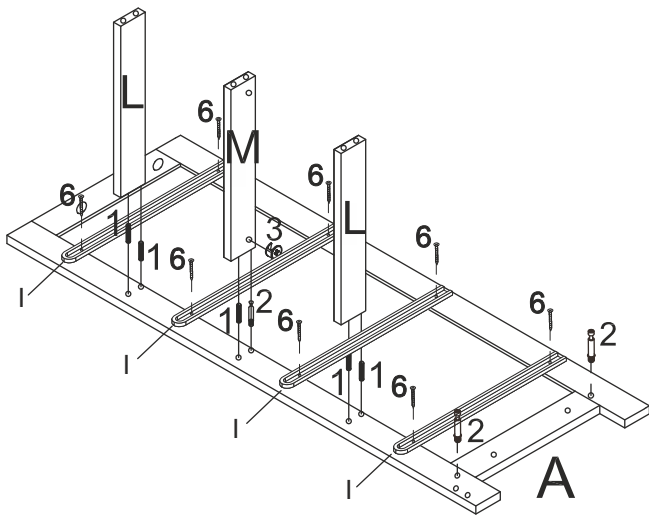


# Krok 4

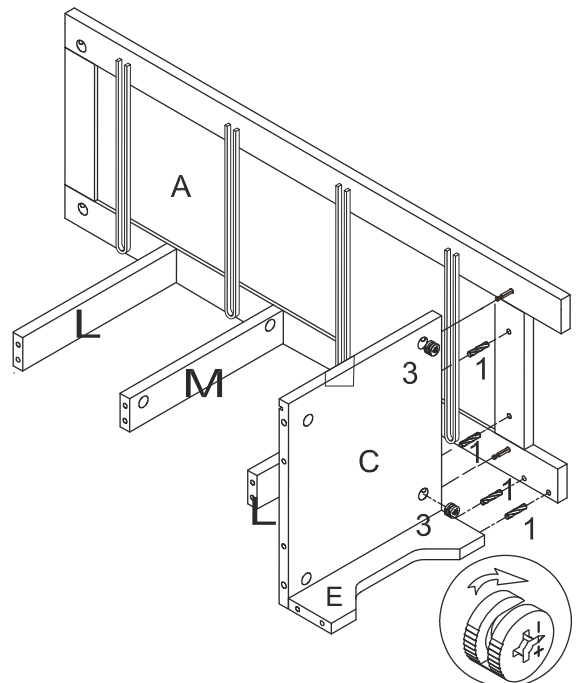


## Krok 5

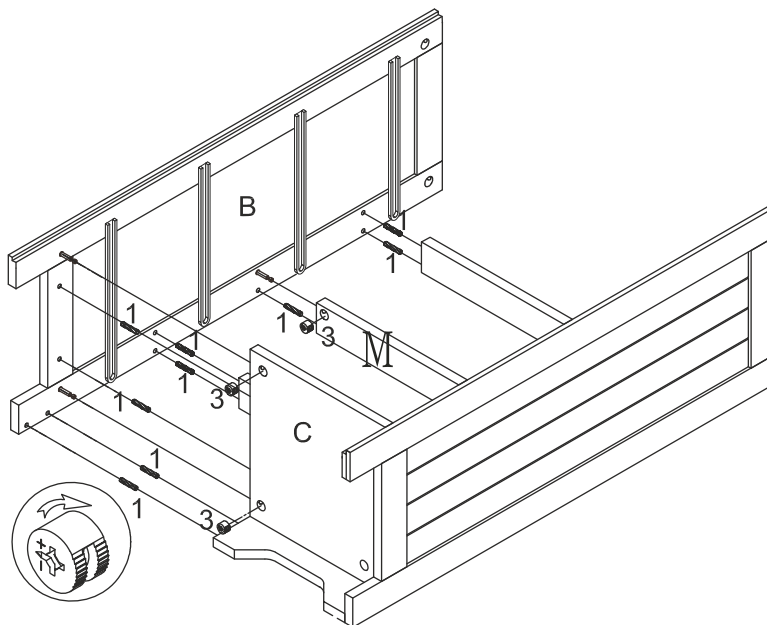


## Krok 6

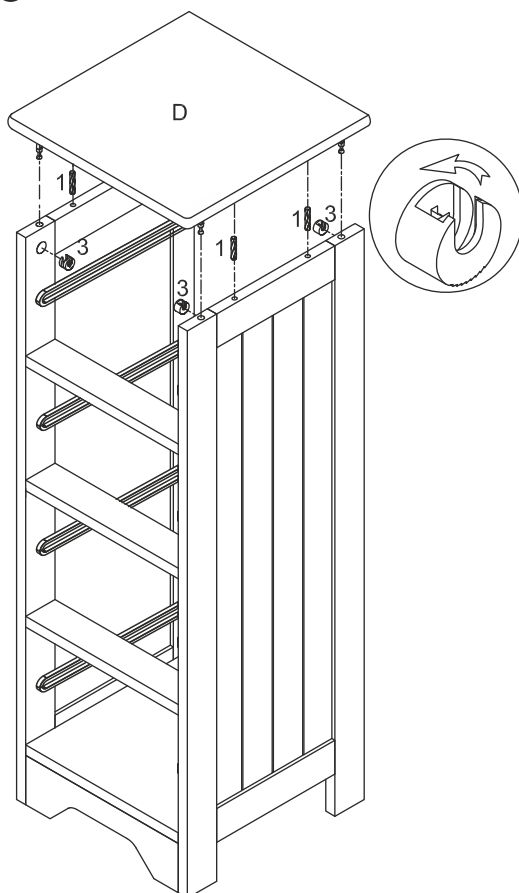


## Krok 7

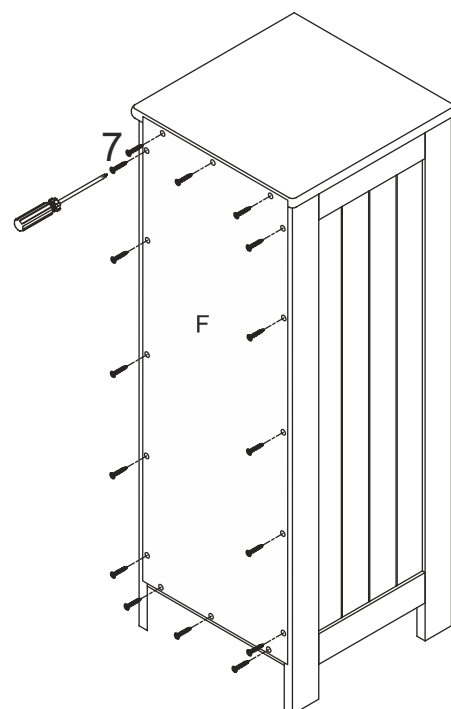

## Krok 8

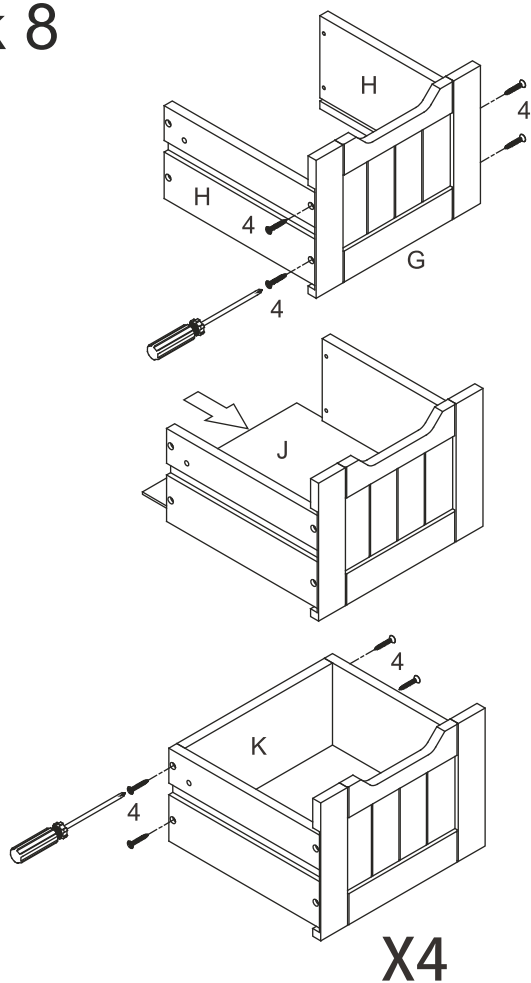

## Krok 9

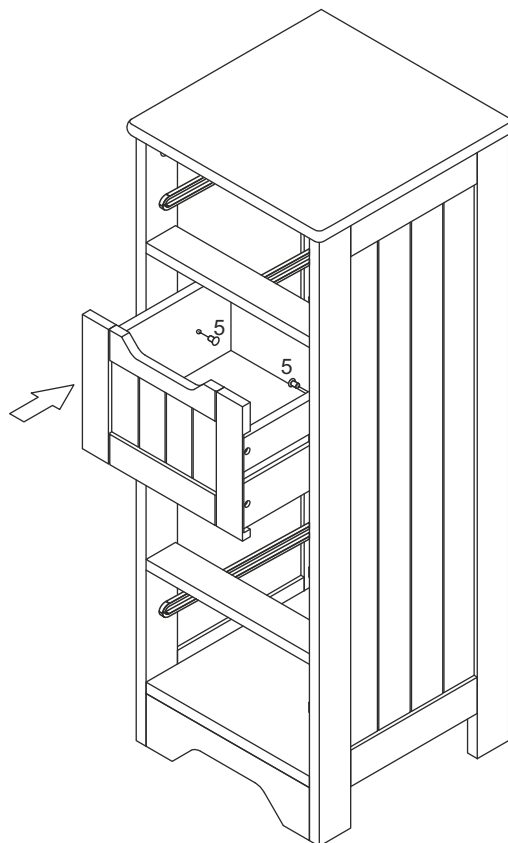

## Krok 10

