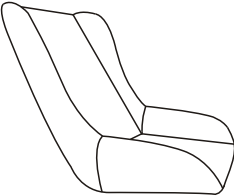
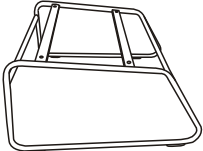
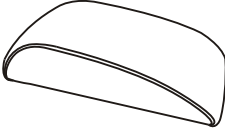






Návod na montáž - LOMAN D-90055

Ax1 	Fx1 
Bx1 	Gx8 
Cx1 	Hx1 
Dx1 	
Ex1 