




www.MLMEBLE.pl

GB D CZ SK RUS LT  
assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija

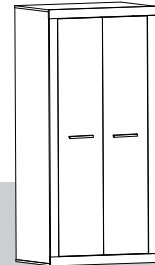


## INSTRUKCJA MONTAŻU

**MODERN 02**  
 202 92 64

akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксессуары / furnitūra :

x 24  KK 8/32	x 20  GZ 1,4/25	x 42  MD	x 28  ZAM	x 4  UB 0	x 12  PA Ø5	x 20  WT 3,5x16	x 6  ZPR	x 6  PK H-2	x 12  WE 6,3x13	x 4  WT 4x30
x 13  BDP	x 2  drażek / stick / stock / hůl / palica / трость / strypas	x 10  SP	x 2  UT 1.151	x 5  SA H20	x 1  klej / glue / kleber / lepidlo / lepidlo / клей / klijat					

**do montażu potrzebne są:**  
 are needed for assembly:  
 sind erforderlich für die montage:  
 jsou potřebné pro montáž:  
 sú potrebné pre montáž:  
 которые необходимы для сборки:  
 Surinkimui reikės:

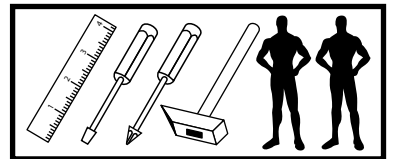

**UWAGA !** - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w białe oraz boki.  
**WARNING!** - The first accessory sticks "KK" and "MD" in the tops and sides.  
**WARNUNG!** - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.  
**POZOR!** - První příslušenství holi "KK" a "MD" v korunách a boky.  
**ПОЗОР!** - Пръвe прислушенство палочки "KK" и "MD" по вершинам и по бокам.  
**DÉMESIO!** - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

Nr/No	Szt/Qty
1	1
2	1
3	1
4	1
5	1
6	3
7	1
8	1
9	1
10	2
11	2
12	2

