




www.MLMEBLE.pl

GB D CZ SK AUS LT
assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija

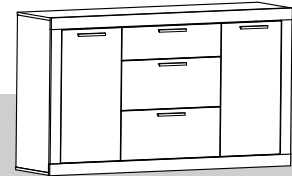

INSTRUKCJA MONTAŻU


MODERN 08

↑ 97 → 165 ↘ 42

akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксесуары / furnitūra :


| | | | | | | | | | | |
|----------------------|-------------------------|-------------------|---------------------|-----------------------|-----------------------|-----------------------|---------------------|---|--|---------------|
| x 28 KK 8/32 | x 8 KT 6,3/50 | x 42 MD | x 18 ZAM | x 10 GZ 1,4/25 | x 45 WTLP 3x16 | x 14 WT 3,5x16 | x 10 WT 4x30 | x 4 ZPR | x 4 PK H-2 | x 8 SP |
| x 8 WE 6,3x13 | x 18 WE 6,3x13ES | x 8 SA H20 | x 5 UT 1.151 | x 10 BDP | x 3 PK L-350 | x 8 PA Ø5 | x 3 WS L350 | x 1 klej / glue / kleber / lepidlo / lepidlo / клей / klijaj | x 1 kluczyk / key / schlüssel / klíč / ключ / ключ / raktas | |

do montażu potrzebne są:
are needed for assembly:
sind erforderlich für die montage:
jsou potřebné pro montáž:
sú potrebné pre montáž:
которые необходимы для сборки:
Surinkimui reikės:

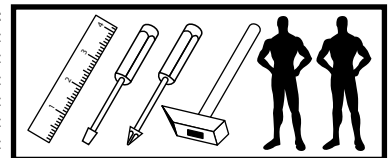

! UWAGA! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holi "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palic "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
DĚMESIO! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

| Nr/No | Szt/Qty |
|-------|---------|
| 1 | 1 |
| 2 | 1 |
| 3 | 1 |
| 4 | 1 |
| 5 | 1 |
| 6 | 1 |
| 7 | 2 |
| 8 | 1 |
| 9 | 2 |
| 10 | 2 |
| 11 | 2 |
| 12 | 1 |
| 13 | 2 |
| 14 | 1 |
| 15 | 1 |
| 16 | 1 |
| 17 | 2 |
| 18 | 2 |
| 19 | 2 |
| 20 | 2 |
| 21 | 2 |
| 22 | 2 |

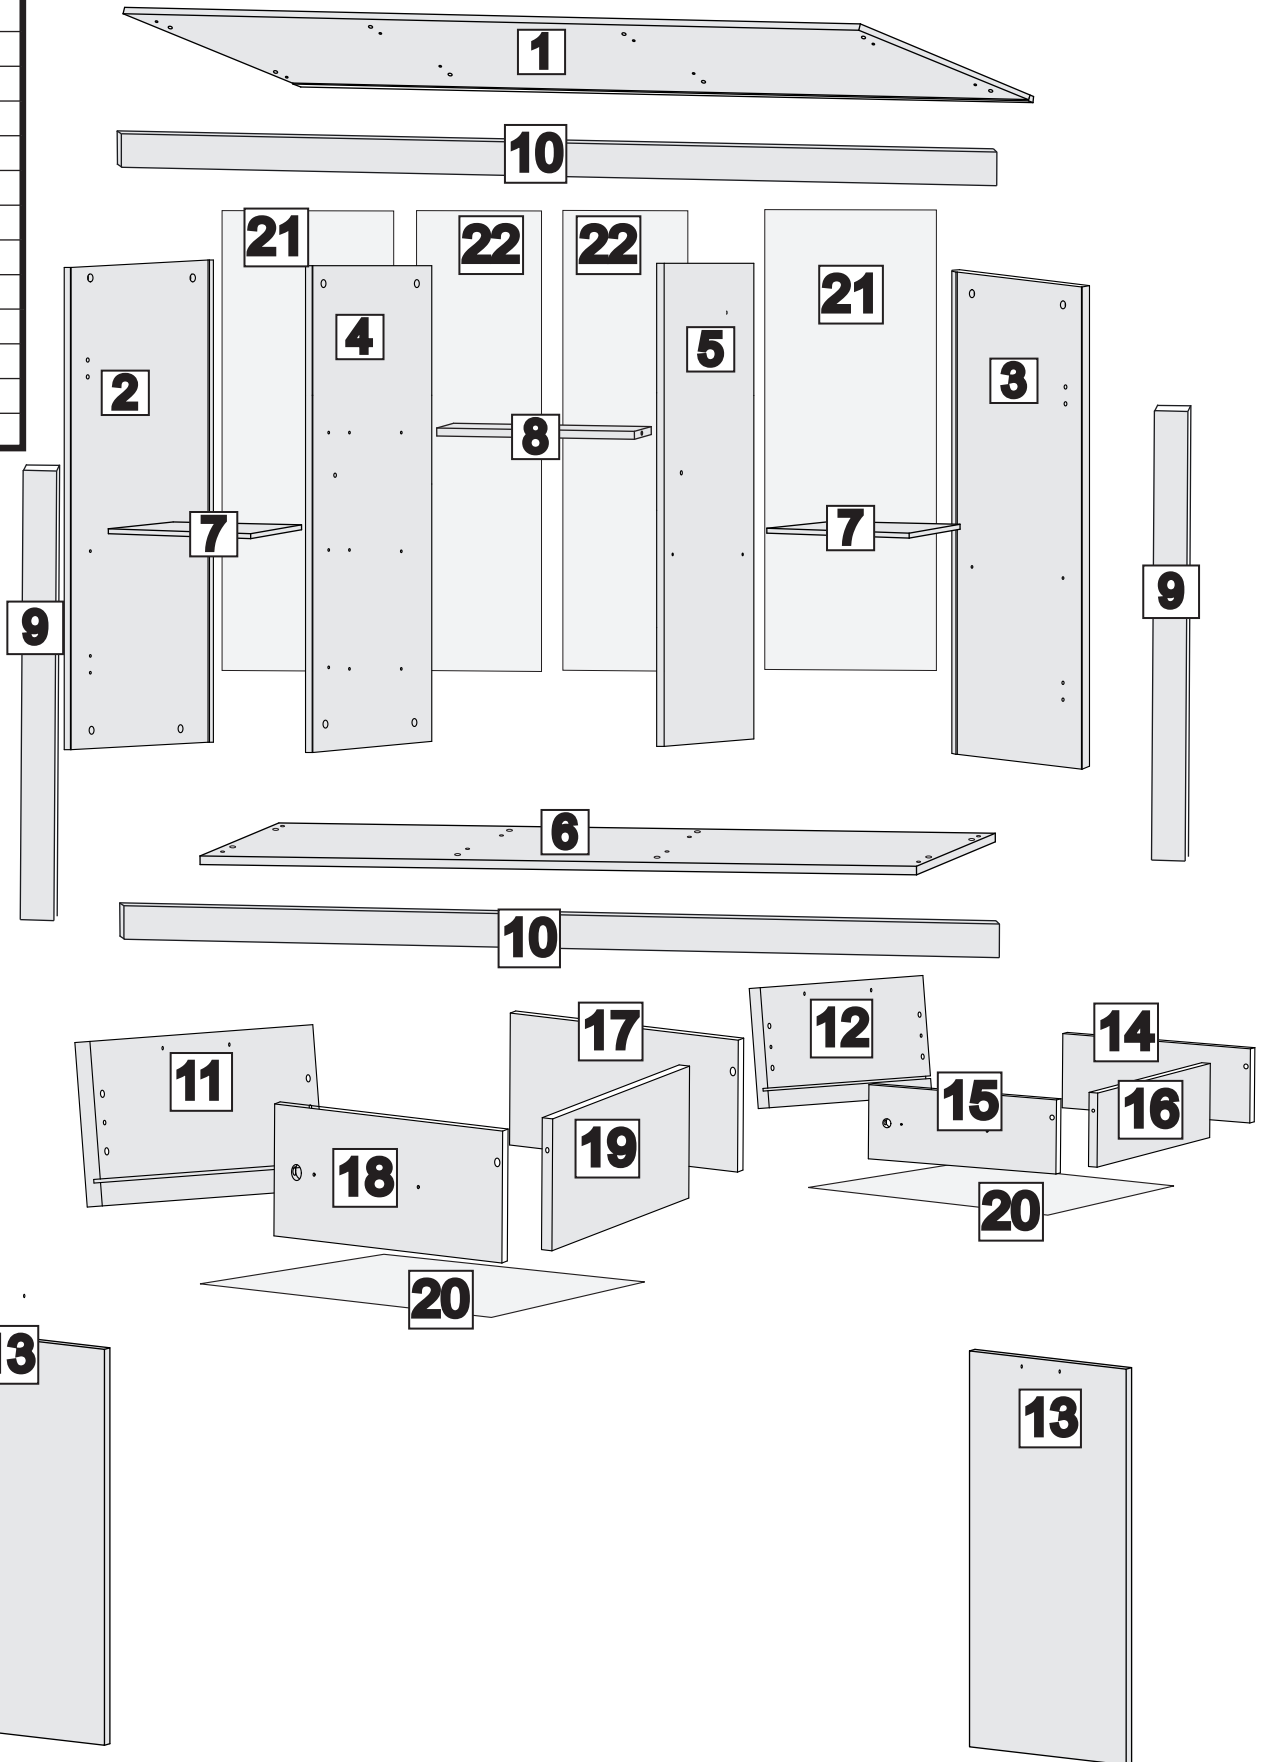

! UWAGA! - Wypinanie prowadnicy
! WARNING! - guides disassembling
! WARNUNG! - Ausstecken Führer
! POZOR! - vytažení pojezdů
! POZOR! - sprievodca pre montáž nábytku
! ВНИМАНИЕ! - демонтаж направляющих
! DĒMESIO! - Išrinkimas atskyrimas

