




www.MLMEBLE.pl

GB D CZ SK AUS LT
assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija



INSTRUKCJA MONTAŻU



MODERN 22


↑ 43 → 138 ↘ 31

akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксесуары / furnitūra :

x 16 KK 8/32	x 4 KT 6,3/50	x 34 MD	x 26 ZAM	x 4 ZAN	x 20 GZ 1,4/25	x 8 SP	x 2 ZAR	x 6 WT 4x30	x 3 ZWA	x 1 klej / glue / kleber / lepidlo / lepidlo / клеј / kljaj
---------------------	----------------------	----------------	-----------------	----------------	-----------------------	---------------	----------------	--------------------	----------------	--

x 1 kluczyk / key / schlüssel / ključ / ключ / raktas
--

do montażu potrzebne są:
are needed for assembly:
sind erforderlich für die montage:
jsou potřebné pro montáž:
sú potrebné pre montáž:
которые необходимы для сборки:
Surinkimui reikės:

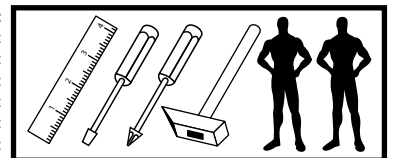

UWAGA ! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w białe oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holi "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palic "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
DĚMESIO! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

Nr/No	Szt/Qty
1	1
2	1
3	1
4	1
5	1
6	2
7	1
8	1
9	1
10	1
11	2
12	2
13	1
14	1
15	1
16	3
17	3
18	3
19	3
20	1
21	1

