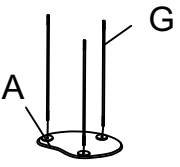
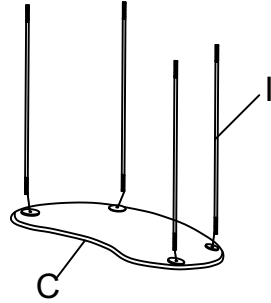
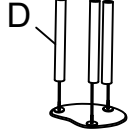
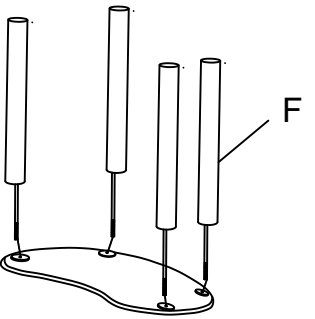
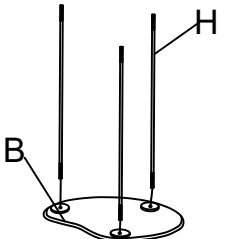
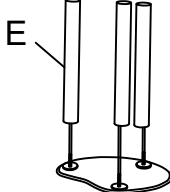
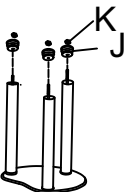
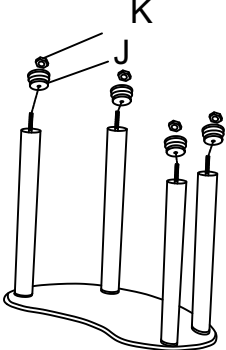

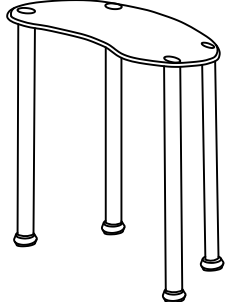
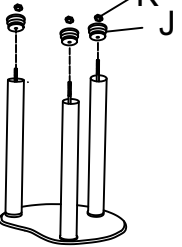













# NORMAN KONFERENČNÝ STOLÍK MONTÁŽNY NÁVOD Ct701

Step 1		Step 2	
			
			
Step 3		Step 4	
			
			

A		x1
B		x1
C		x1
D		x3
E		x3
F		x4
G		x3
H		x3
I		x4
J		x10
K		x10