
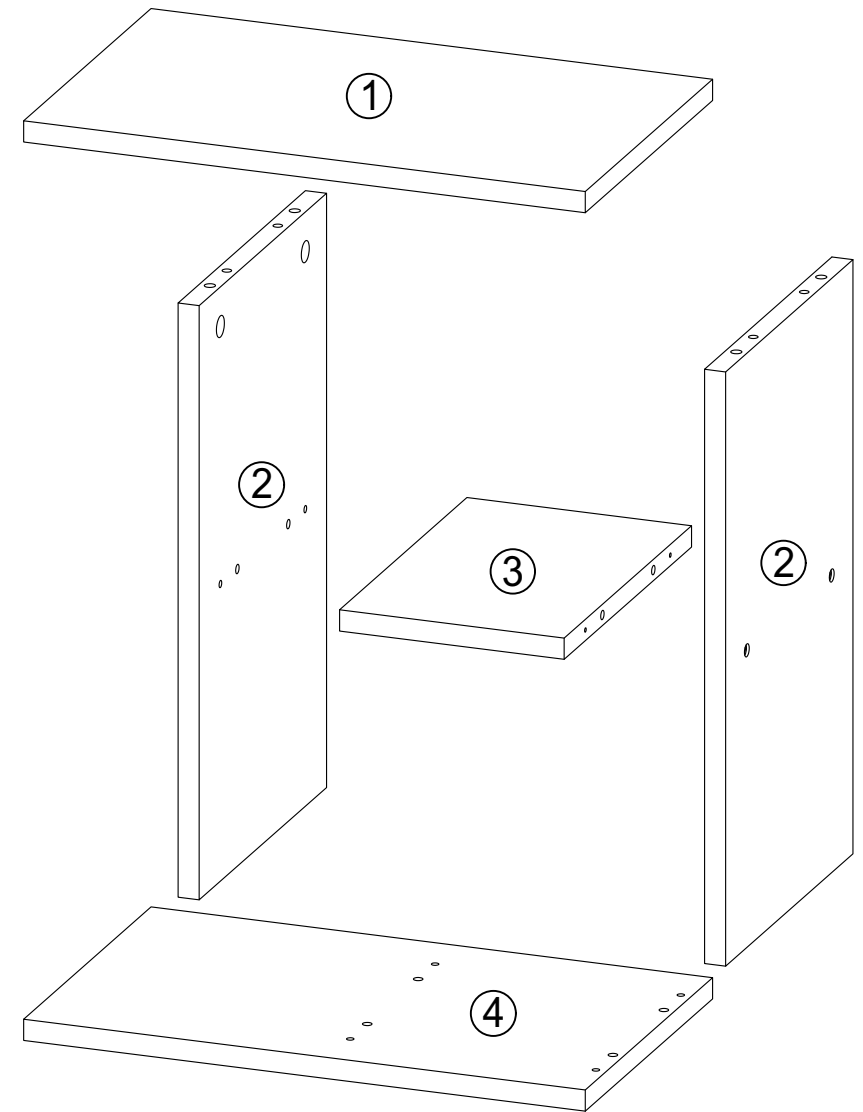
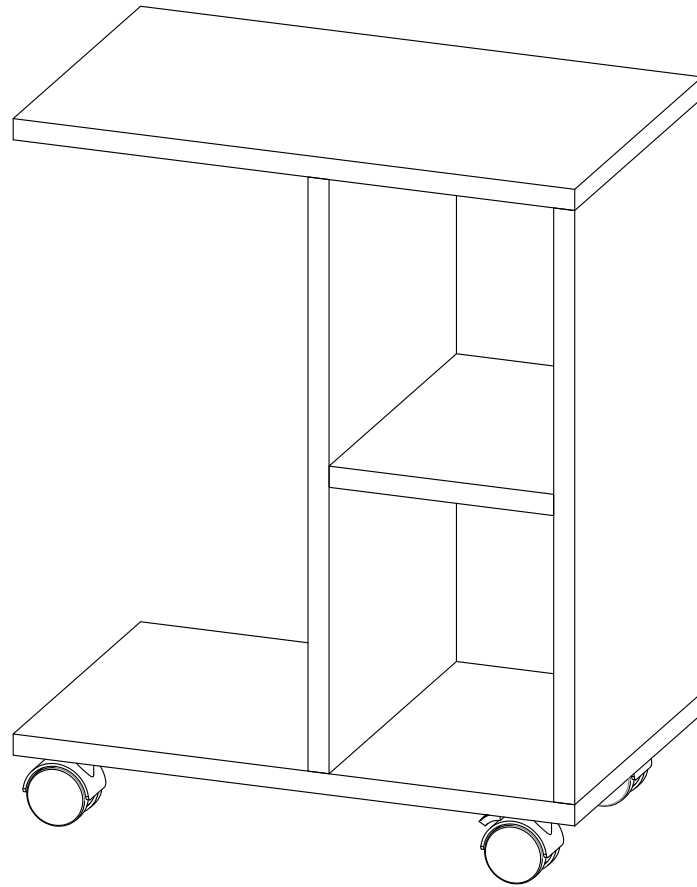
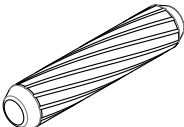
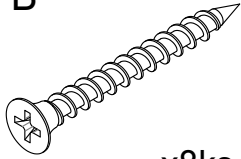
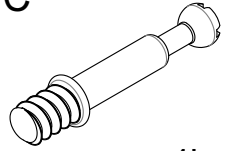
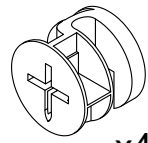

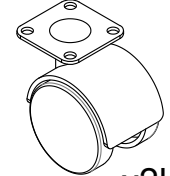
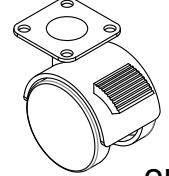


ABBAS NEW


TPK402450

Montážny návod




A  x12ks	B  x8ks	C  x4ks	D  x4ks
E  x16ks	F  x2ks	G  x2ks	H  x8ks


Krok 1

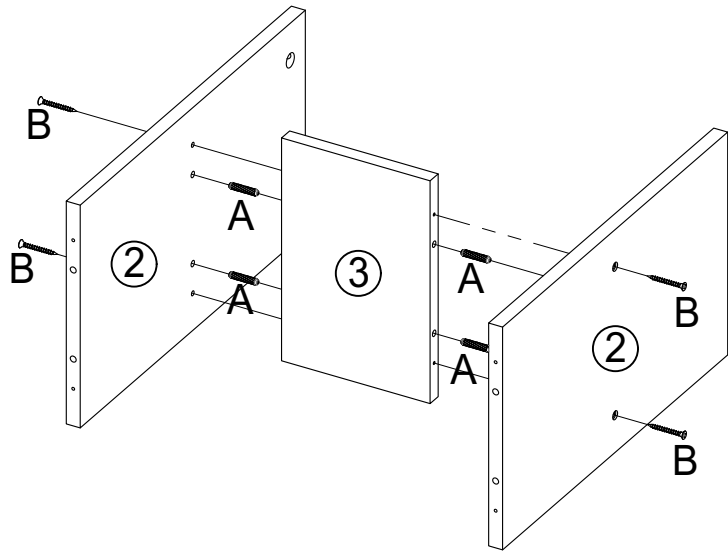


Krok 2

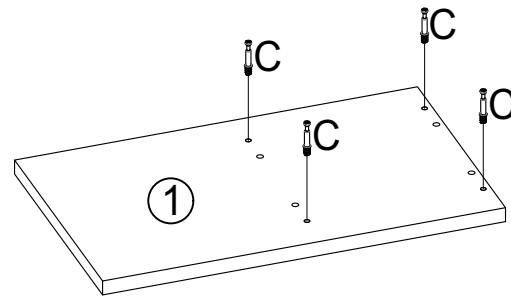


Krok 3

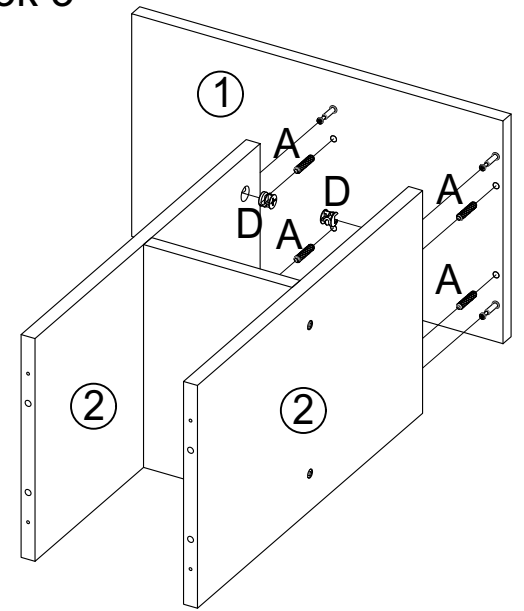

Krok 4

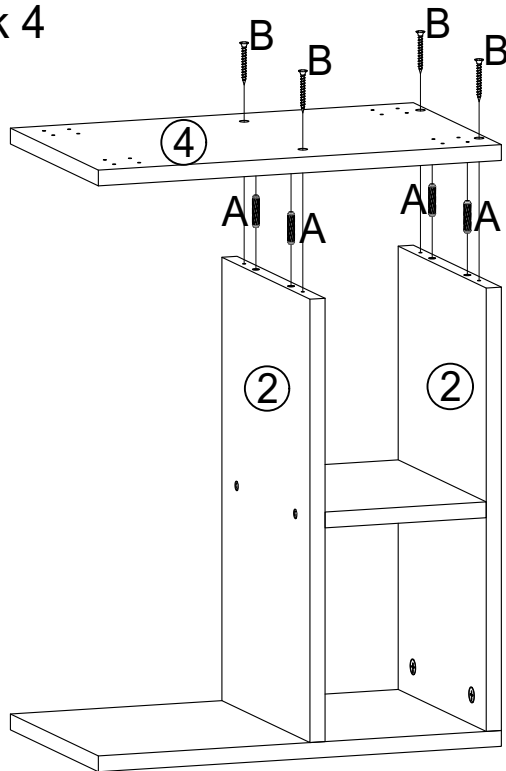

Krok 5

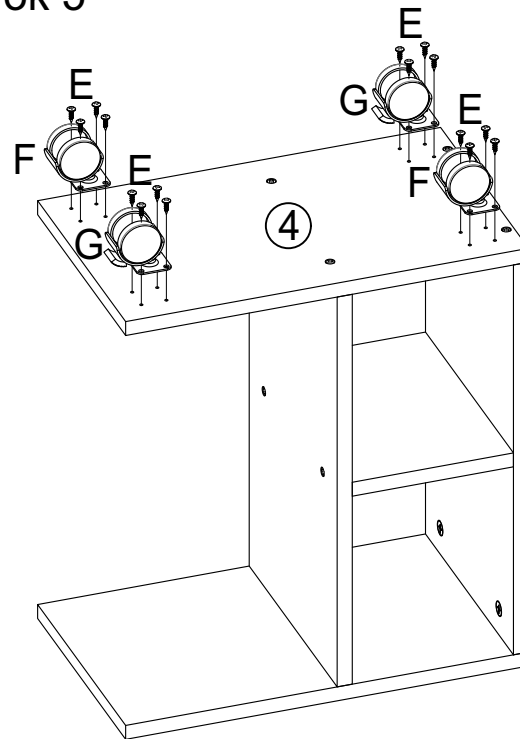

Krok 6

